



## Legenda


- 1) Computador direito
- 2) Antena do Transponder
- 3) Computador com chave
- 4) Relé principal
- 5) Caixa de fusíveis
- 6) Motor de arranque
- 7) Telerruptor de arranque
- 8) Bateria
- 9) Fusível do regulador
- 10) Regulador
- 11) Alternador
- 12) Piscas traseiros, lado direito
- 13) Farol traseiro
- 14) Iluminação da chapa de matrícula
- 15) Piscas traseiros, lado esquerdo
- 16) Depósito de combustível
- 17) Ligação para autodiagnóstico
- 18) Sensor de velocidade
- 19) Bobine do cilindro horizontal
- 20) Bobine do cilindro vertical
- 21) Vela do 1º cilindro horizontal
- 22) Vela do 1º cilindro vertical
- 23) Injector do cilindro horizontal
- 24) Injector do cilindro vertical
- 25) Potenciómetro da borboleta
- 26) Sensor de rotações/fase
- 27) Interruptor do cavalete lateral
- 28) Unidade electrónica
- 29) Relé de injeção
- 30) Interruptor do indicador de caixa em ponto morto
- 31) Interruptor de pressão do óleo
- 32) Interruptor traseiro de PARAGEM
- 33) Interruptor dianteiro de PARAGEM
- 34) Computador esquerdo
- 35) Sensor de temperatura/pressão do ar
- 36) Instrumentos (painel de instrumentos)
- 37) Piscas dianteiros, lado esquerdo
- 38) Buzina
- 39) Farol
- 40) Piscas dianteiros, lado direito
- 41) Sensor de temperatura do óleo, unidade electrónica
- 42) Sensor de temperatura do óleo, instrumento
- 43) Interruptor da embraiagem
- 44) Tomada de recarga da bateria


## Fusíveis

<b>Pos.</b>	<b>Componente</b>	<b>Val.</b>
<b>5 (1-9)</b>	Geral	30 A
<b>5 (2-10)</b>	Bomba de combustível, injectores, Bobines	20 A
<b>5 (3-11)</b>	Key sense	10 A
<b>5 (4-12)</b>	Alimentação da unidade electrónica	3 A
<b>5 (5-13)</b>	Passing	7,5 A
<b>5 (6-14)</b>	Farolins, painel de instrumentos, máximos/médios	15 A
<b>5 (7-15)</b>	Luz de paragem, buzina	10 A
<b>5 (8-16)</b>	Tomada de recarga da bateria	5 A

## Legenda das cores dos cabos


- B** Azul
- W** Branco
- V** Violeta
- Bk** Preto
- Y** Amarelo
- R** Vermelho
- Lb** Azul claro
- Gr** Cinzento
- G** Verde
- Bn** Castanho
- O** Laranja
- P** Rosa

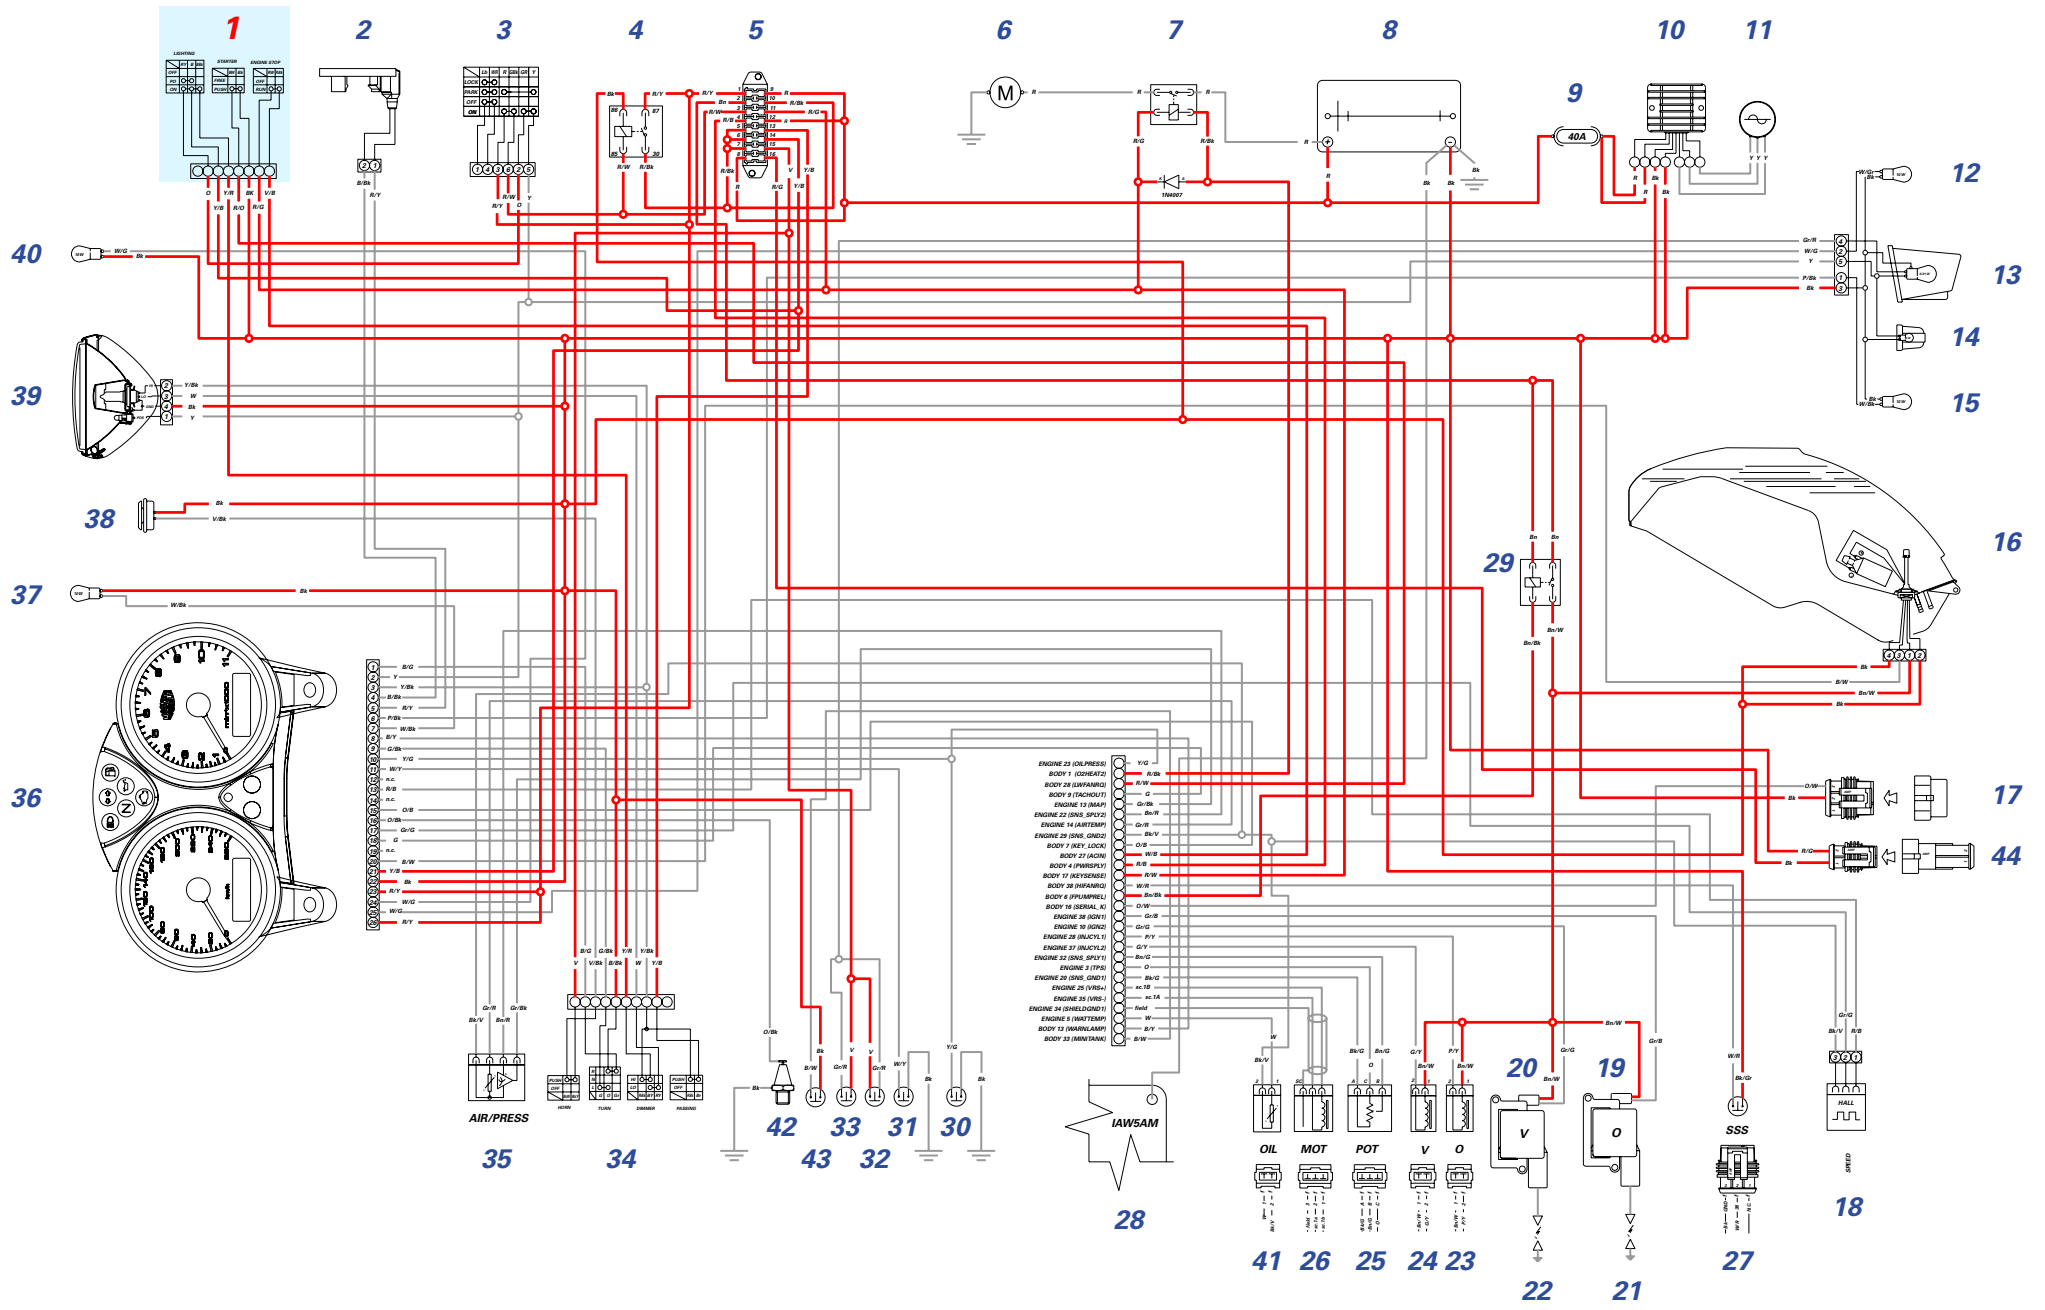

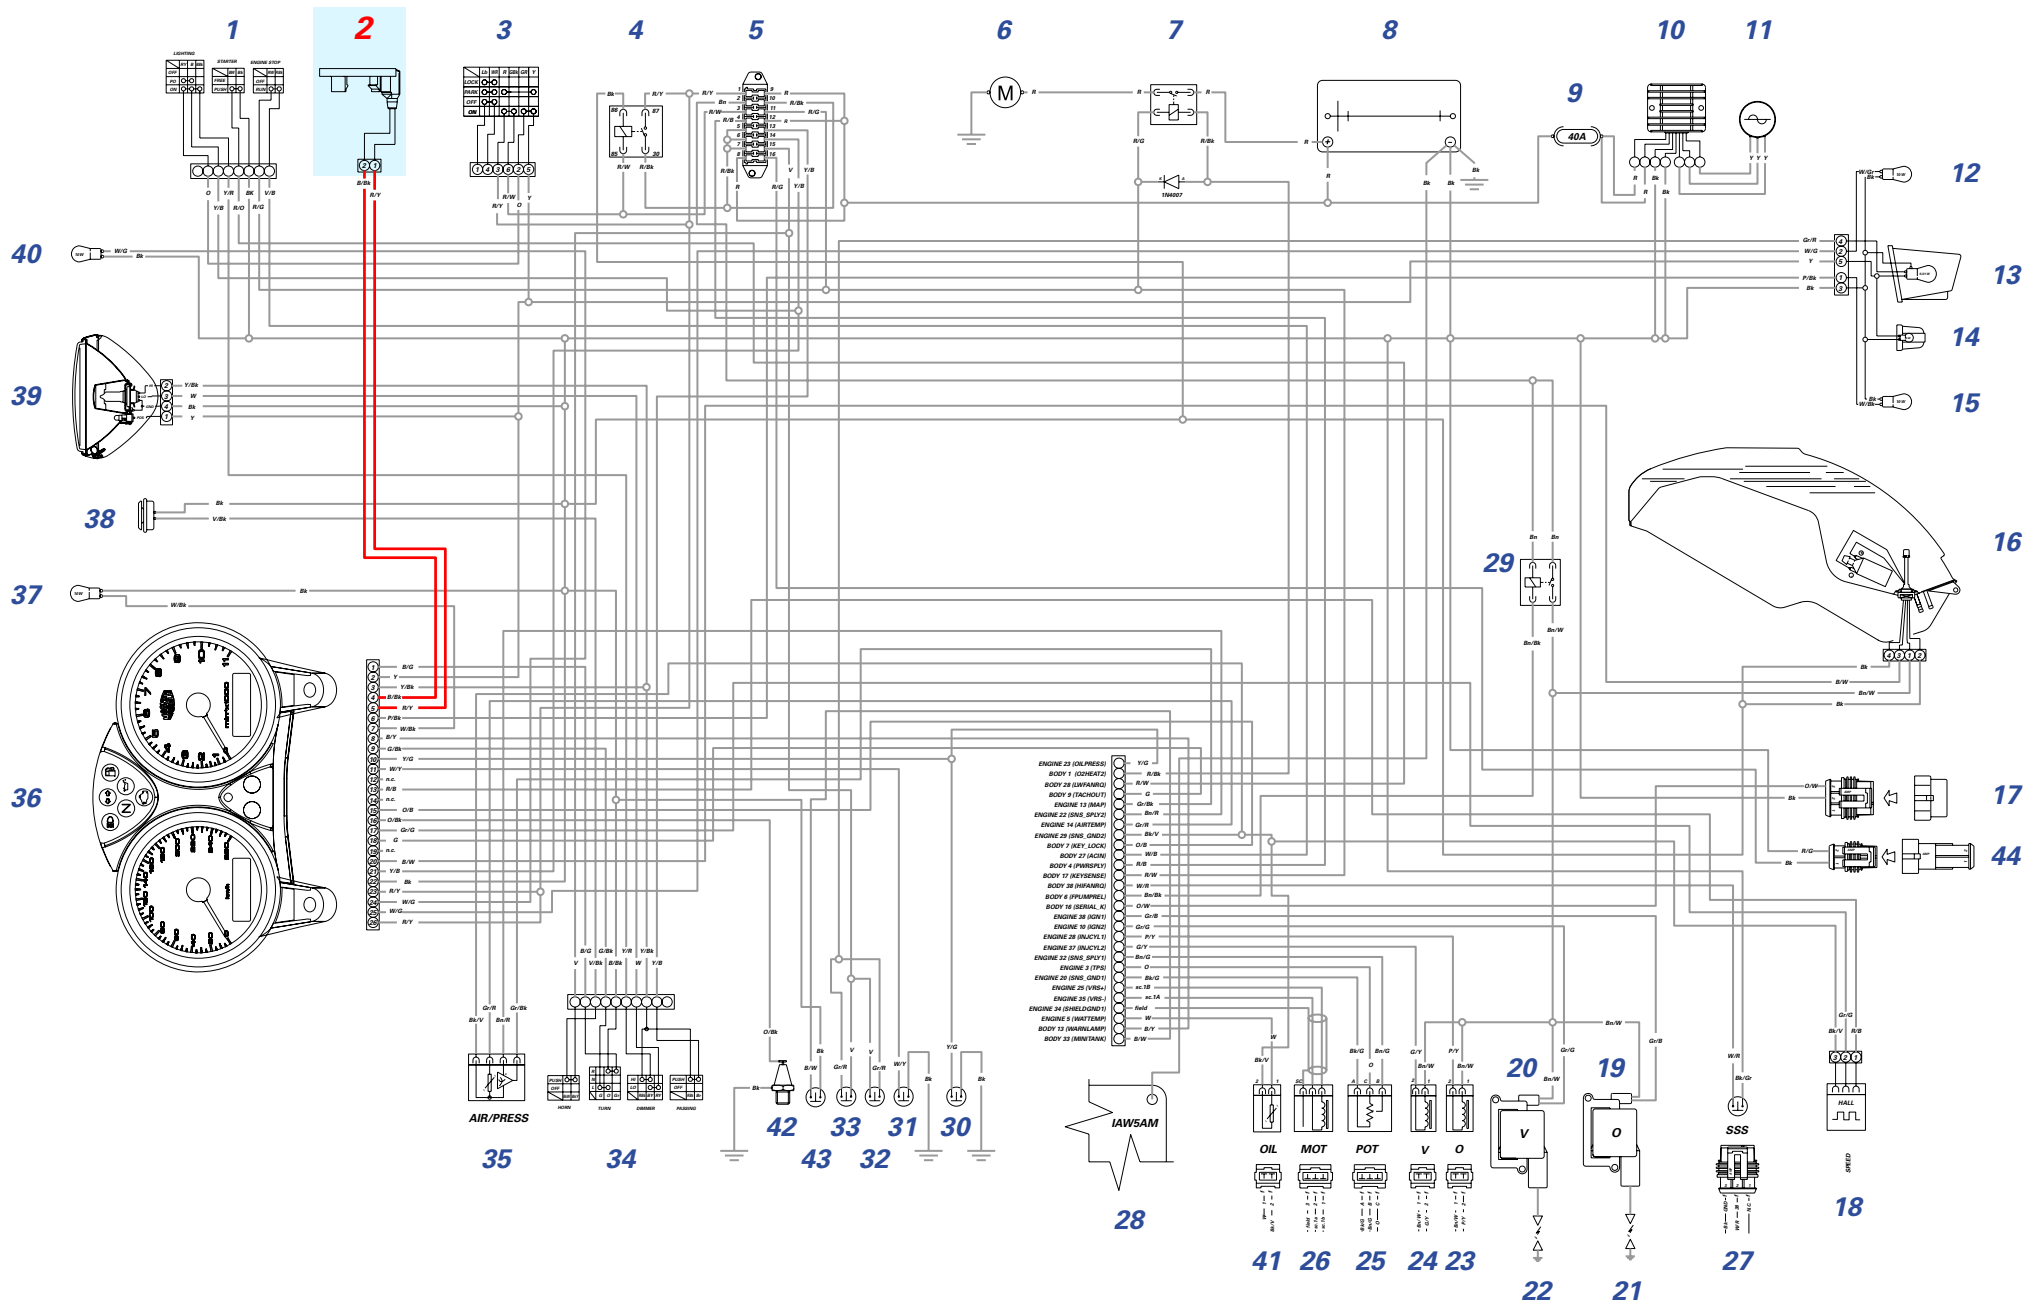





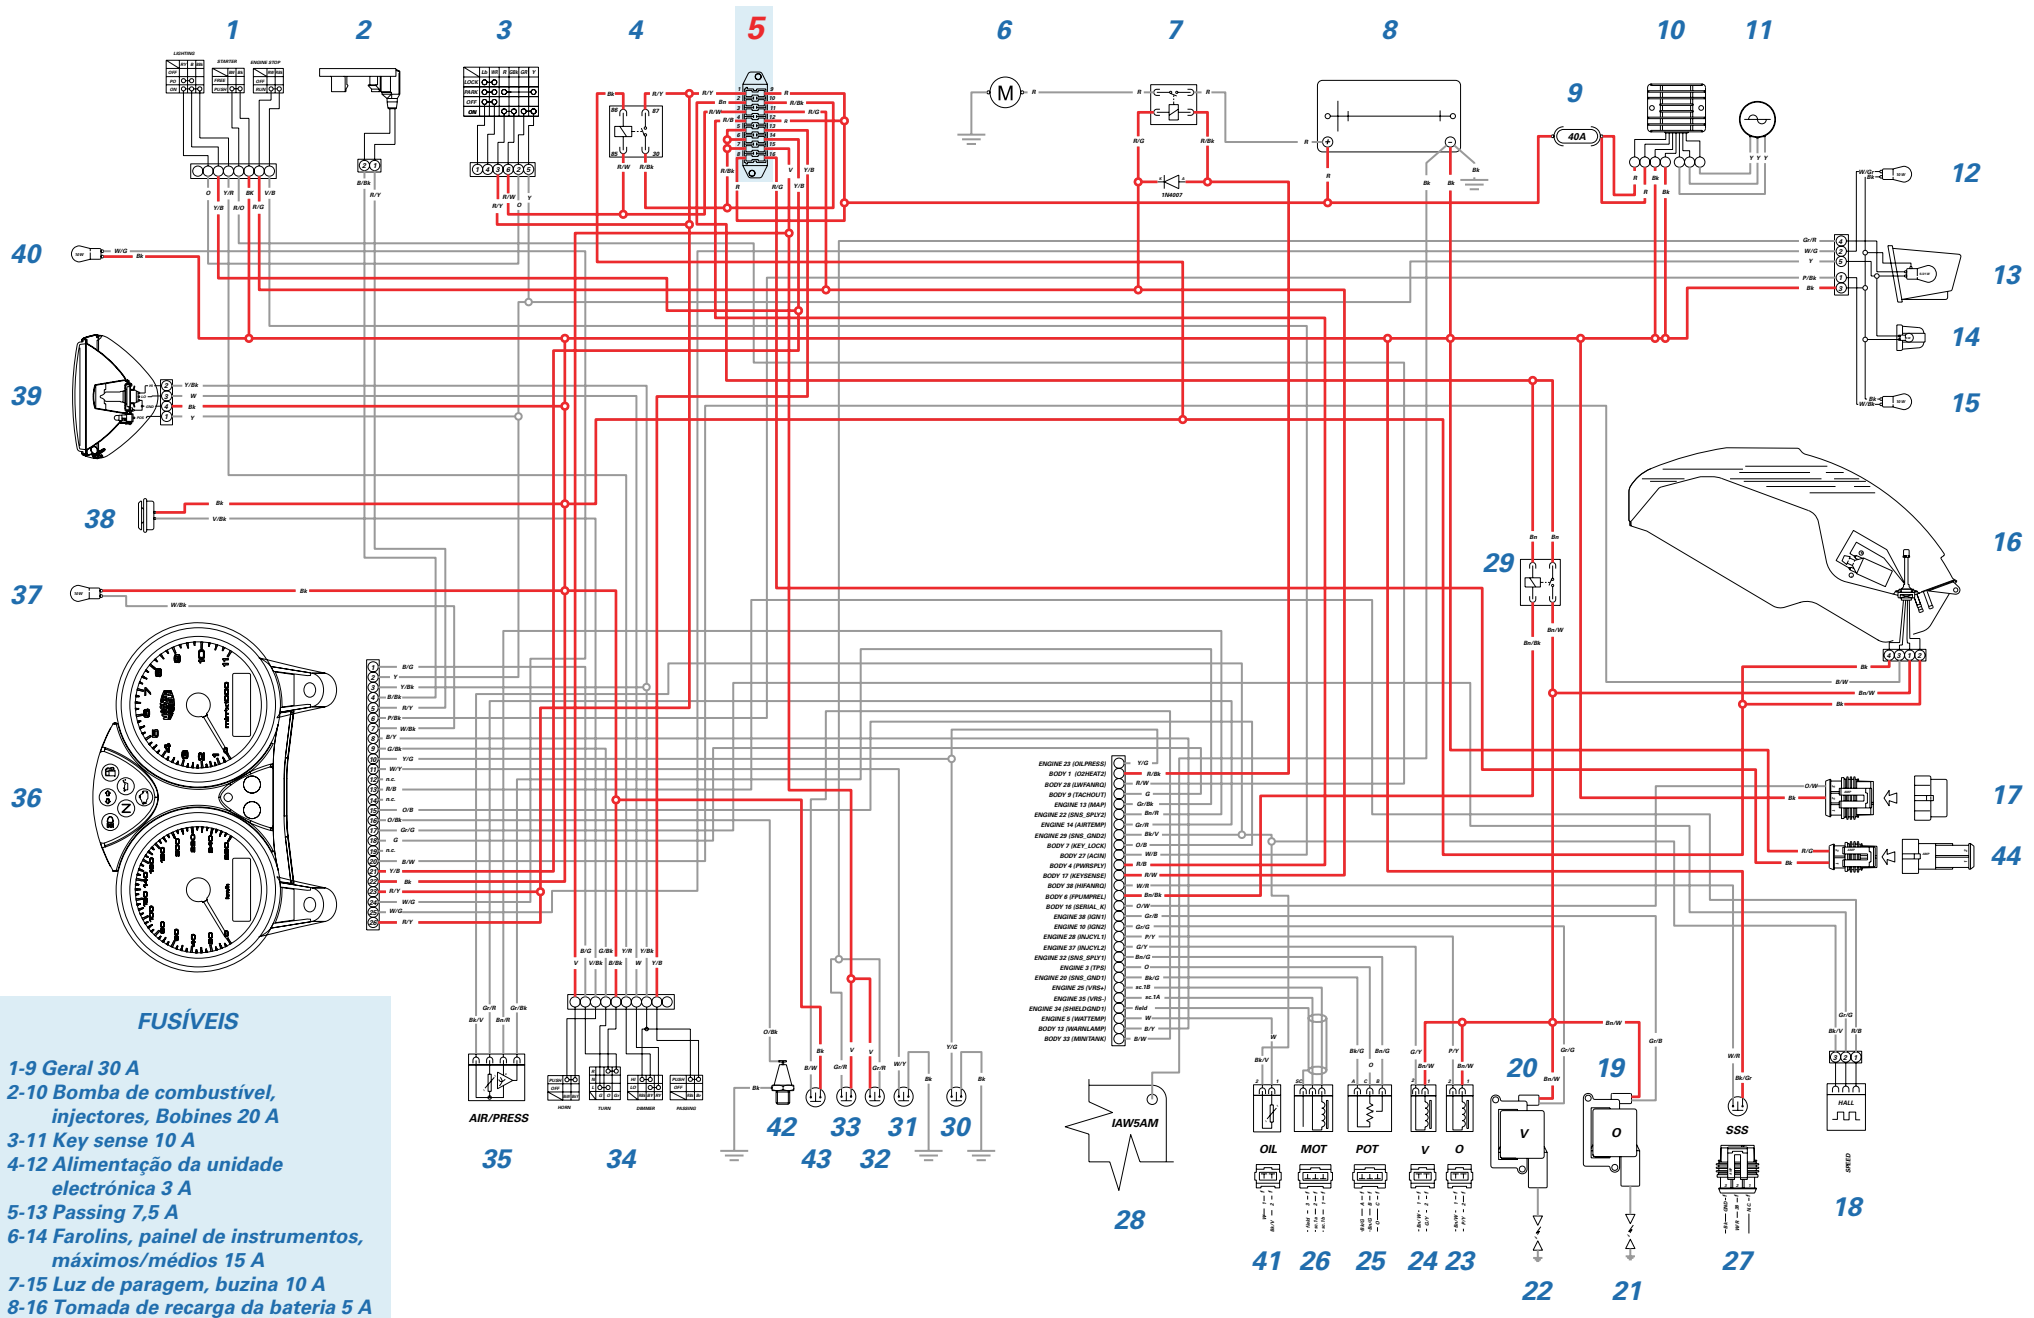

**FUSÍVEIS**

- 1-9 Geral 30 A
- 2-10 Bomba de combustível, injectores, Bobinas 20 A
- 3-11 Key sense 10 A
- 4-12 Alimentação da unidade electrónica 3 A
- 5-13 Passing 7,5 A
- 6-14 Farolins, painel de instrumentos, máximos/médios 15 A
- 7-15 Luz de paragem, buzina 10 A
- 8-16 Tomada de recarga da bateria 5 A

- Y B/G
- Y/B
- P/GR
- B/V
- B/W
- G/GR
- W/Y
- A/C
- B/B
- A/C
- O/S
- O/V
- A/C
- G
- B/W
- B
- B/Y
- W/G
- B/Y

AIR/PRESS

35

34

42

43

31

30

- ENGINE 23 (OLPRESS)
- BODY 1 (DOOR/SEAT)
- BODY 23 (SUNSHINE)
- BODY 5 (TRACHOUT)
- ENGINE 13 (MAP)
- ENGINE 21 (SUNG. SPRAY)
- ENGINE 14 (WATERTEMP)
- ENGINE 29 (SUNG. SENS)
- BODY 2 (KEY LACK)
- BODY 27 (ACID)
- BODY 4 (PRESSURE)
- BODY 17 (REVERSE)
- BODY 28 (SHIMMER)
- BODY 6 (SUNSHINE)
- BODY 18 (SERIAL AL)
- ENGINE 38 (HORN)
- ENGINE 16 (SUNG)
- ENGINE 28 (INACTYL)
- ENGINE 27 (INACTYL)
- ENGINE 21 (SUNG. SPRAY)
- ENGINE 3 (TPS)
- ENGINE 20 (SUNG. SENS)
- ENGINE 28 (VIR)
- ENGINE 29 (VIR)
- ENGINE 35 (WATERTEMP)
- BODY 13 (WATERLAMP)
- BODY 22 (SHIMMER)

28

41

26

25

24

23

22

21

18

12

13


14


15


16


17

44



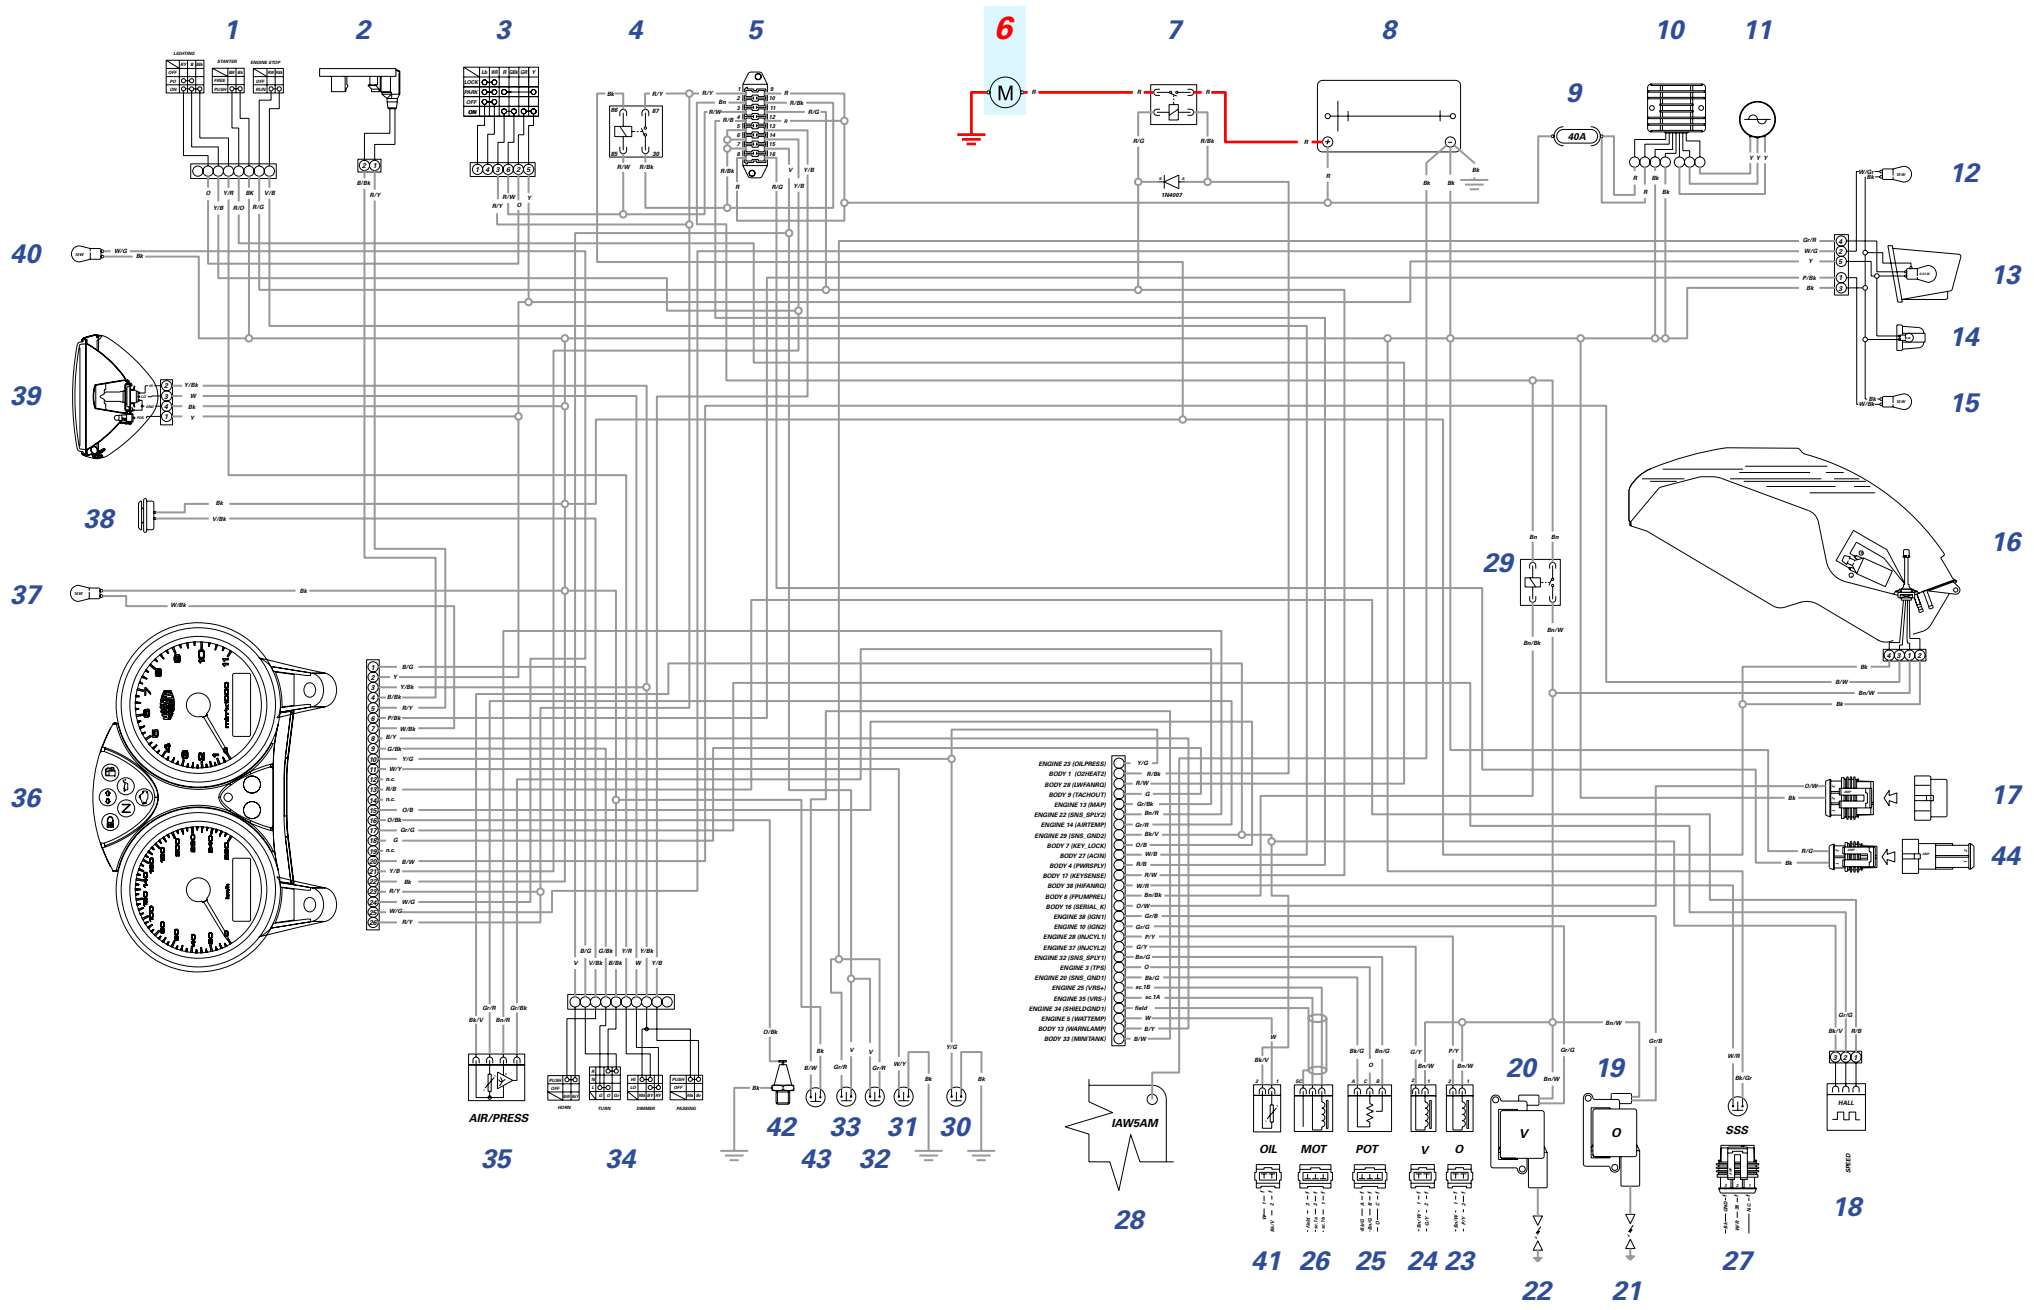


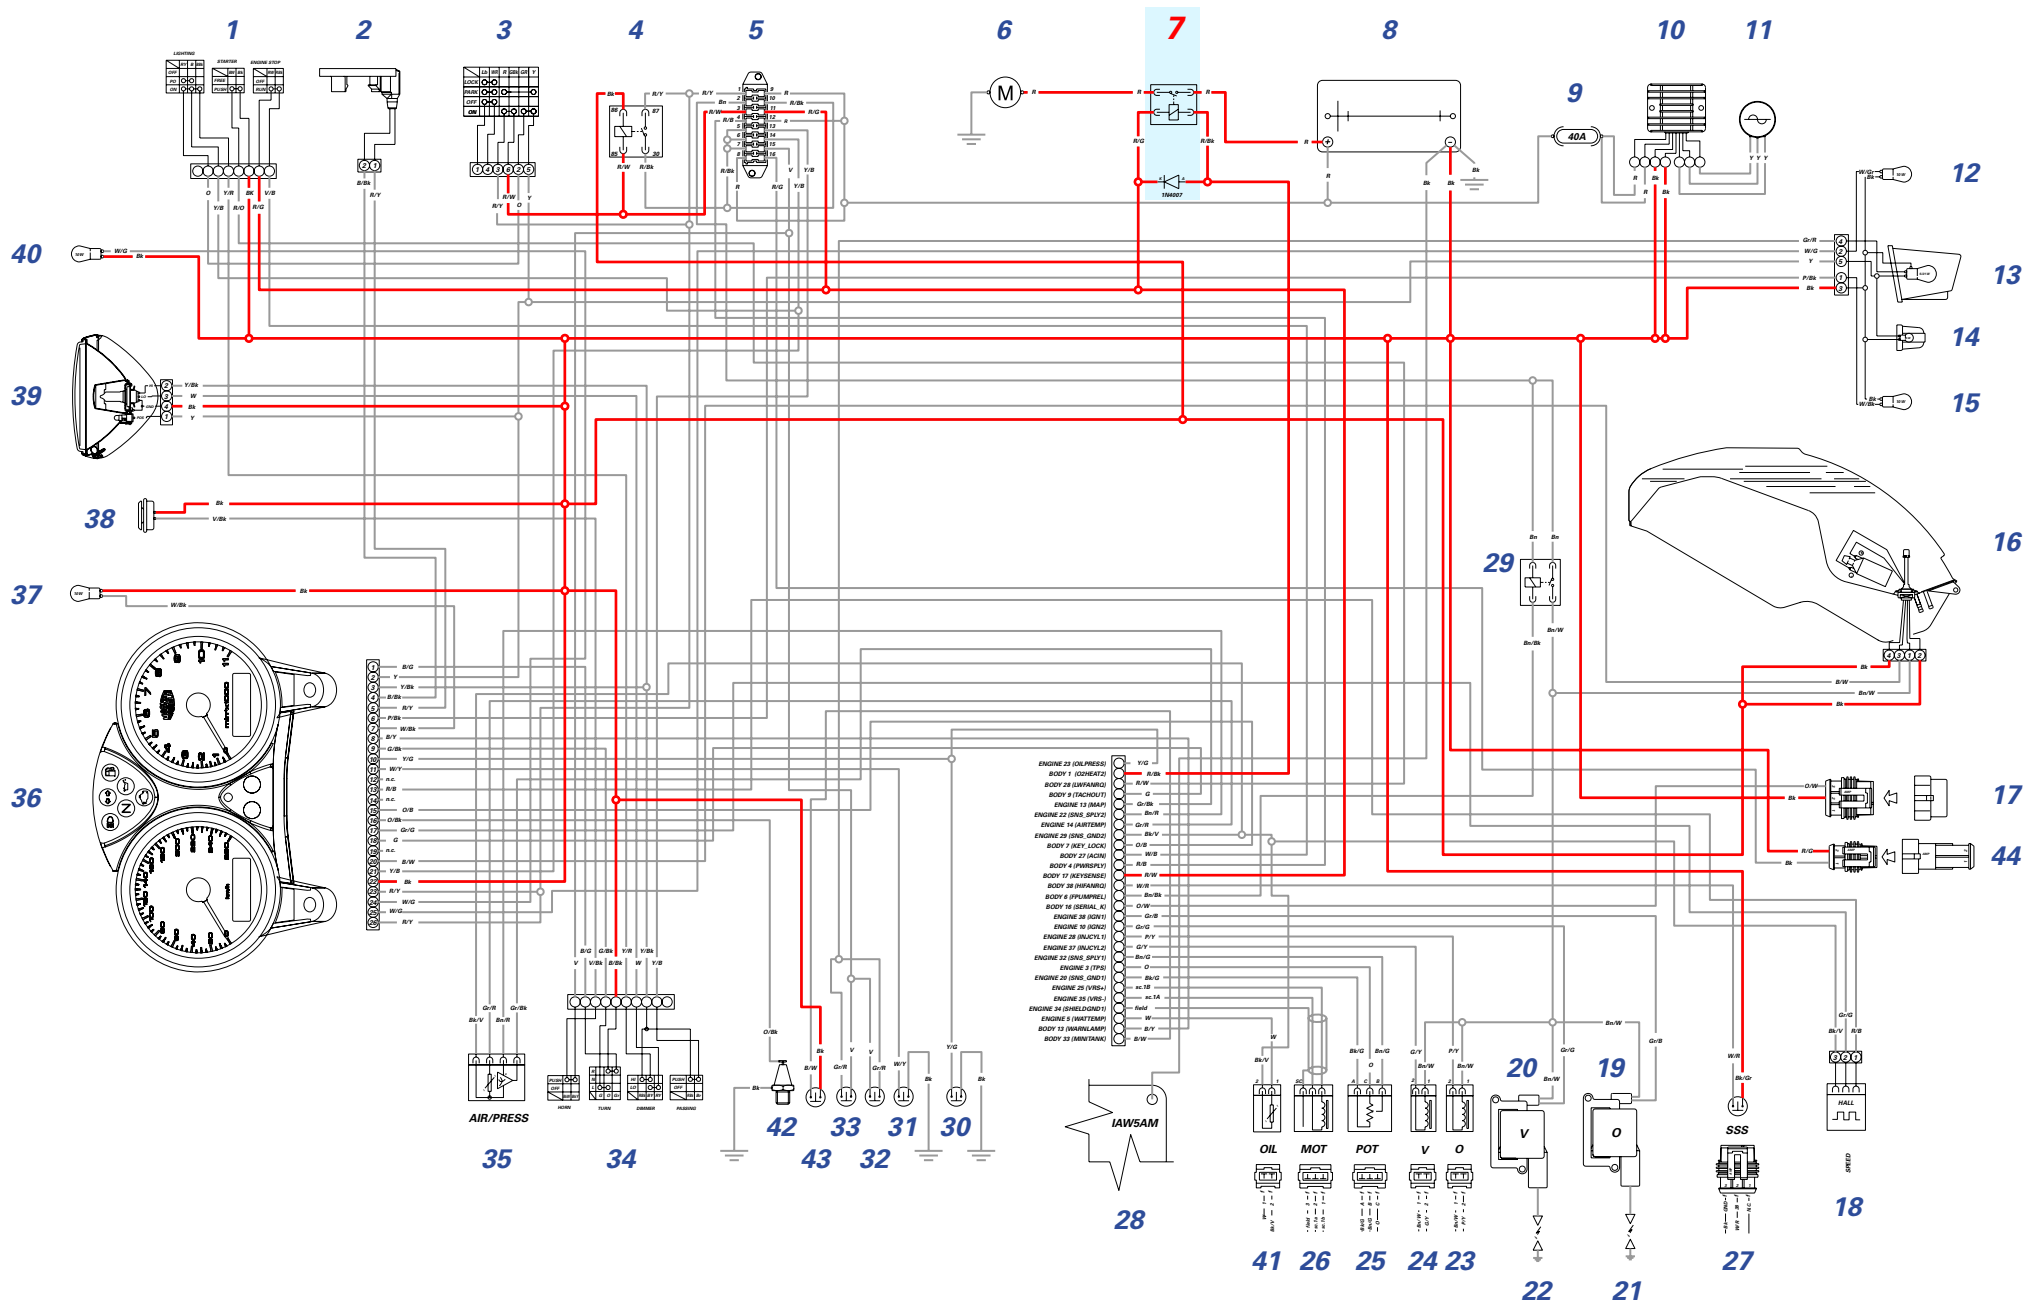


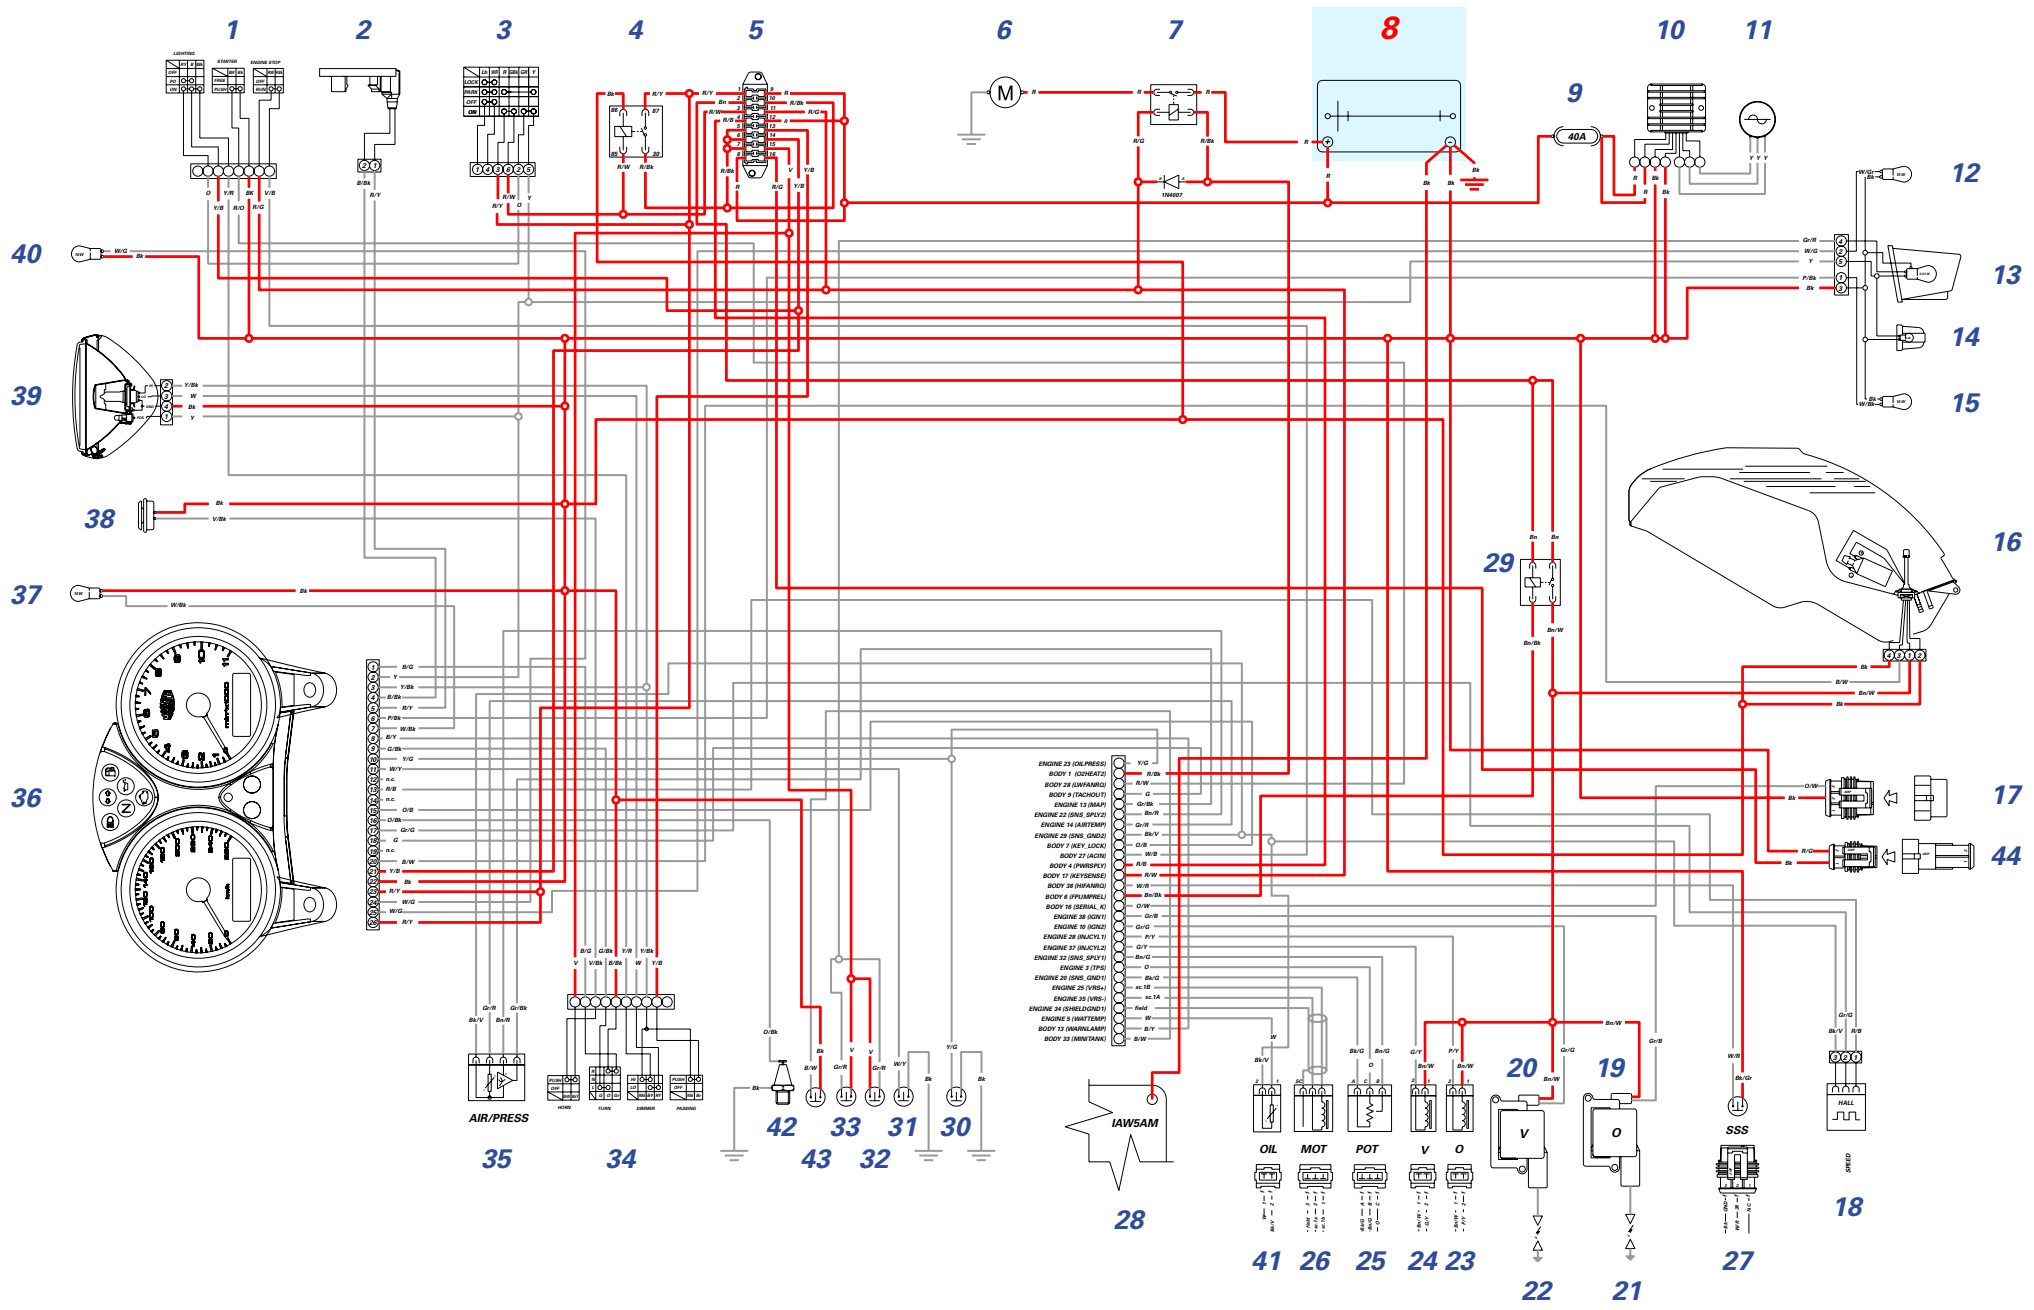


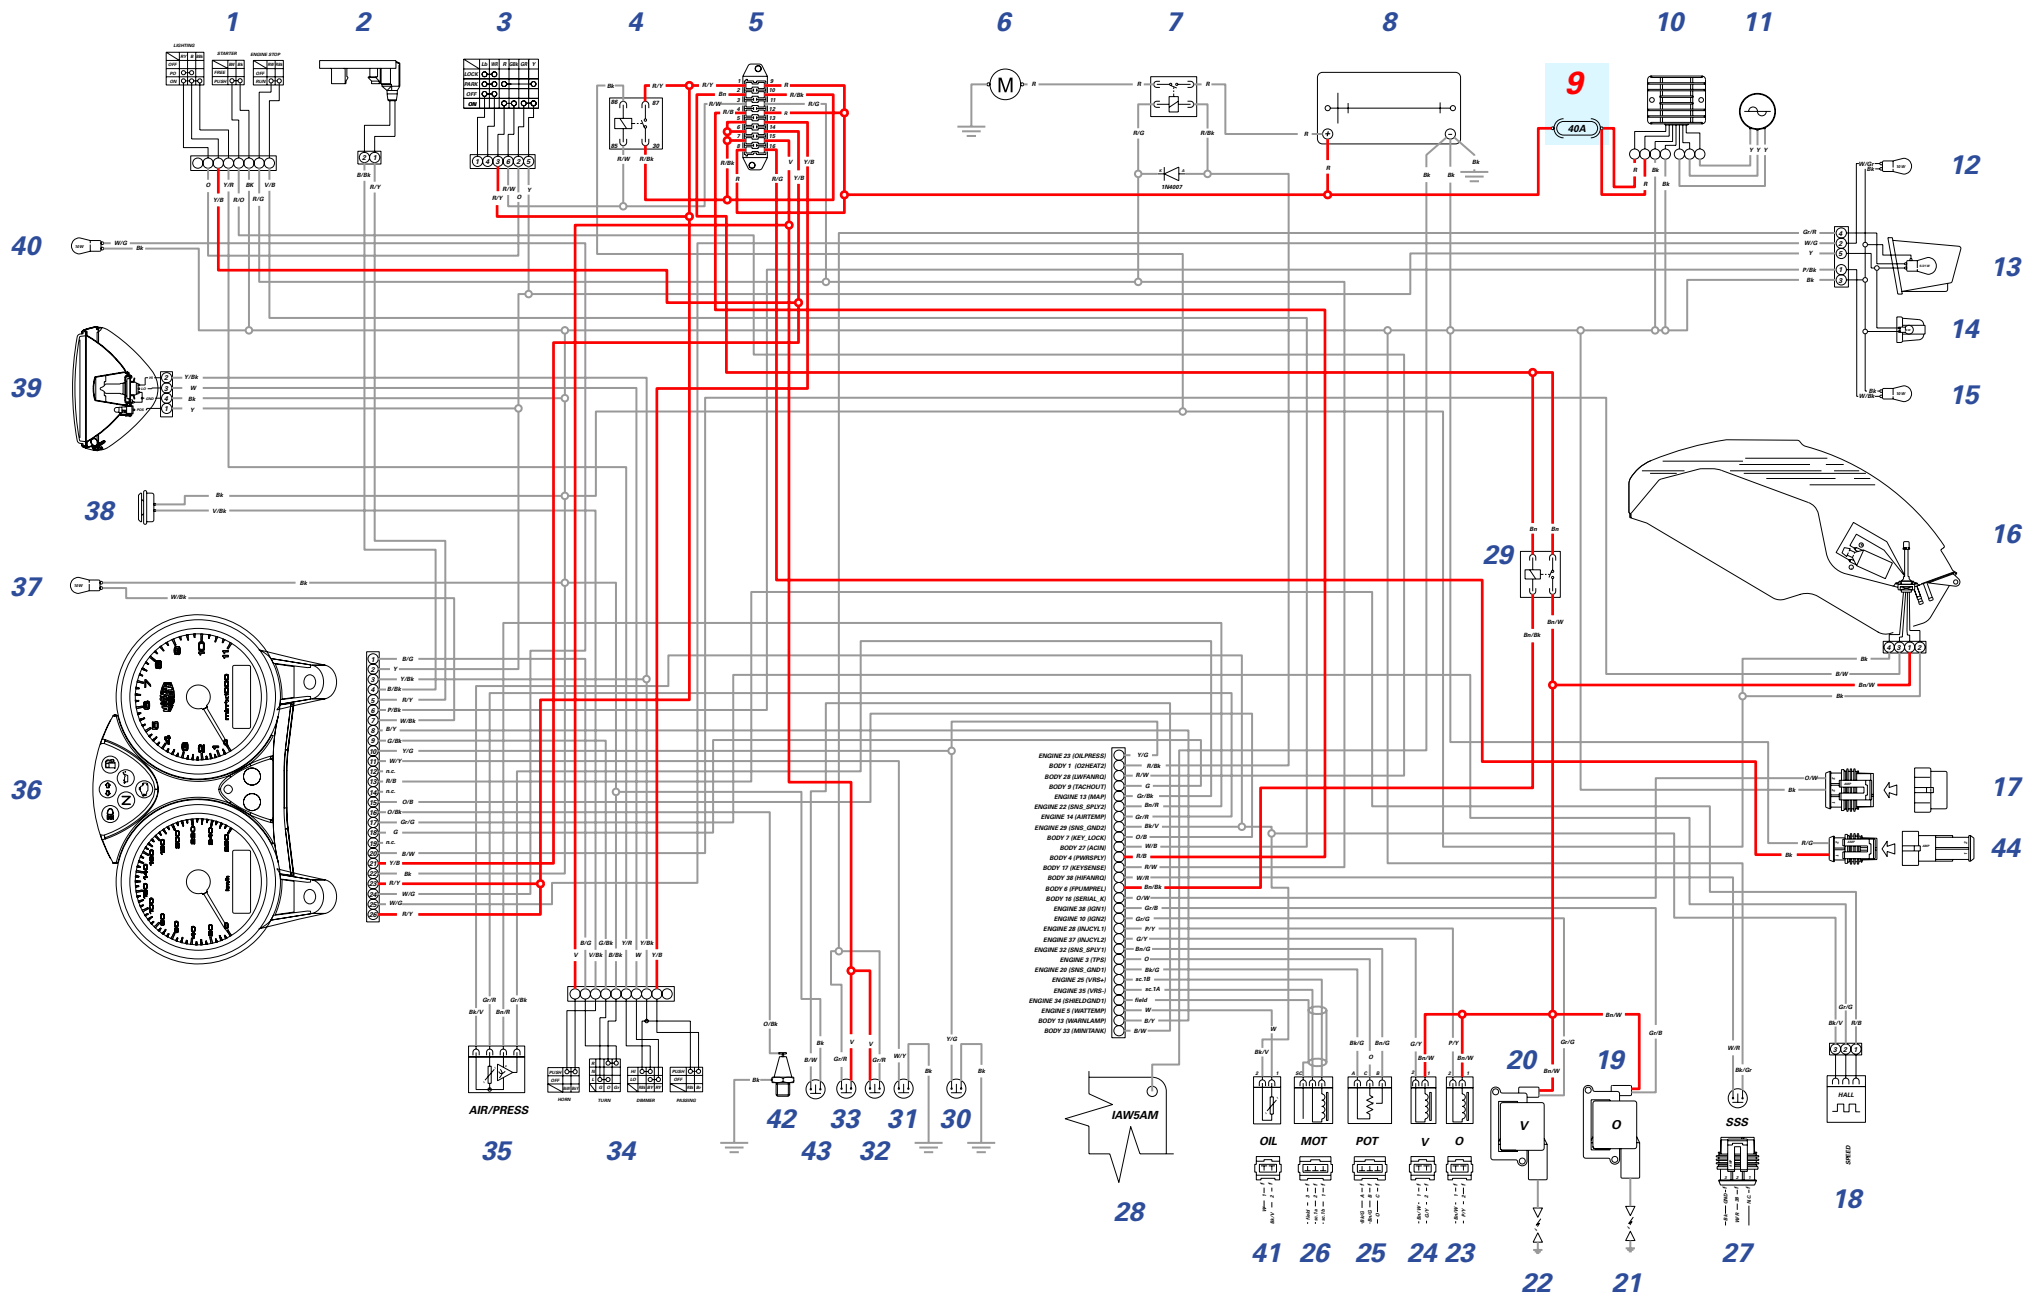

- ENGINE 23 (OILPRESS)
- BODY 1 (DOORHEATZ)
- BODY 23 (SUNWARMING)
- BODY 3 (TRACHOUIS)
- ENGINE 13 (JAMM)
- ENGINE 21 (SUNG. SPRAY)
- ENGINE 14 (AIRTEMP)
- ENGINE 39 (SUNG. SENS)
- BODY 2 (KEY LOCK)
- BODY 27 (ACDM)
- BODY 4 (PUMPDISC)
- BODY 17 (REVERSE)
- BODY 26 (INSTRUMENT)
- BODY 4 (SUNWARMING)
- BODY 18 (SERIAL AL)
- ENGINE 38 (HORN)
- ENGINE 18 (HORN)
- ENGINE 28 (INACTYL)
- ENGINE 27 (INACTYL)
- ENGINE 21 (SUNG. SPRAY)
- ENGINE 3 (TPR)
- ENGINE 20 (SUNG. SENS)
- ENGINE 25 (VRS)
- ENGINE 35 (VRS)
- ENGINE 35 (WATERTEMP)
- BODY 13 (INSTRUMENT)
- BODY 13 (INSTRUMENT)

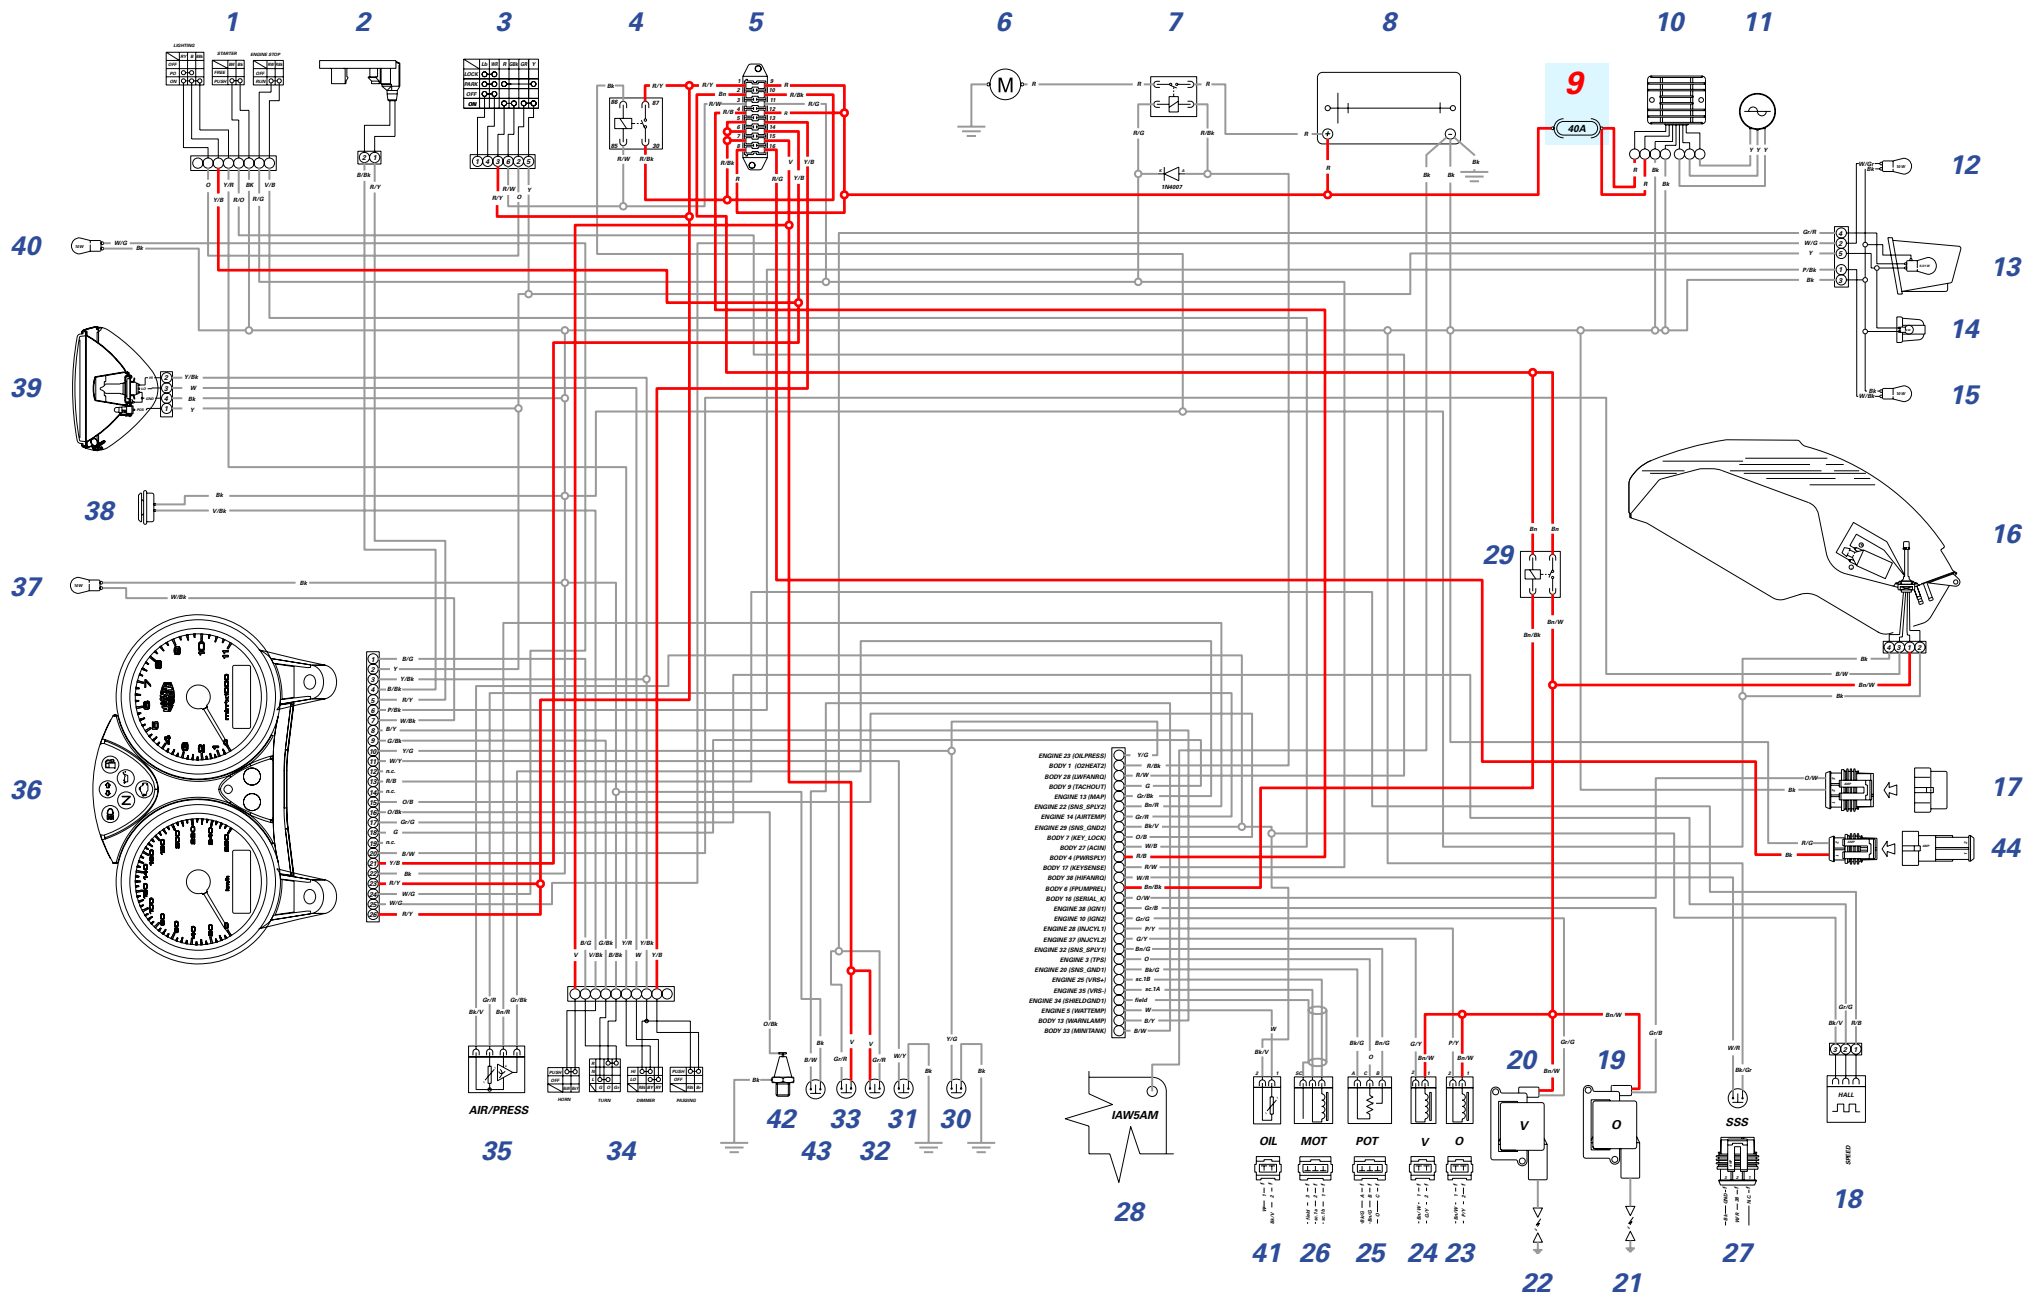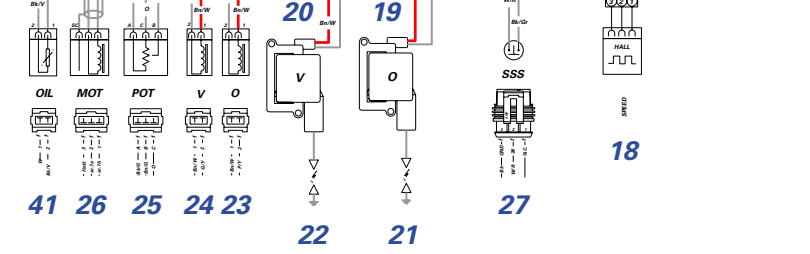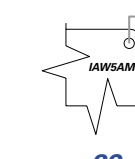

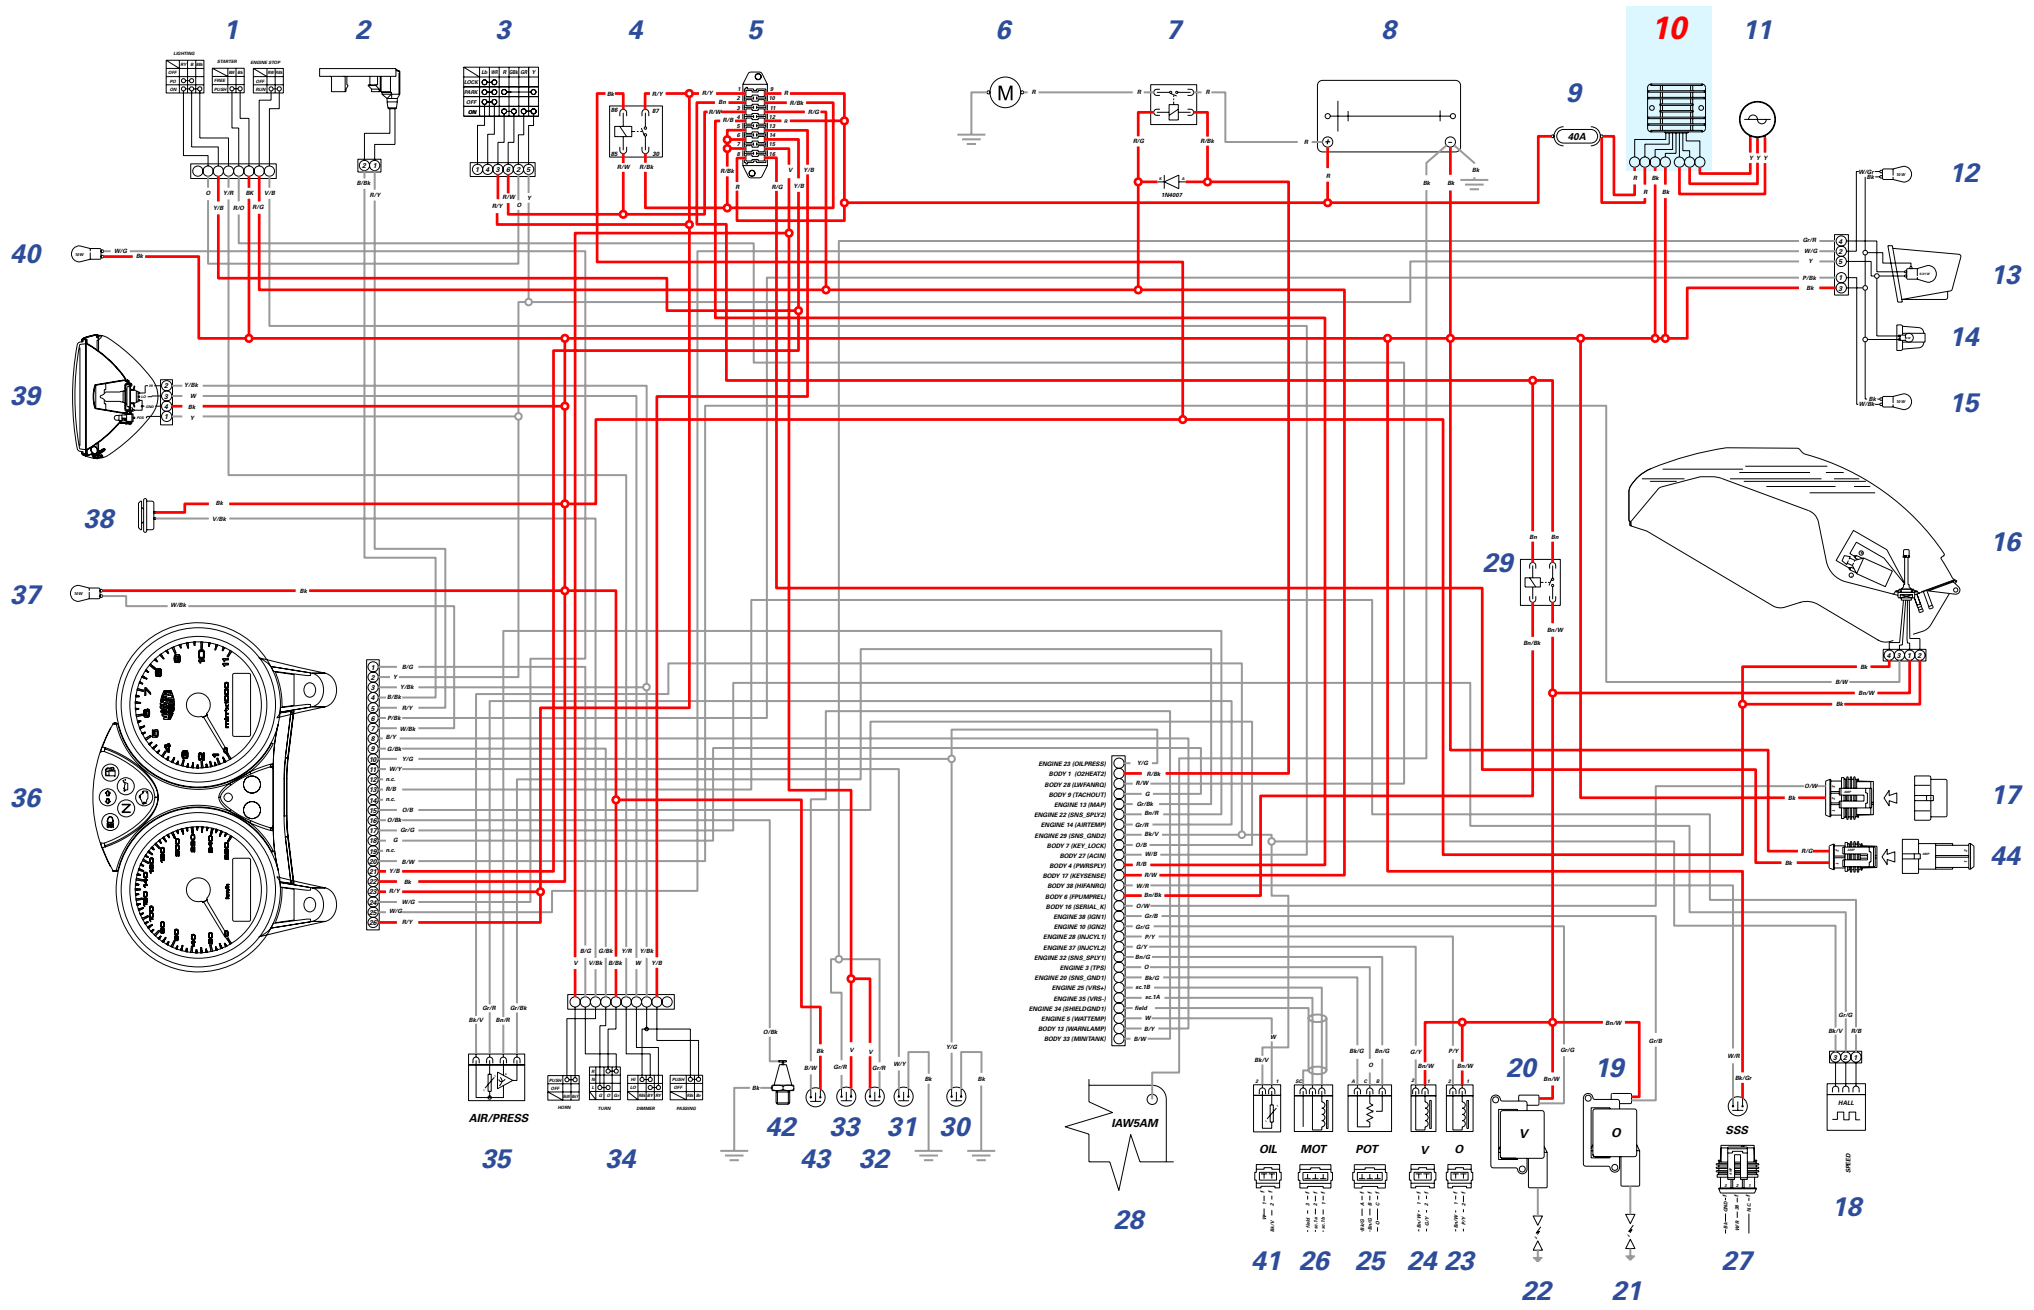


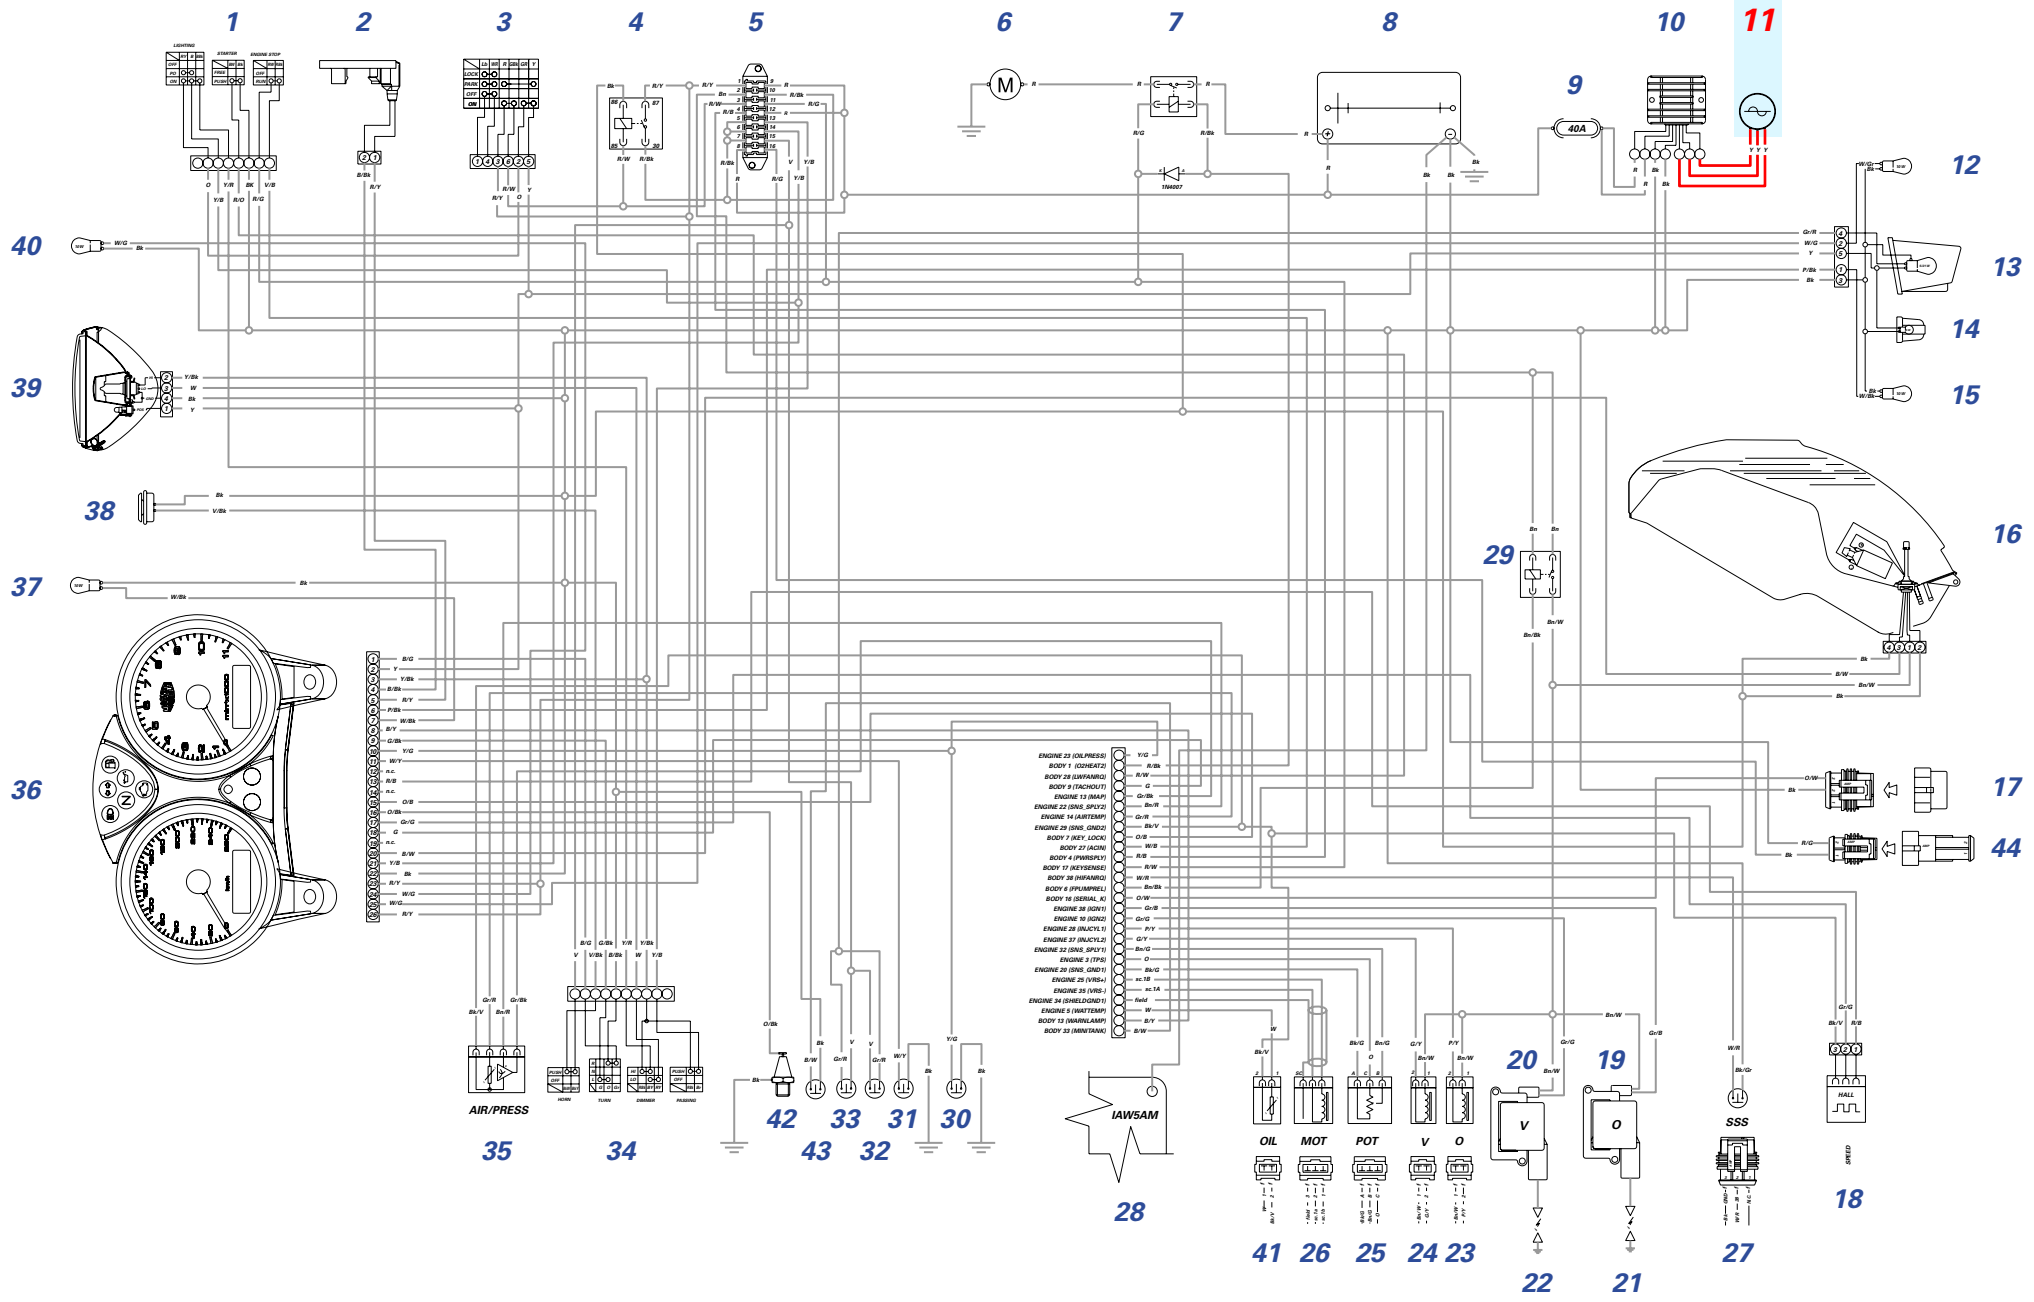










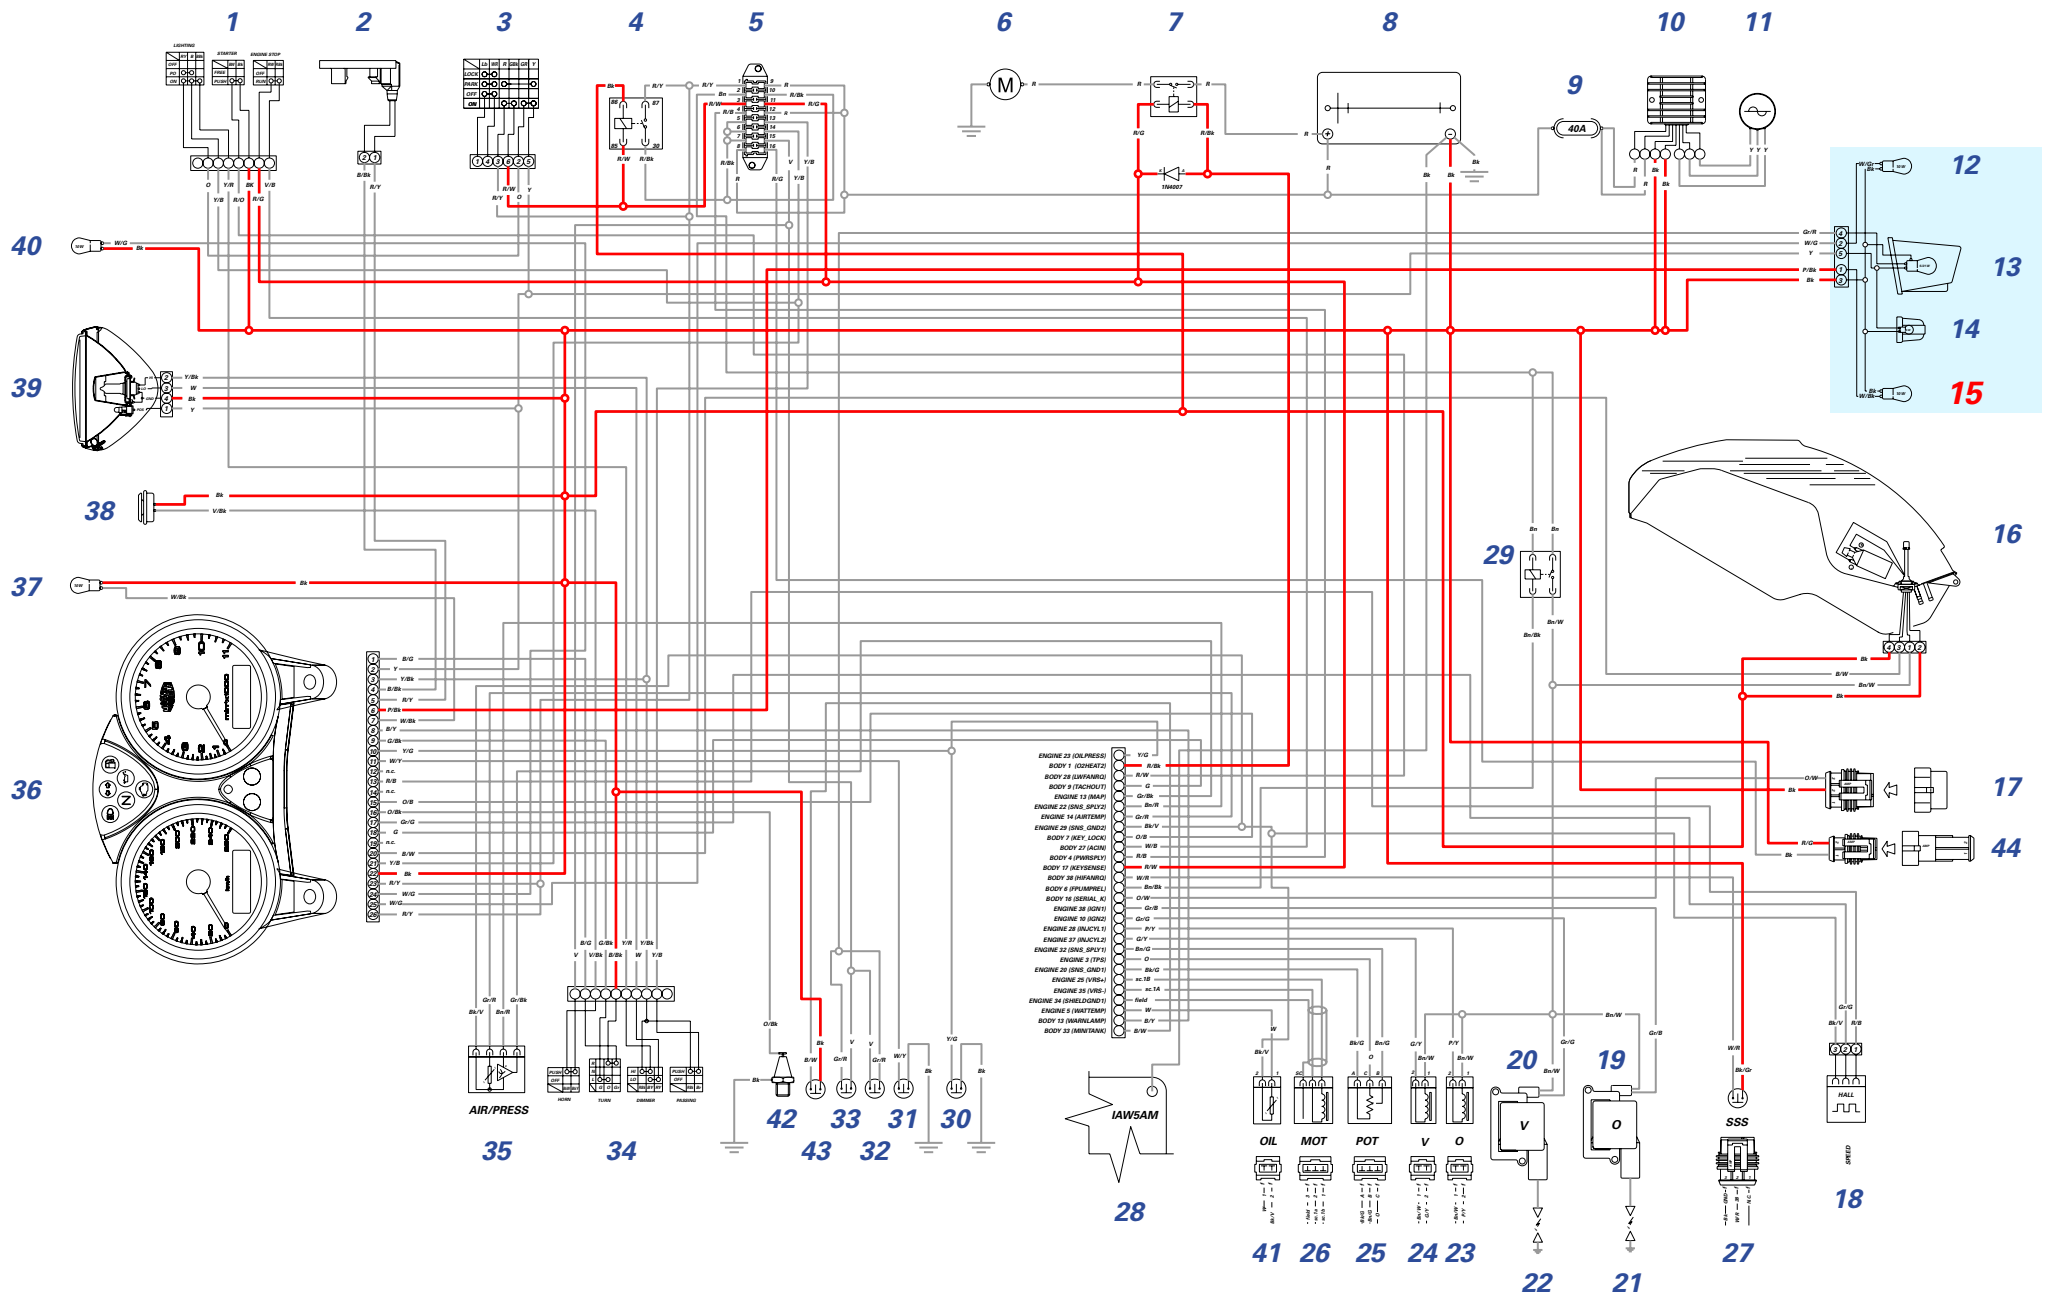




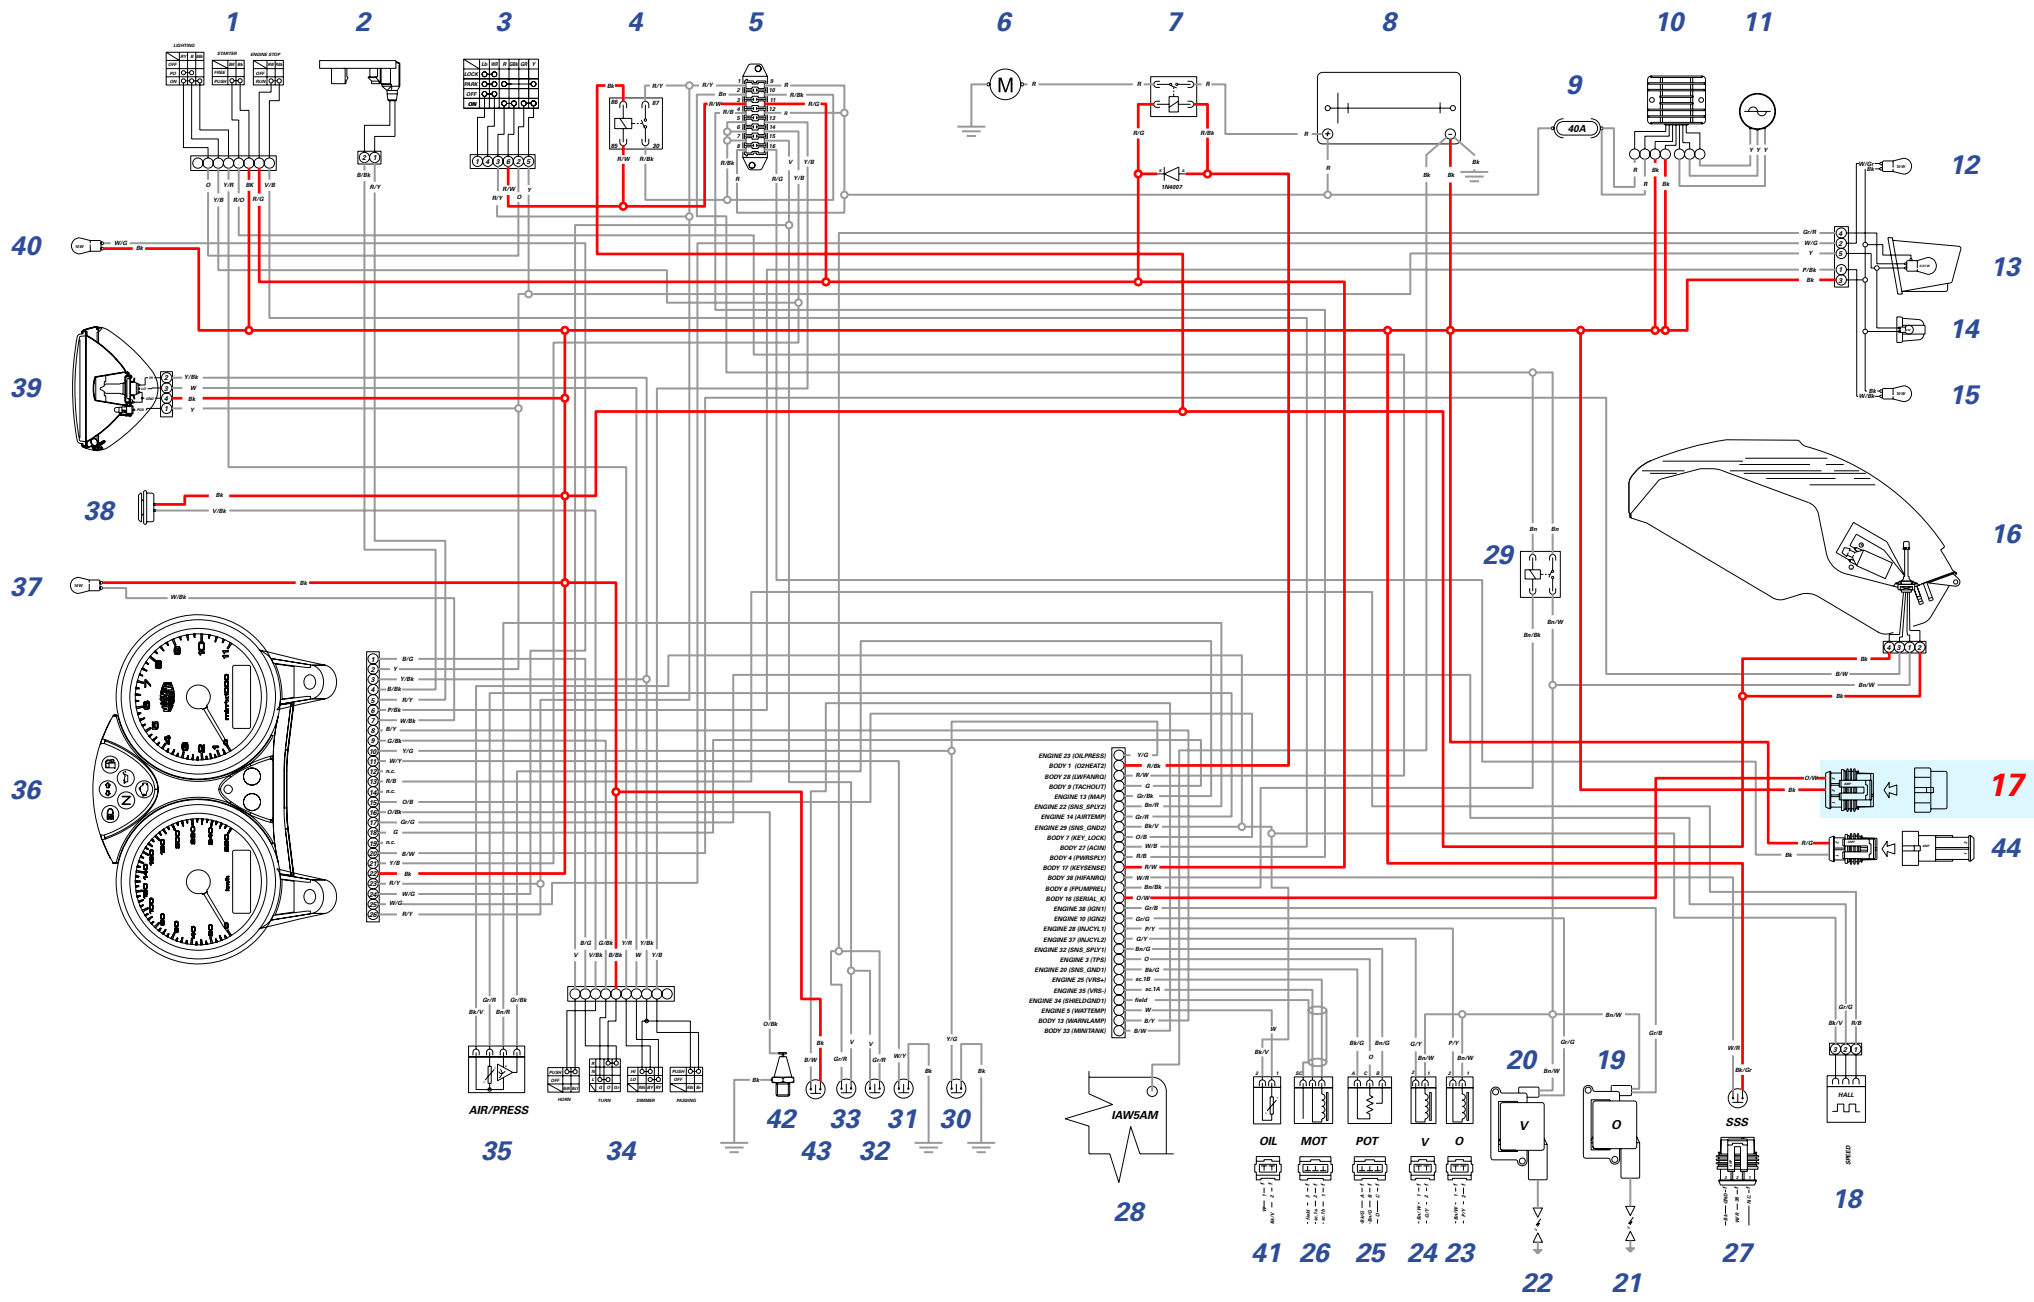


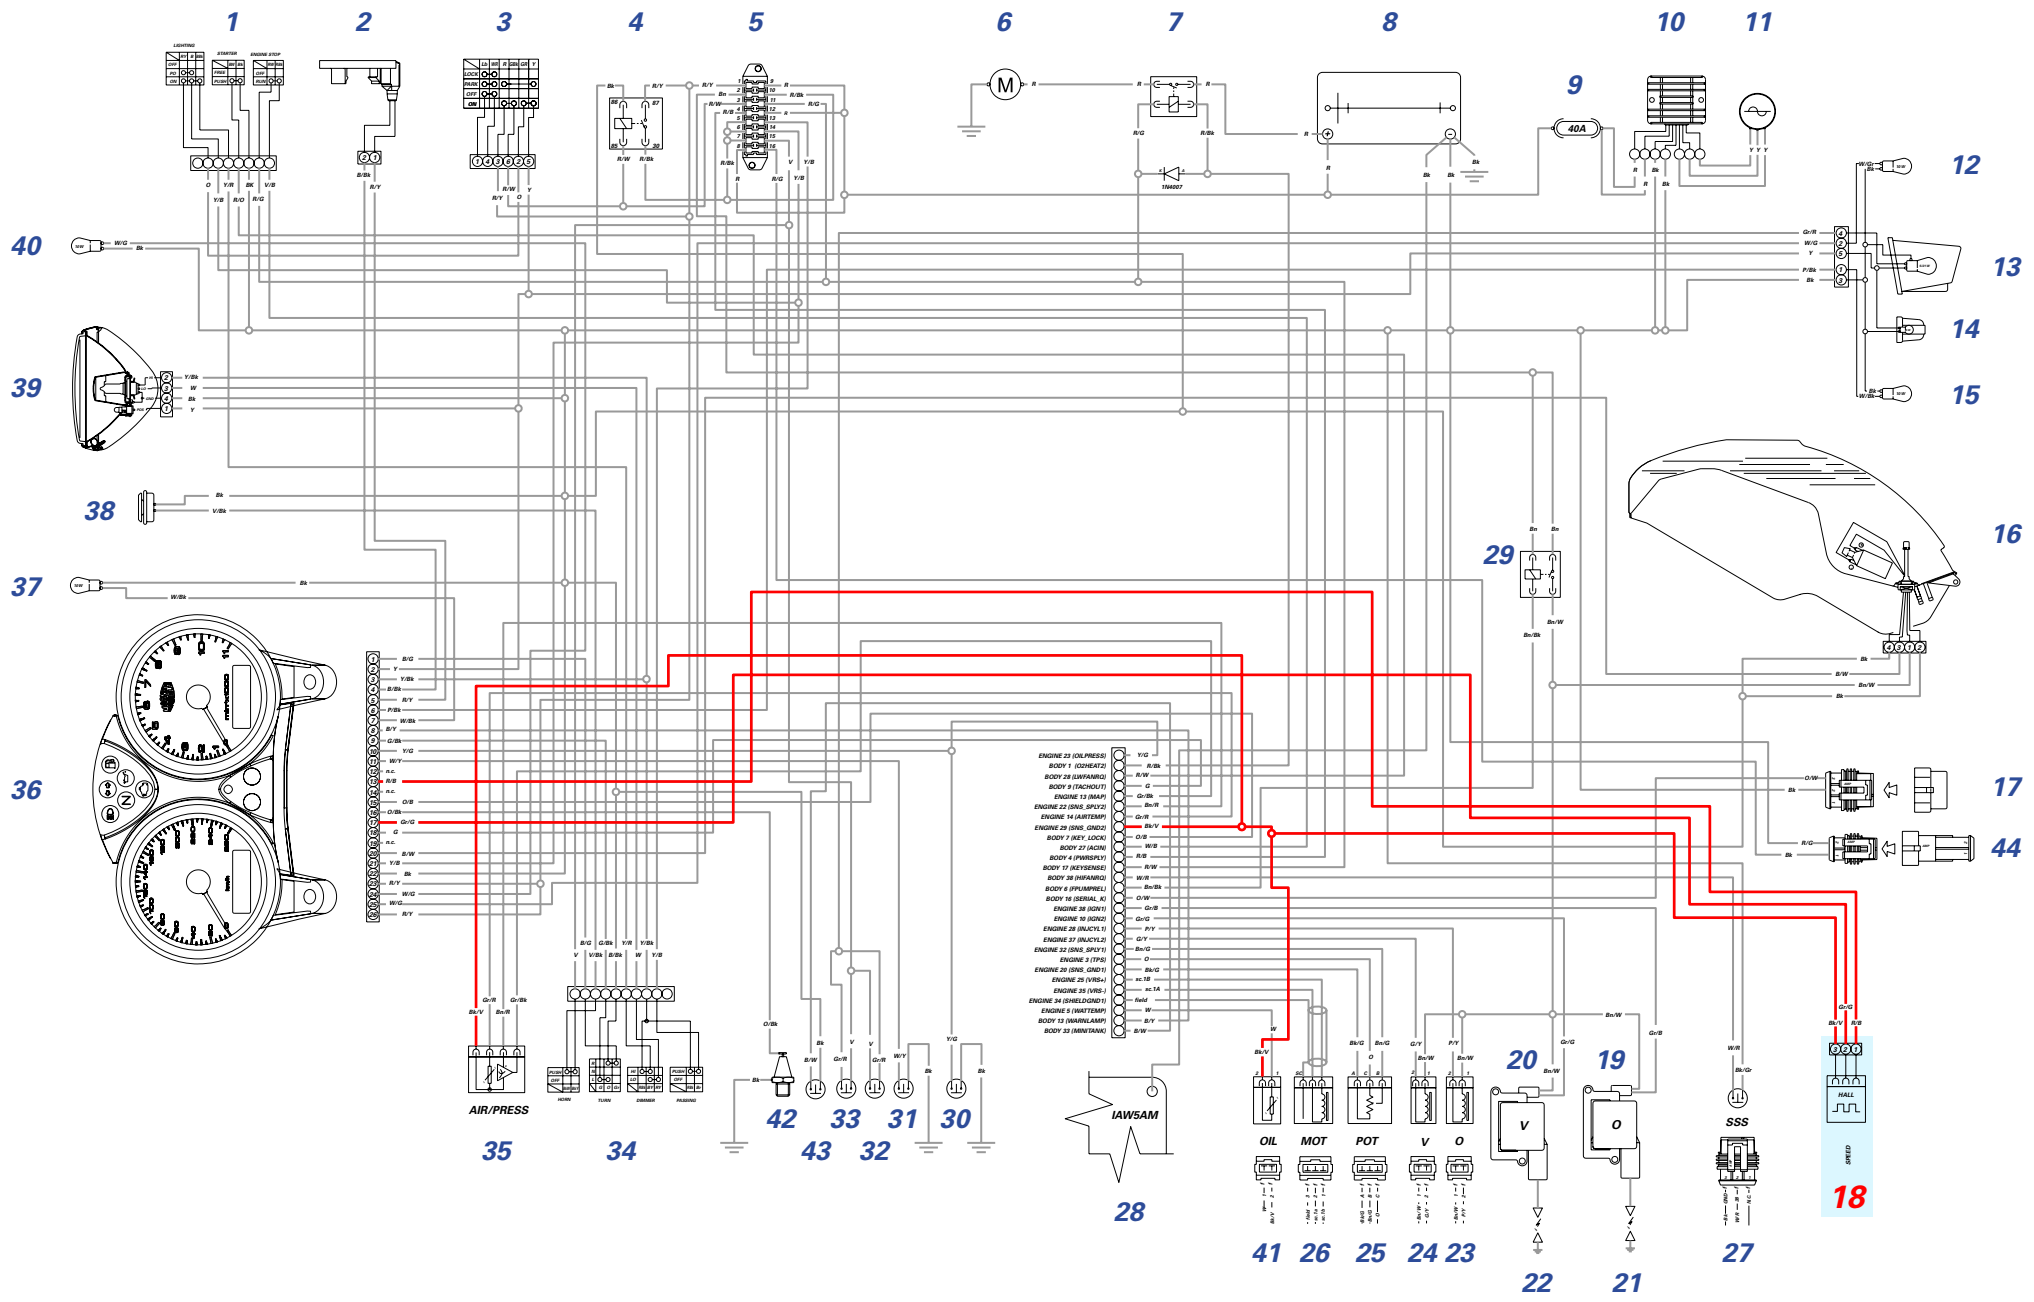


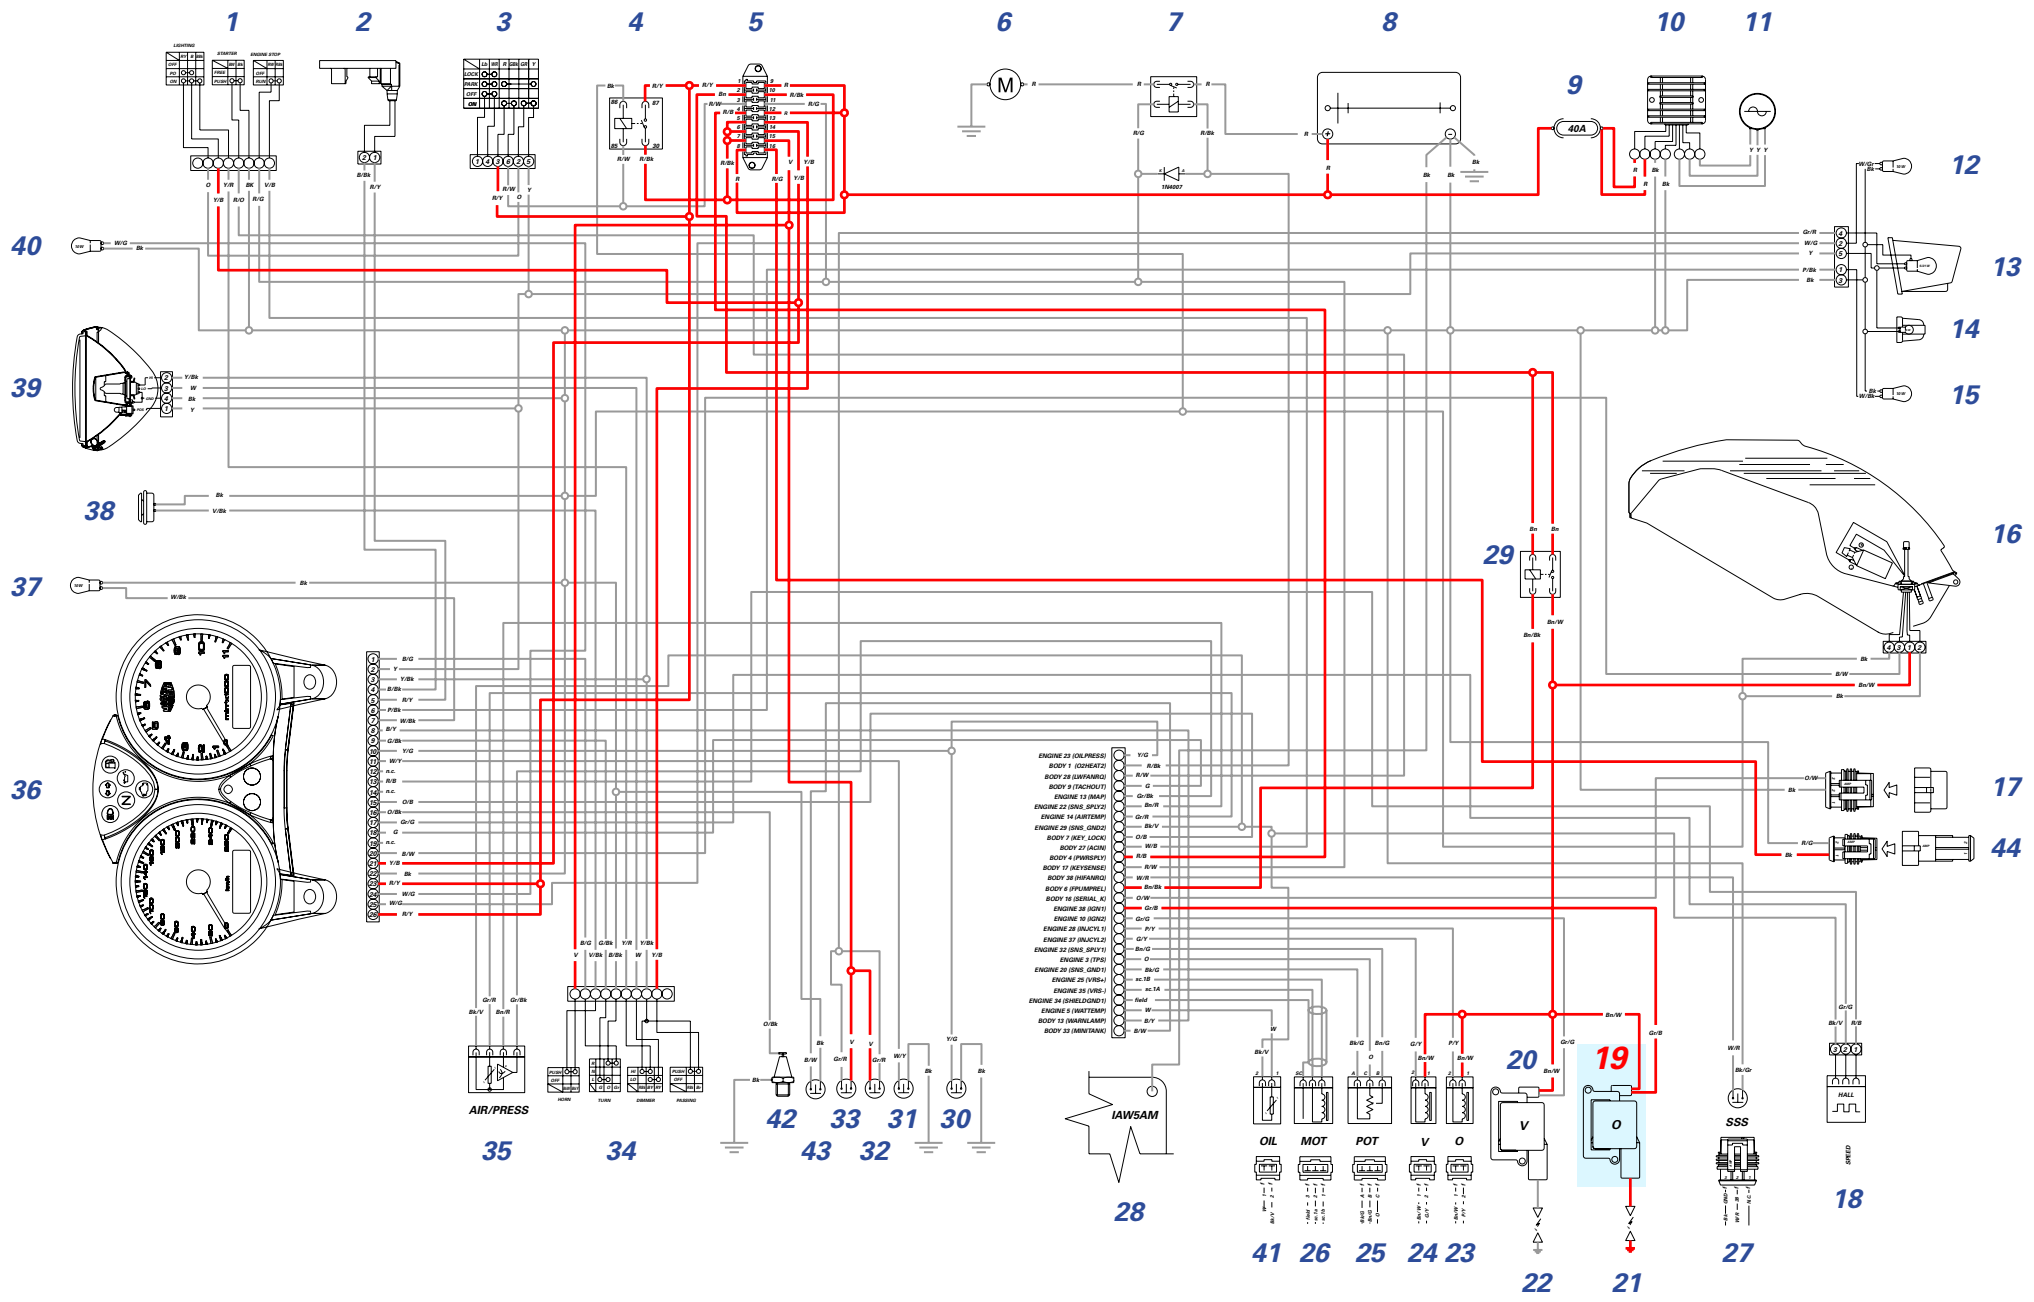


- ENGINE 23 (OILPRESS) YIG
- BODY 1 (DOOR/SEAT) R/WB
- BODY 2 (SUN/RAIN) R/W
- BODY 3 (TRACHOU) G
- ENGINE 13 (JAMP) G/WB
- ENGINE 21 (SUNG. SW/PS) B/W
- ENGINE 14 (AIR/TEMP) G/W
- ENGINE 29 (SUNG. SENS) B/W
- BODY 2 (KEY LOCK) W/B
- BODY 27 (AC/D) W/B
- BODY 4 (P/SENSE) R/B
- BODY 17 (REV/SENSE) R/W
- BODY 26 (IN/RAIN) W/B
- BODY 6 (S/P/SENSE) B/WB
- BODY 18 (SERIAL, A) G/W
- ENGINE 38 (DOV) G/WB
- ENGINE 18 (SUNG) G/W
- ENGINE 28 (IN/ACT) P/Y
- ENGINE 27 (IN/ACT) G/Y
- ENGINE 21 (SUNG. SW/PS) B/W
- ENGINE 31 (TP) O
- ENGINE 29 (SUNG. SENS) B/W
- ENGINE 28 (V/RS) K/TA
- ENGINE 39 (V/RS) B/W
- ENGINE 35 (SHELL/SENS) B/Y
- ENGINE 5 (WATER/TEMP) W
- BODY 13 (SWAR/LAMP) W
- BODY 23 (SUN/RAIN) G/W

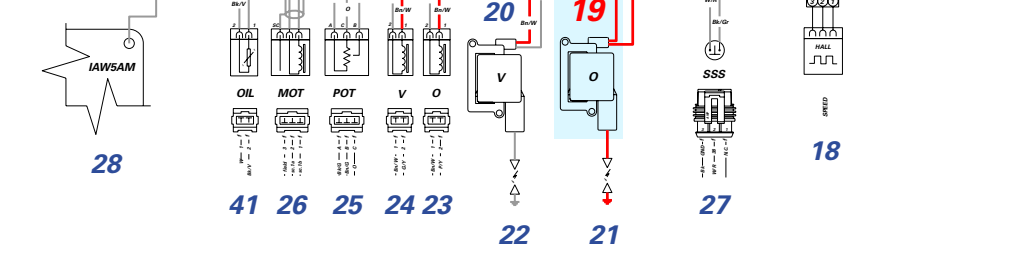


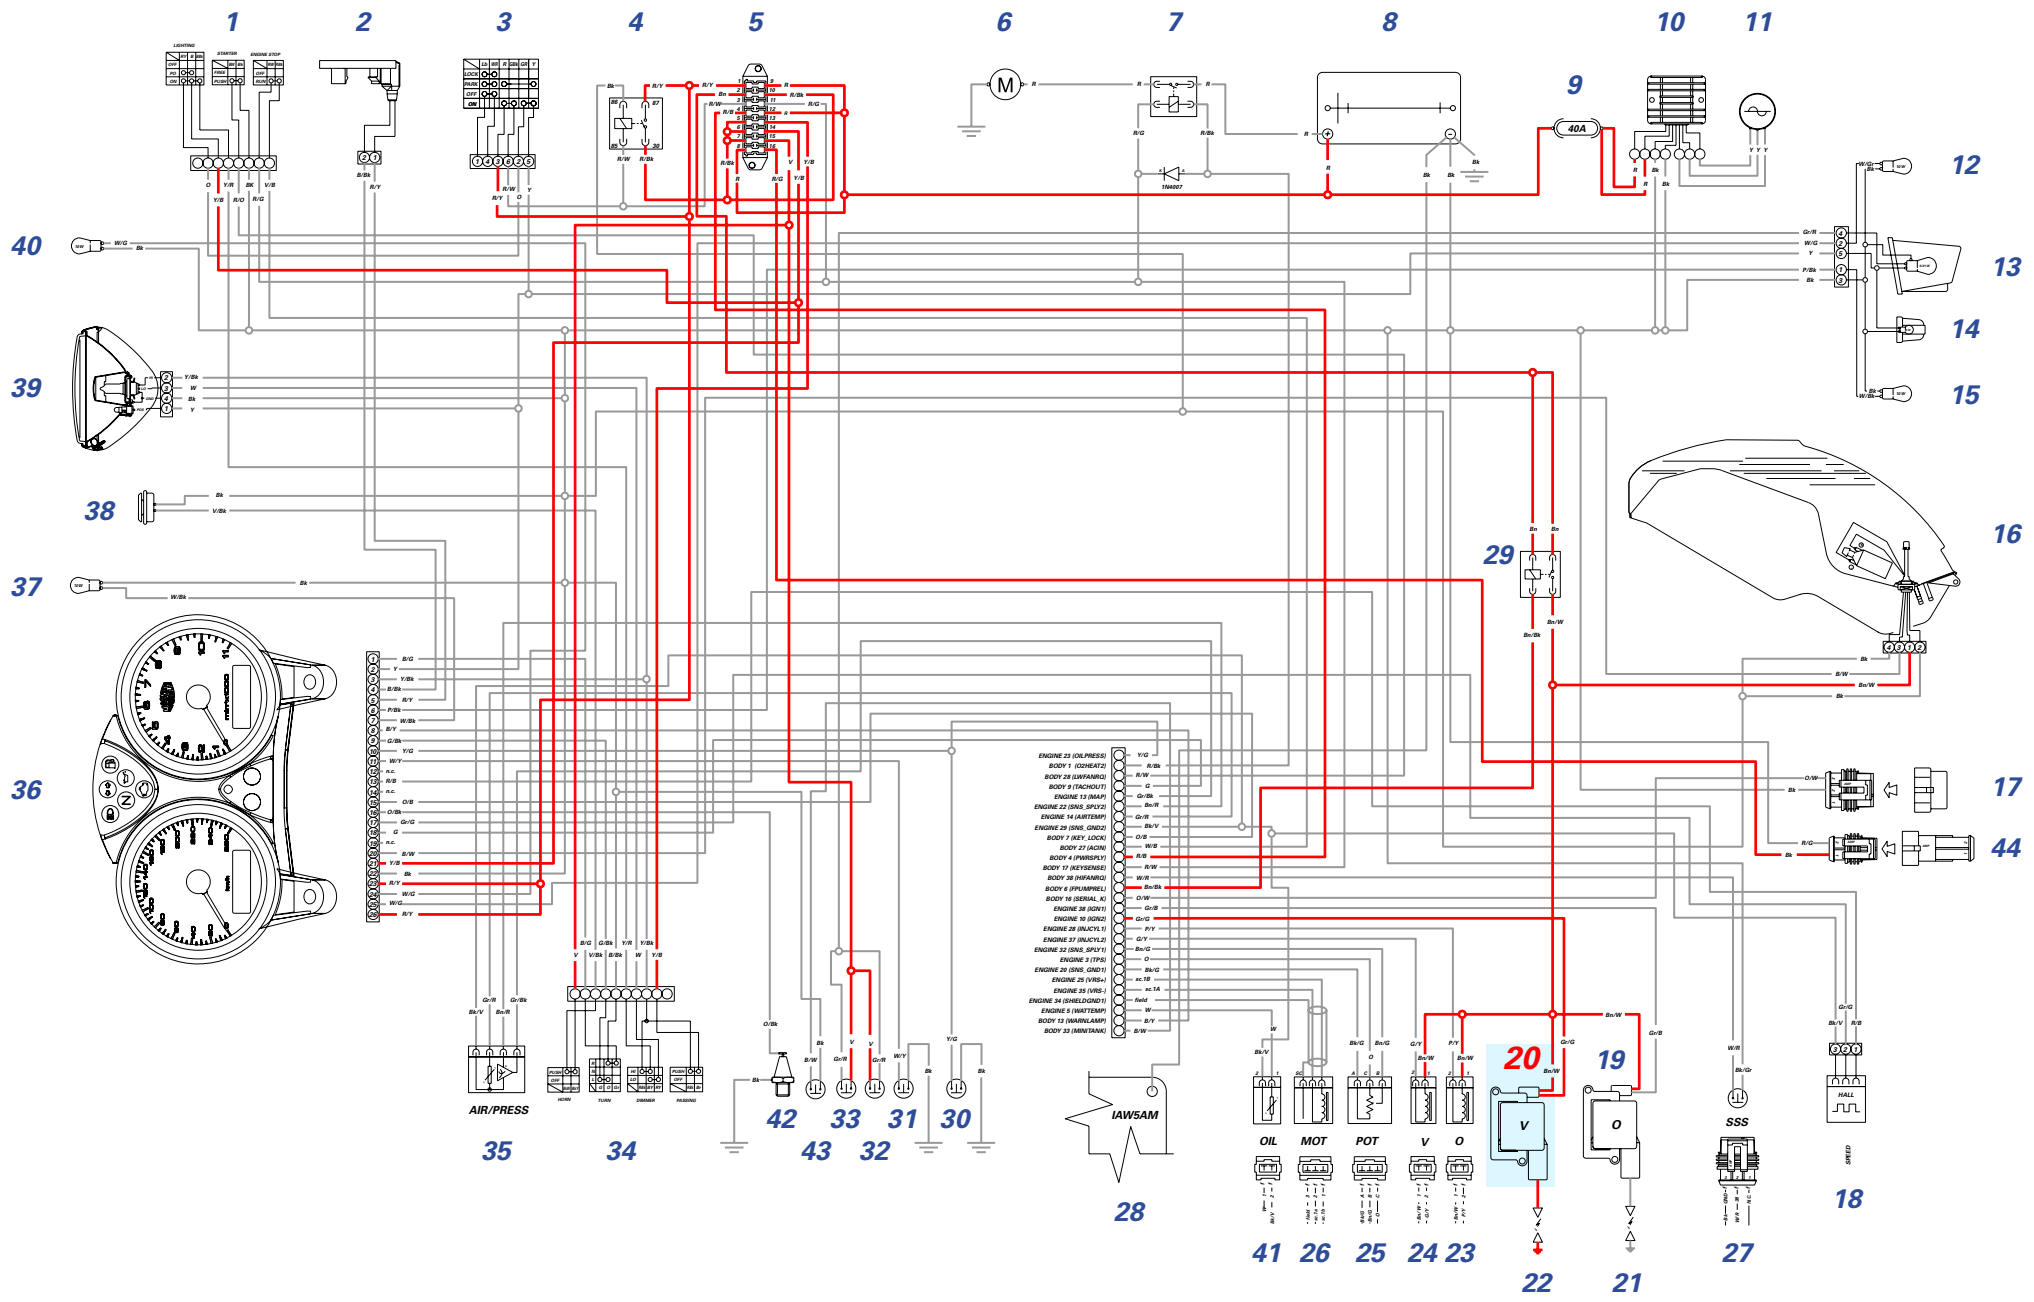

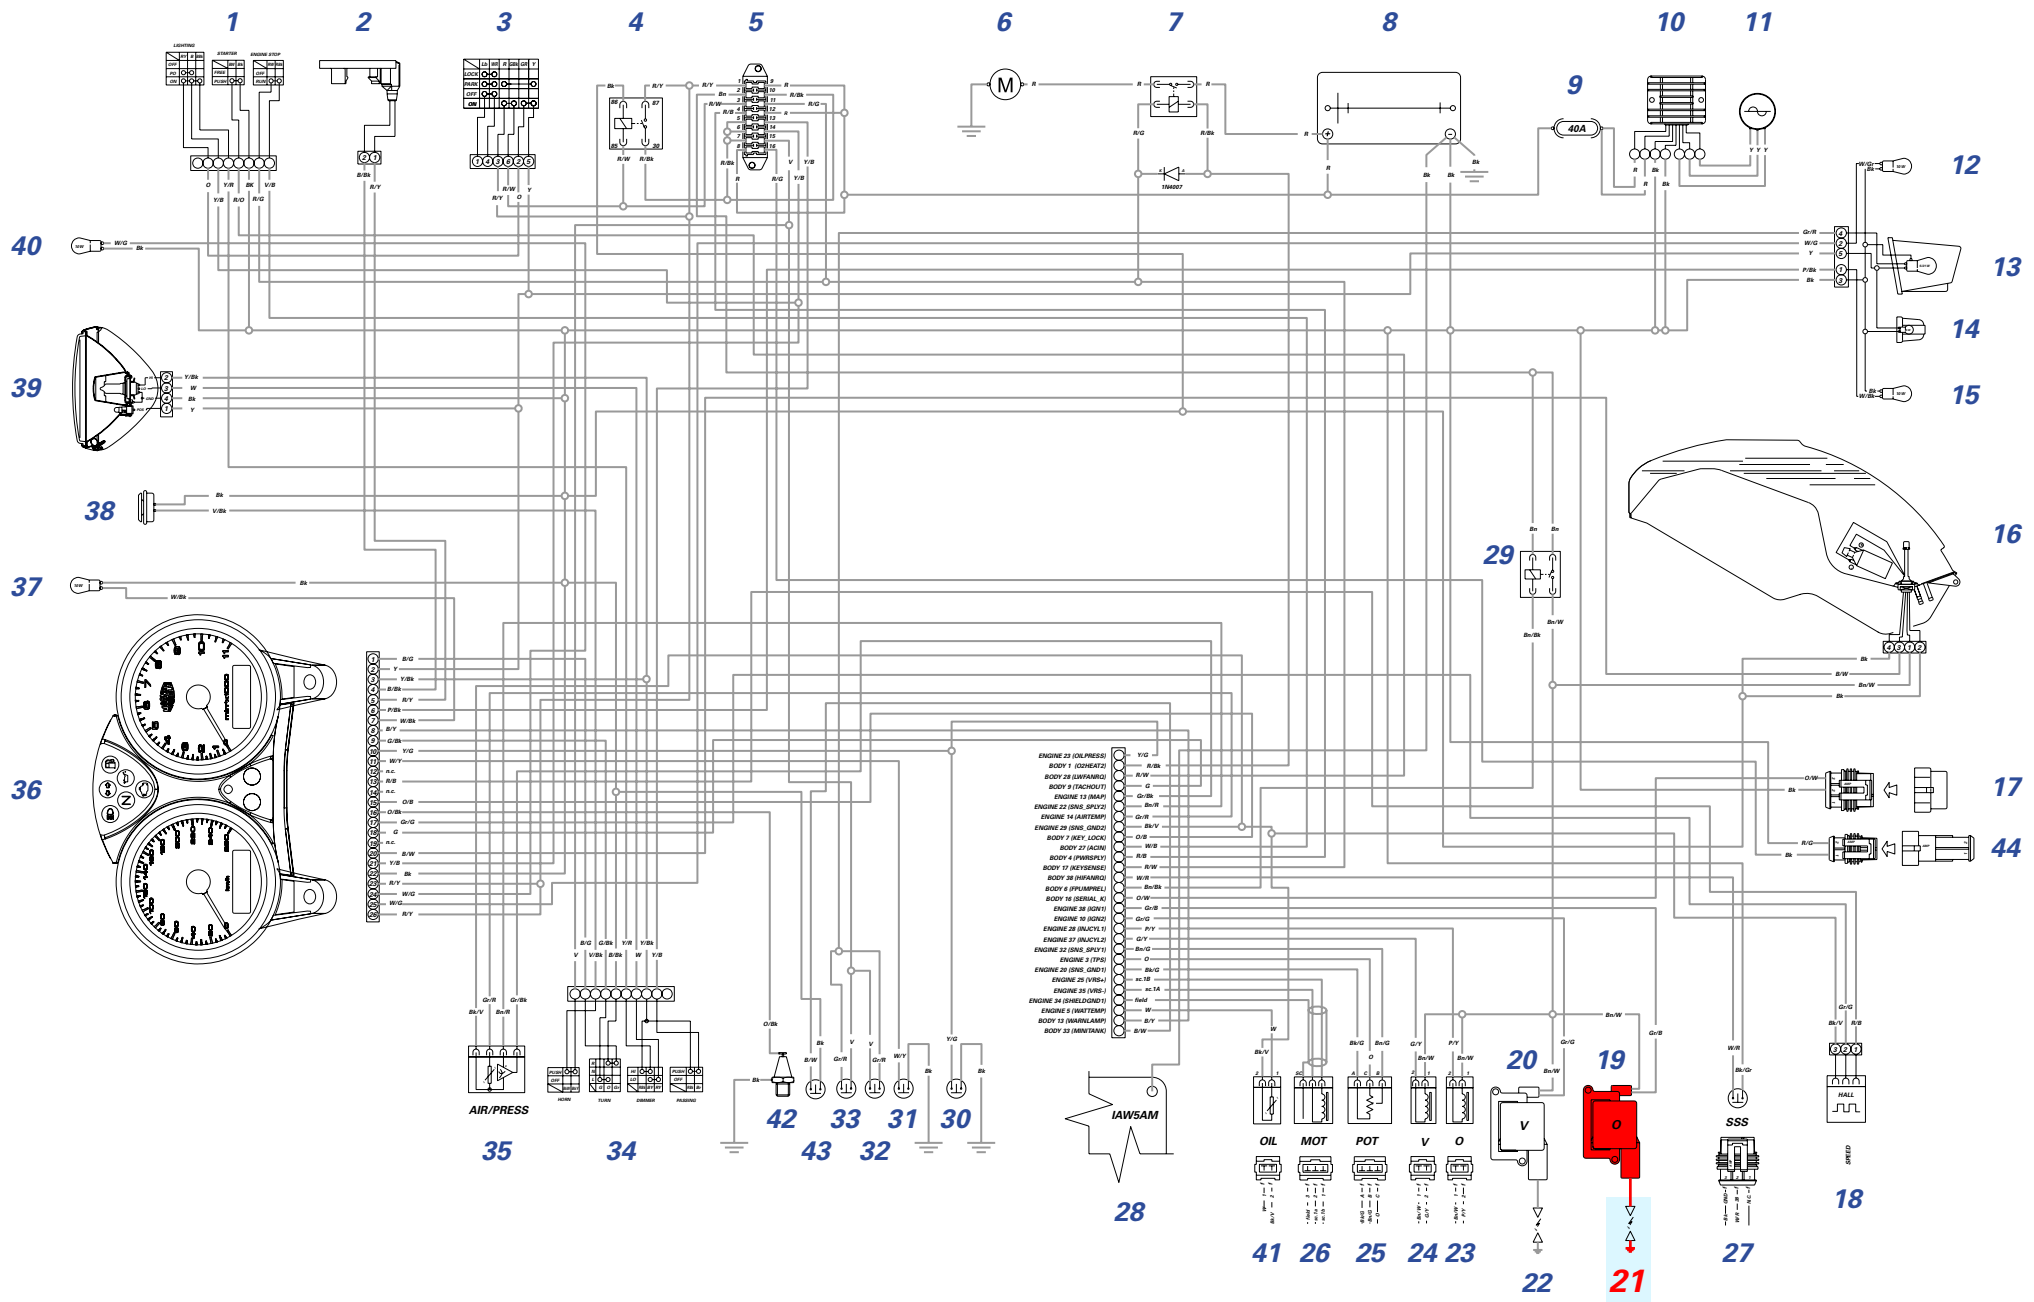

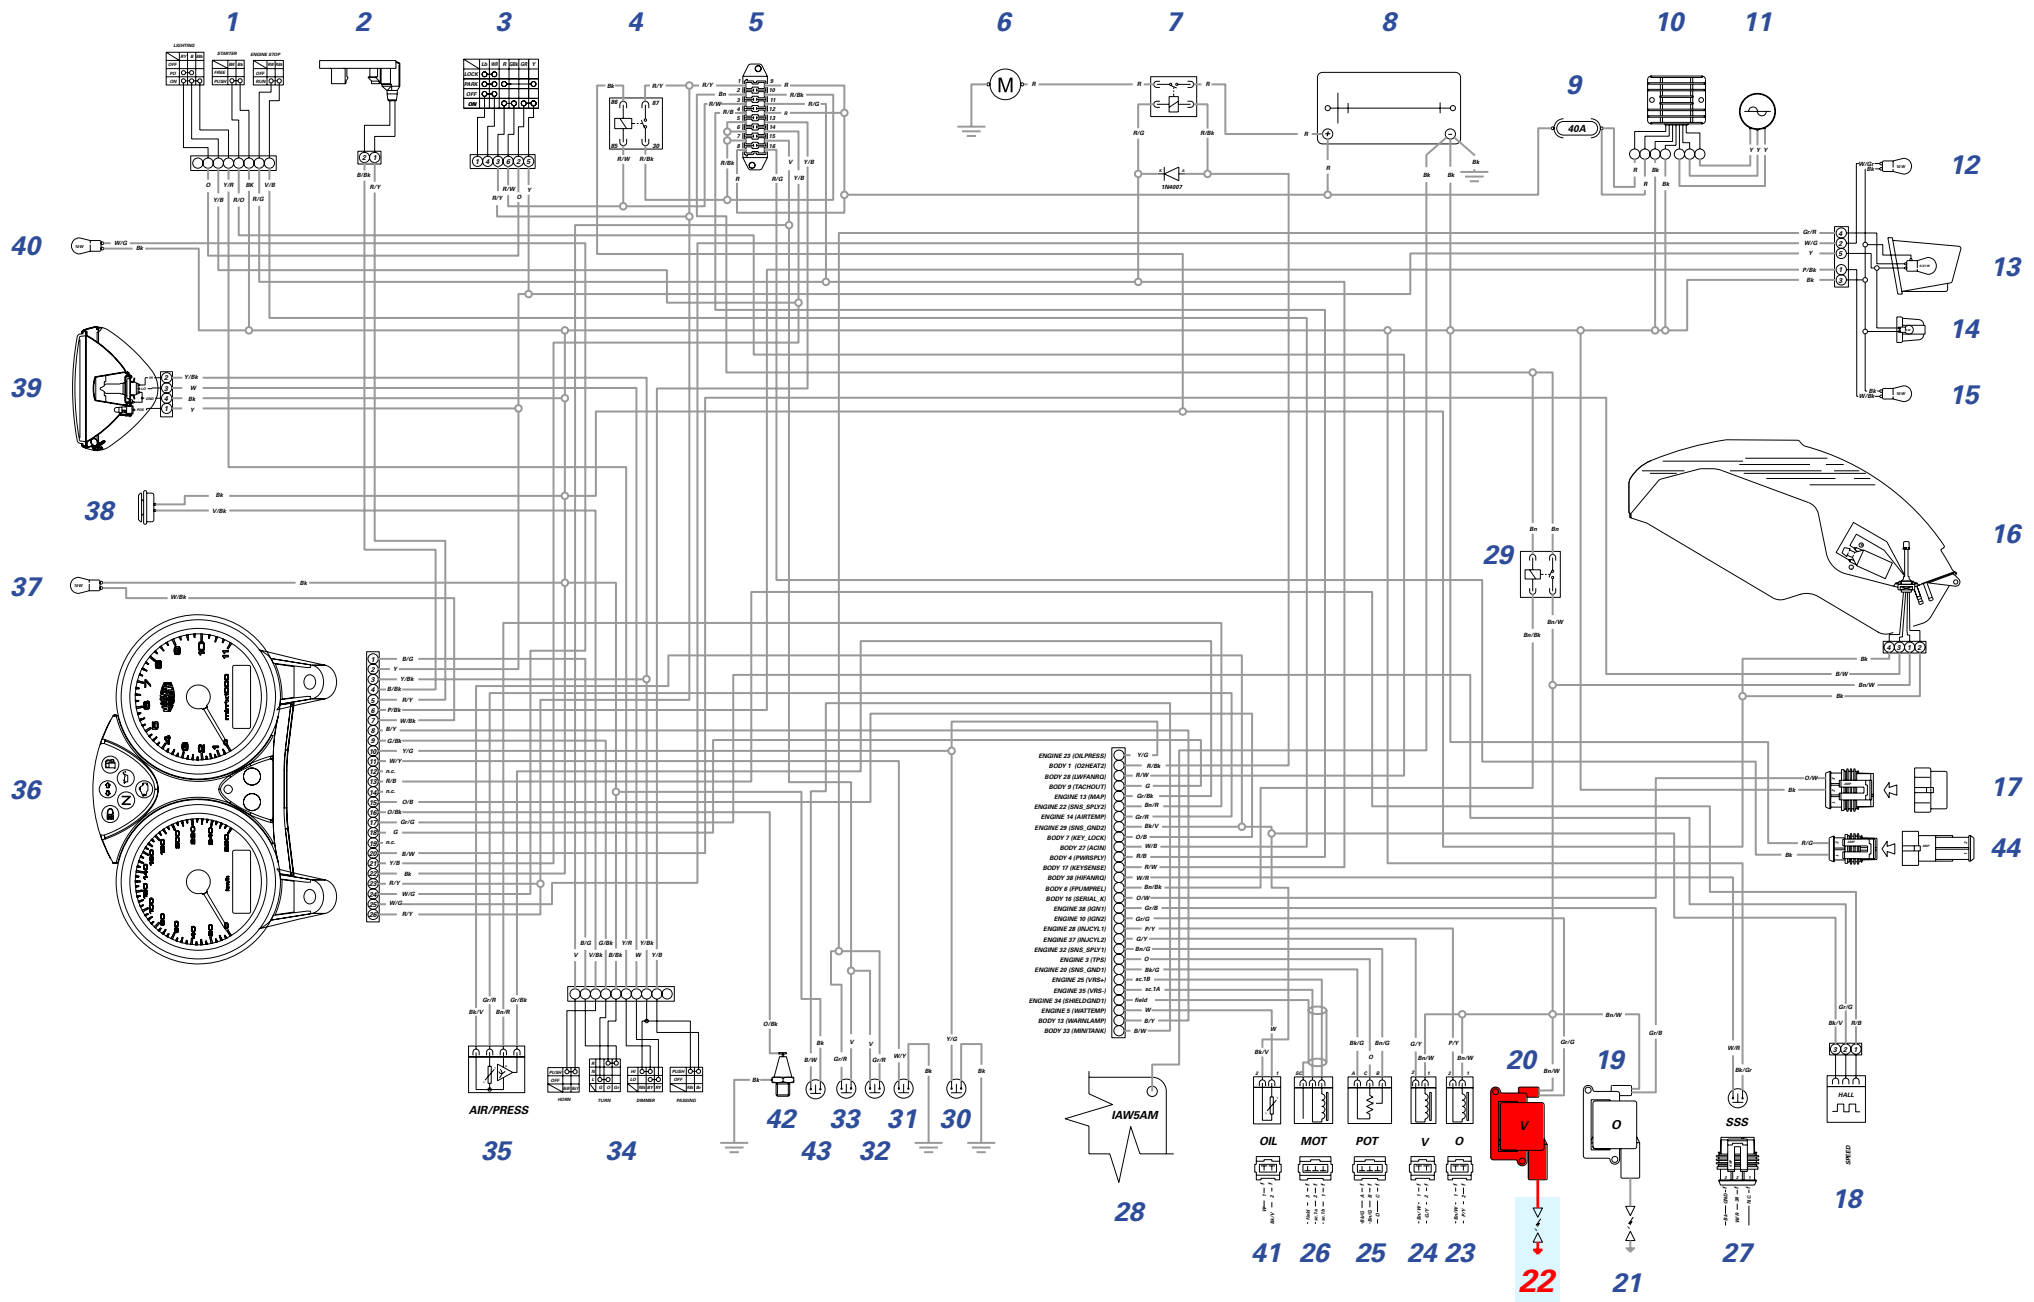



22

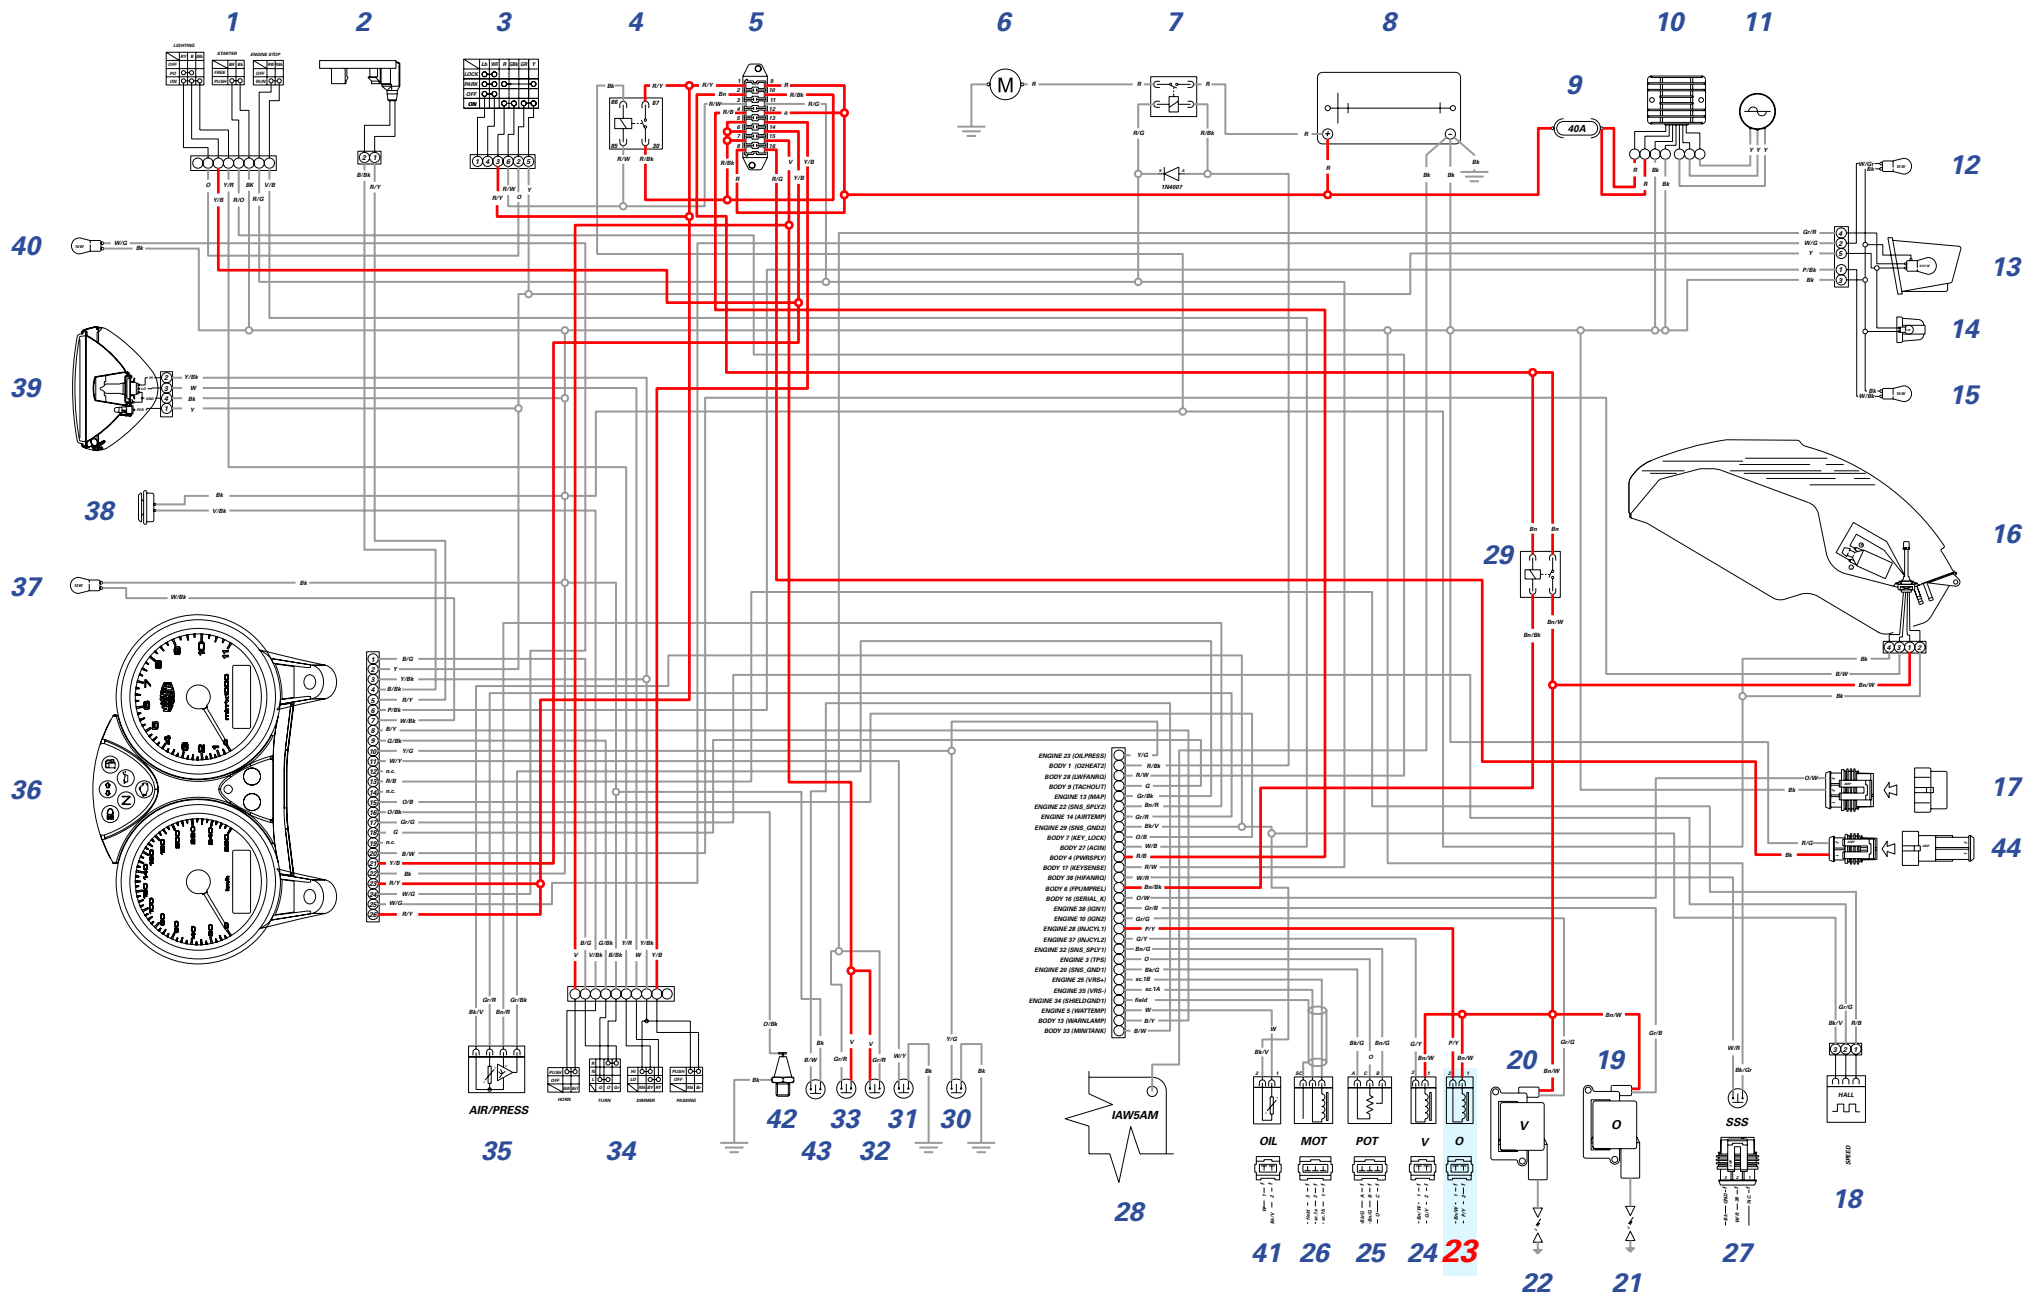







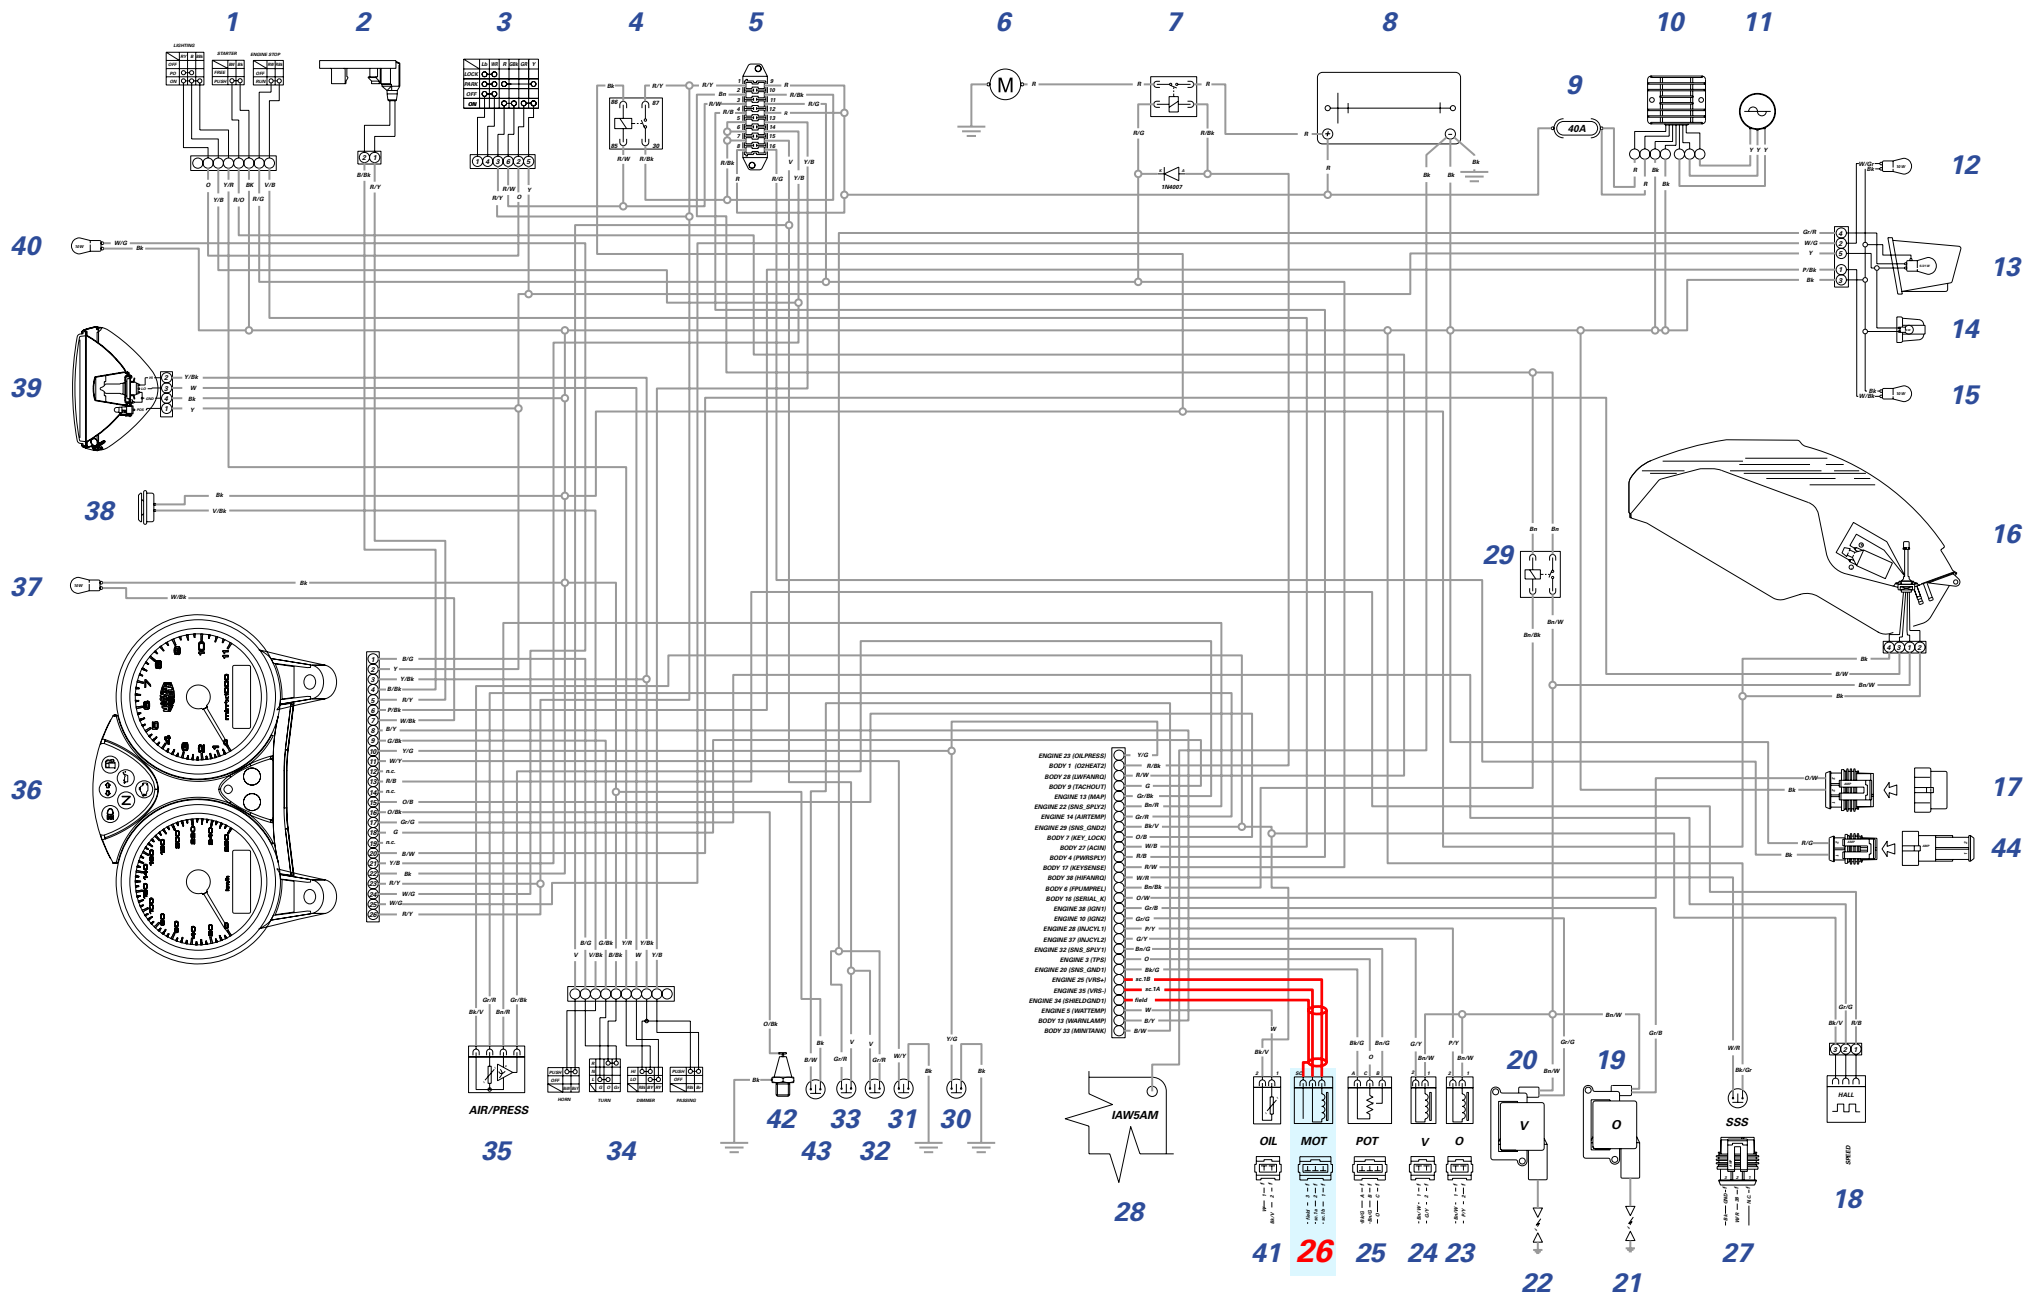


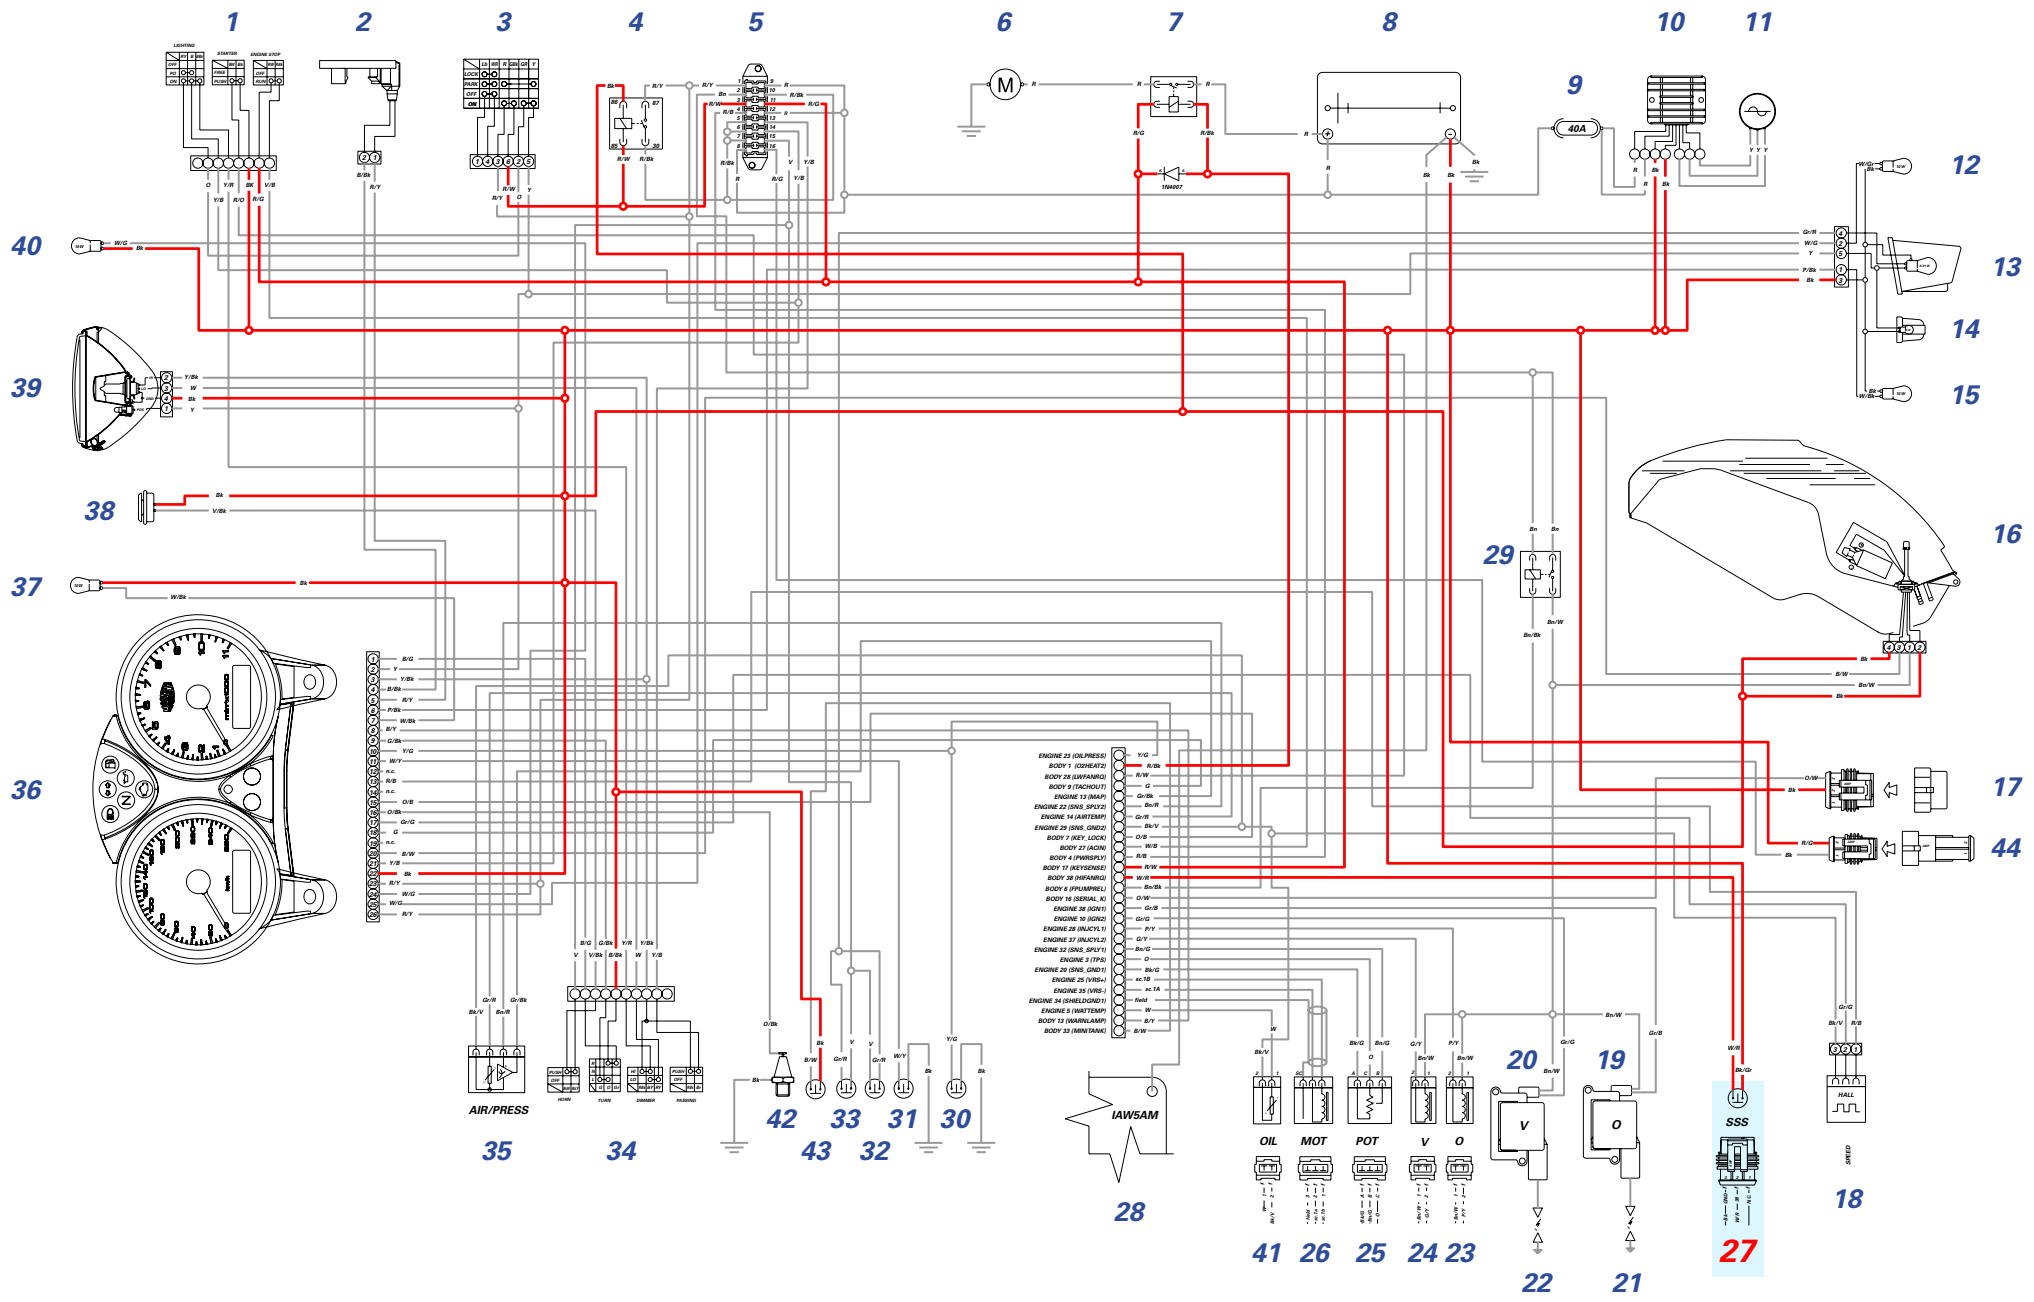


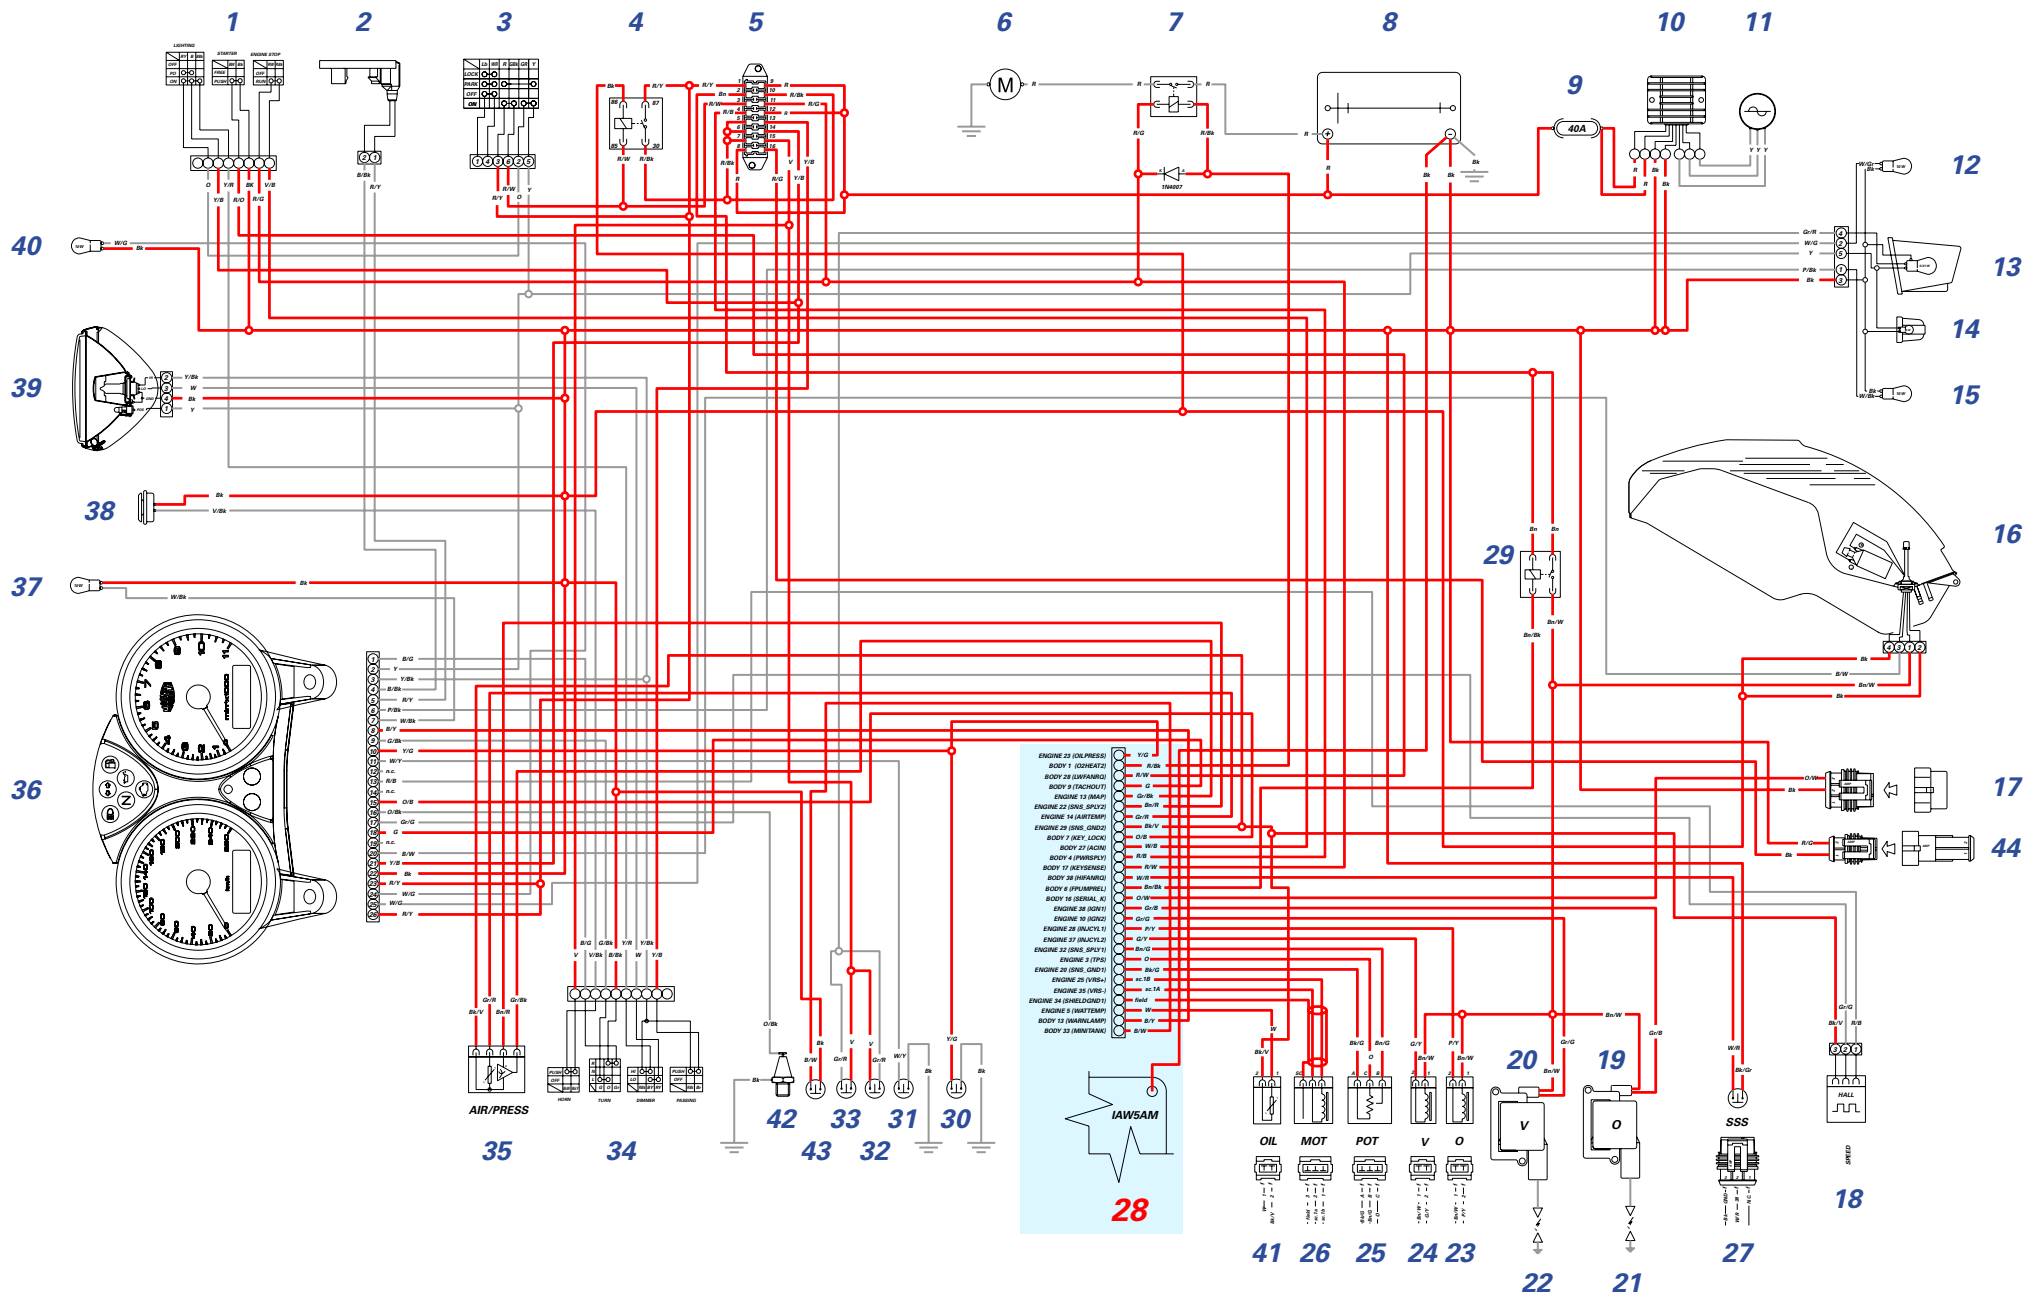

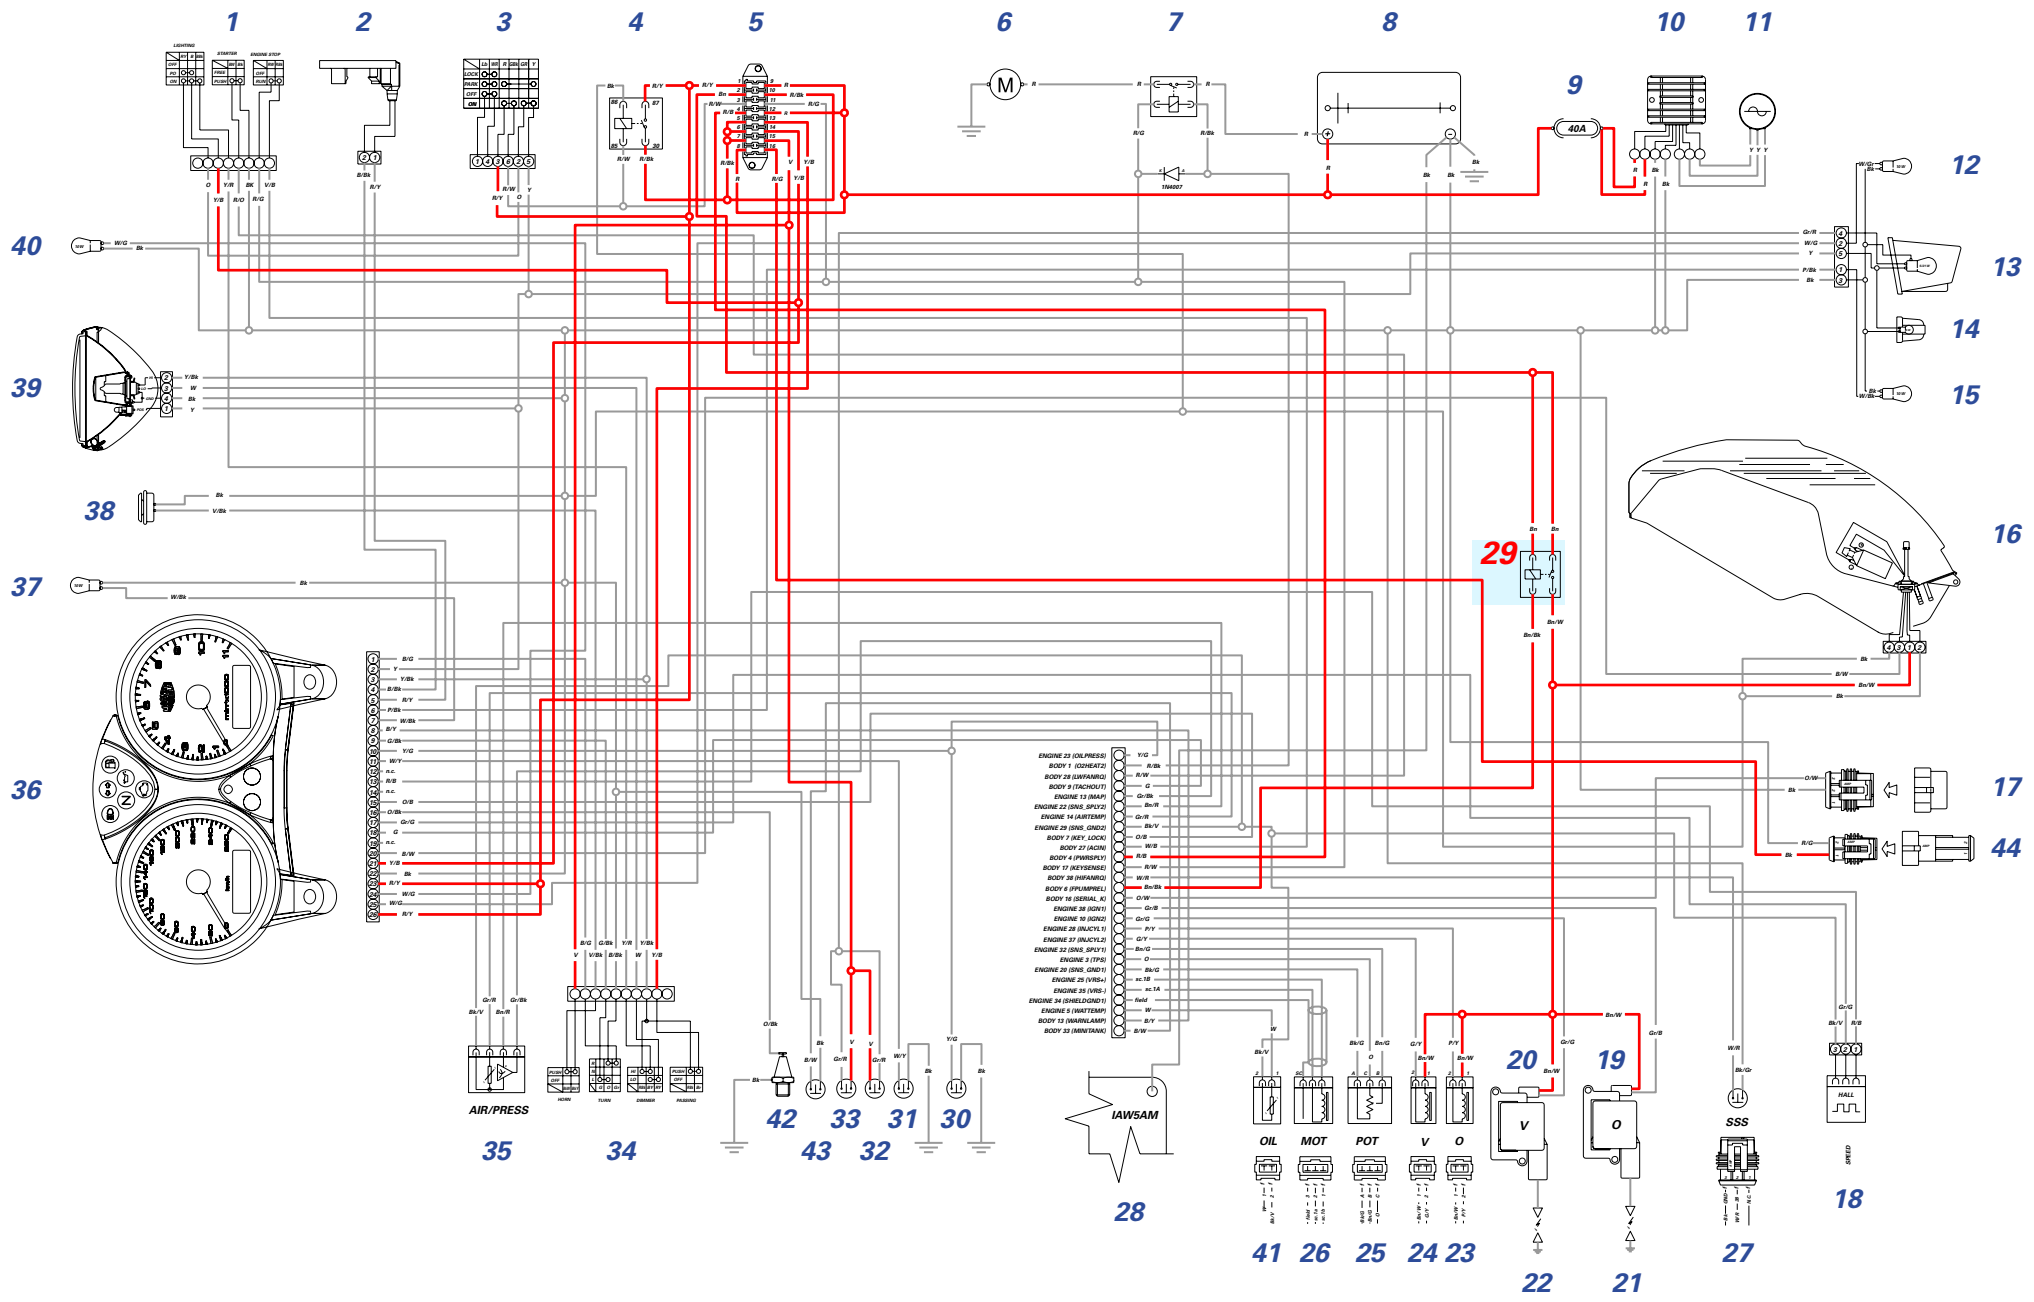



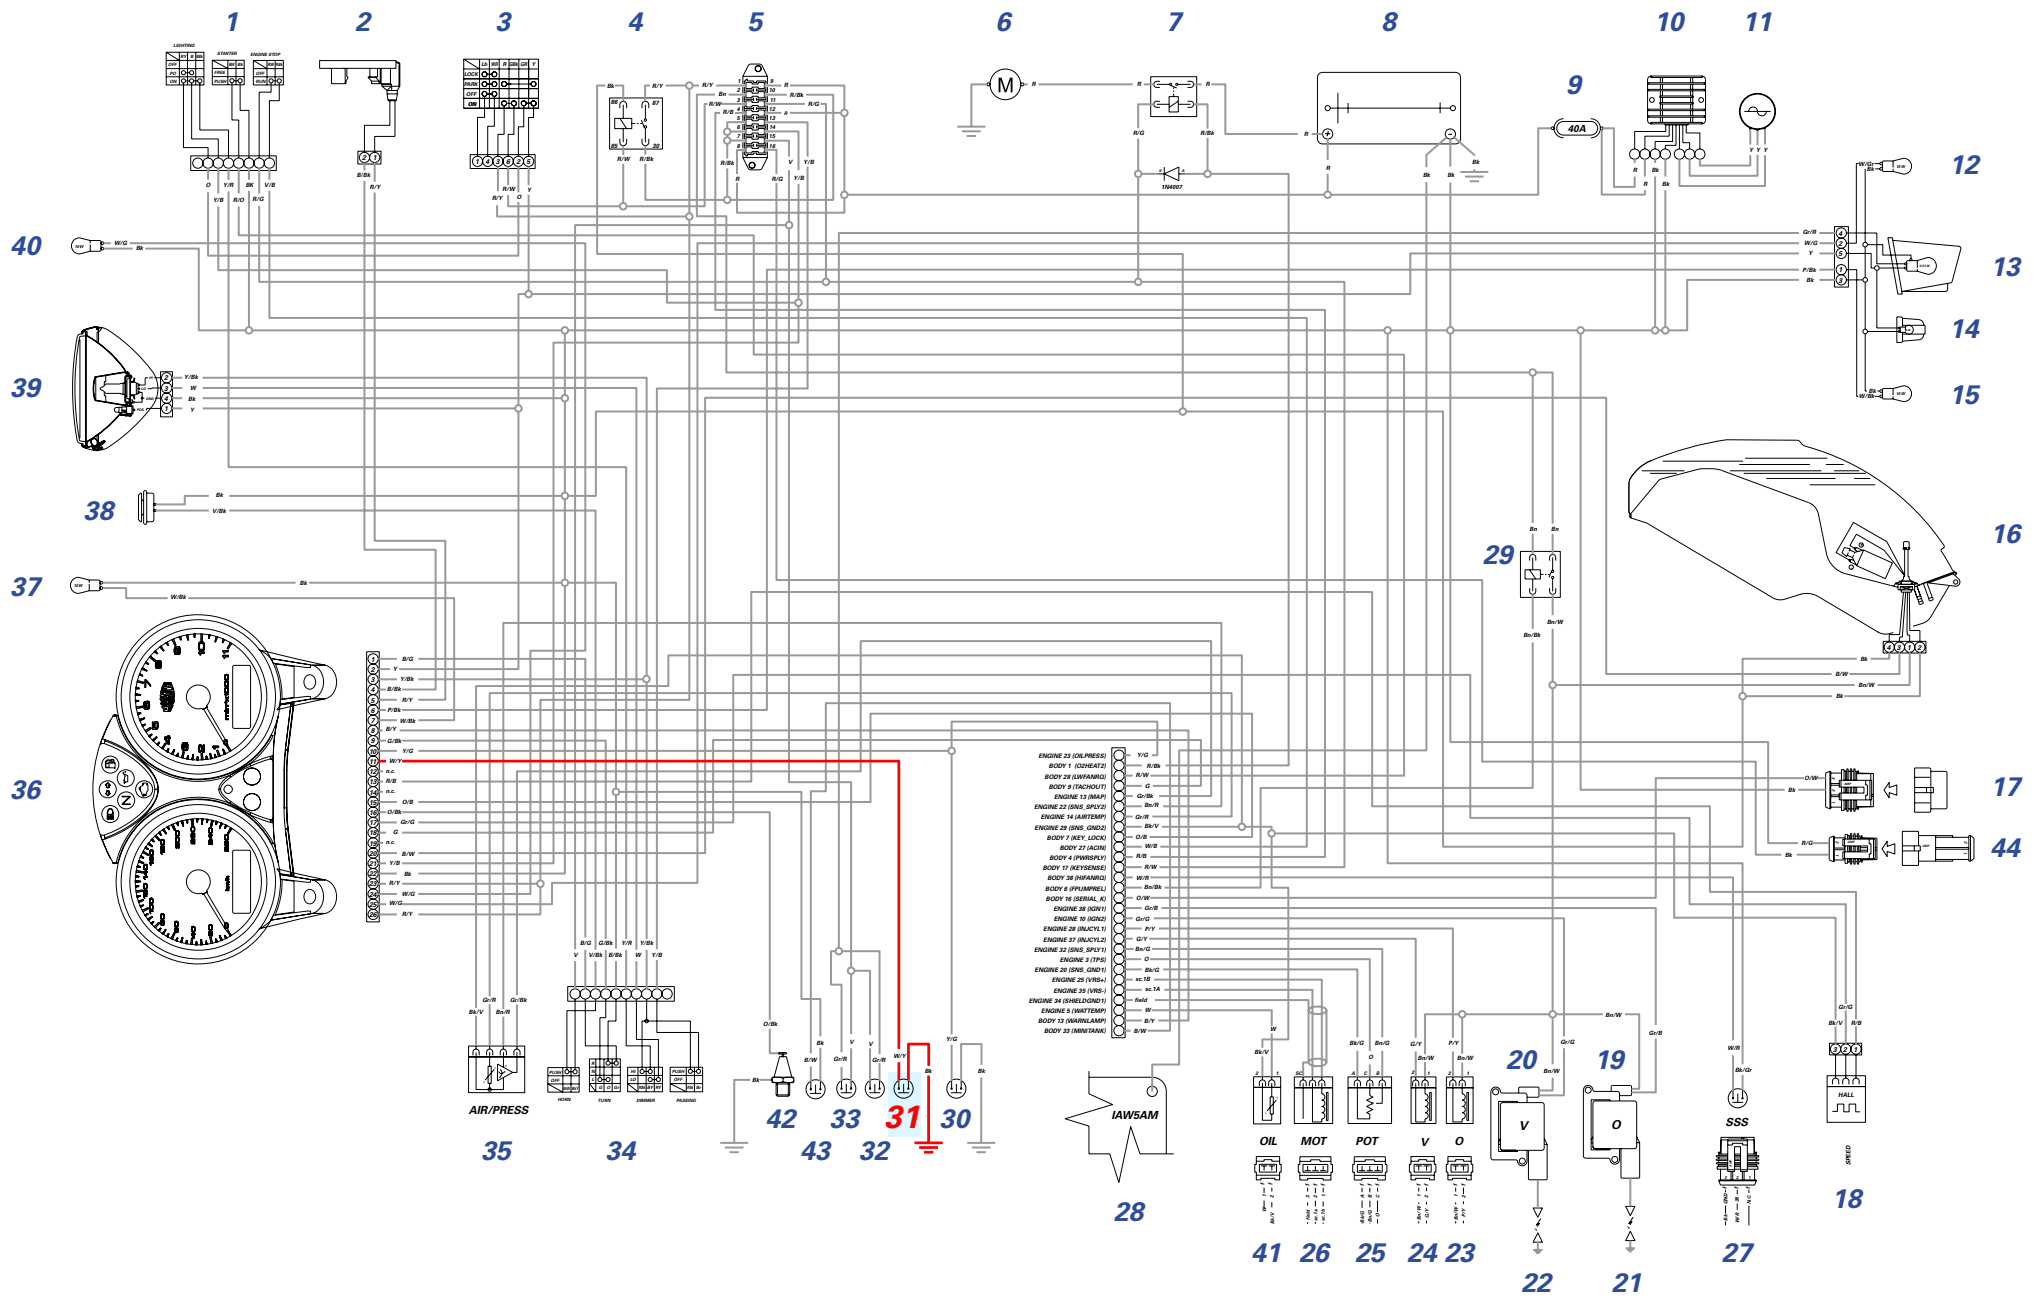

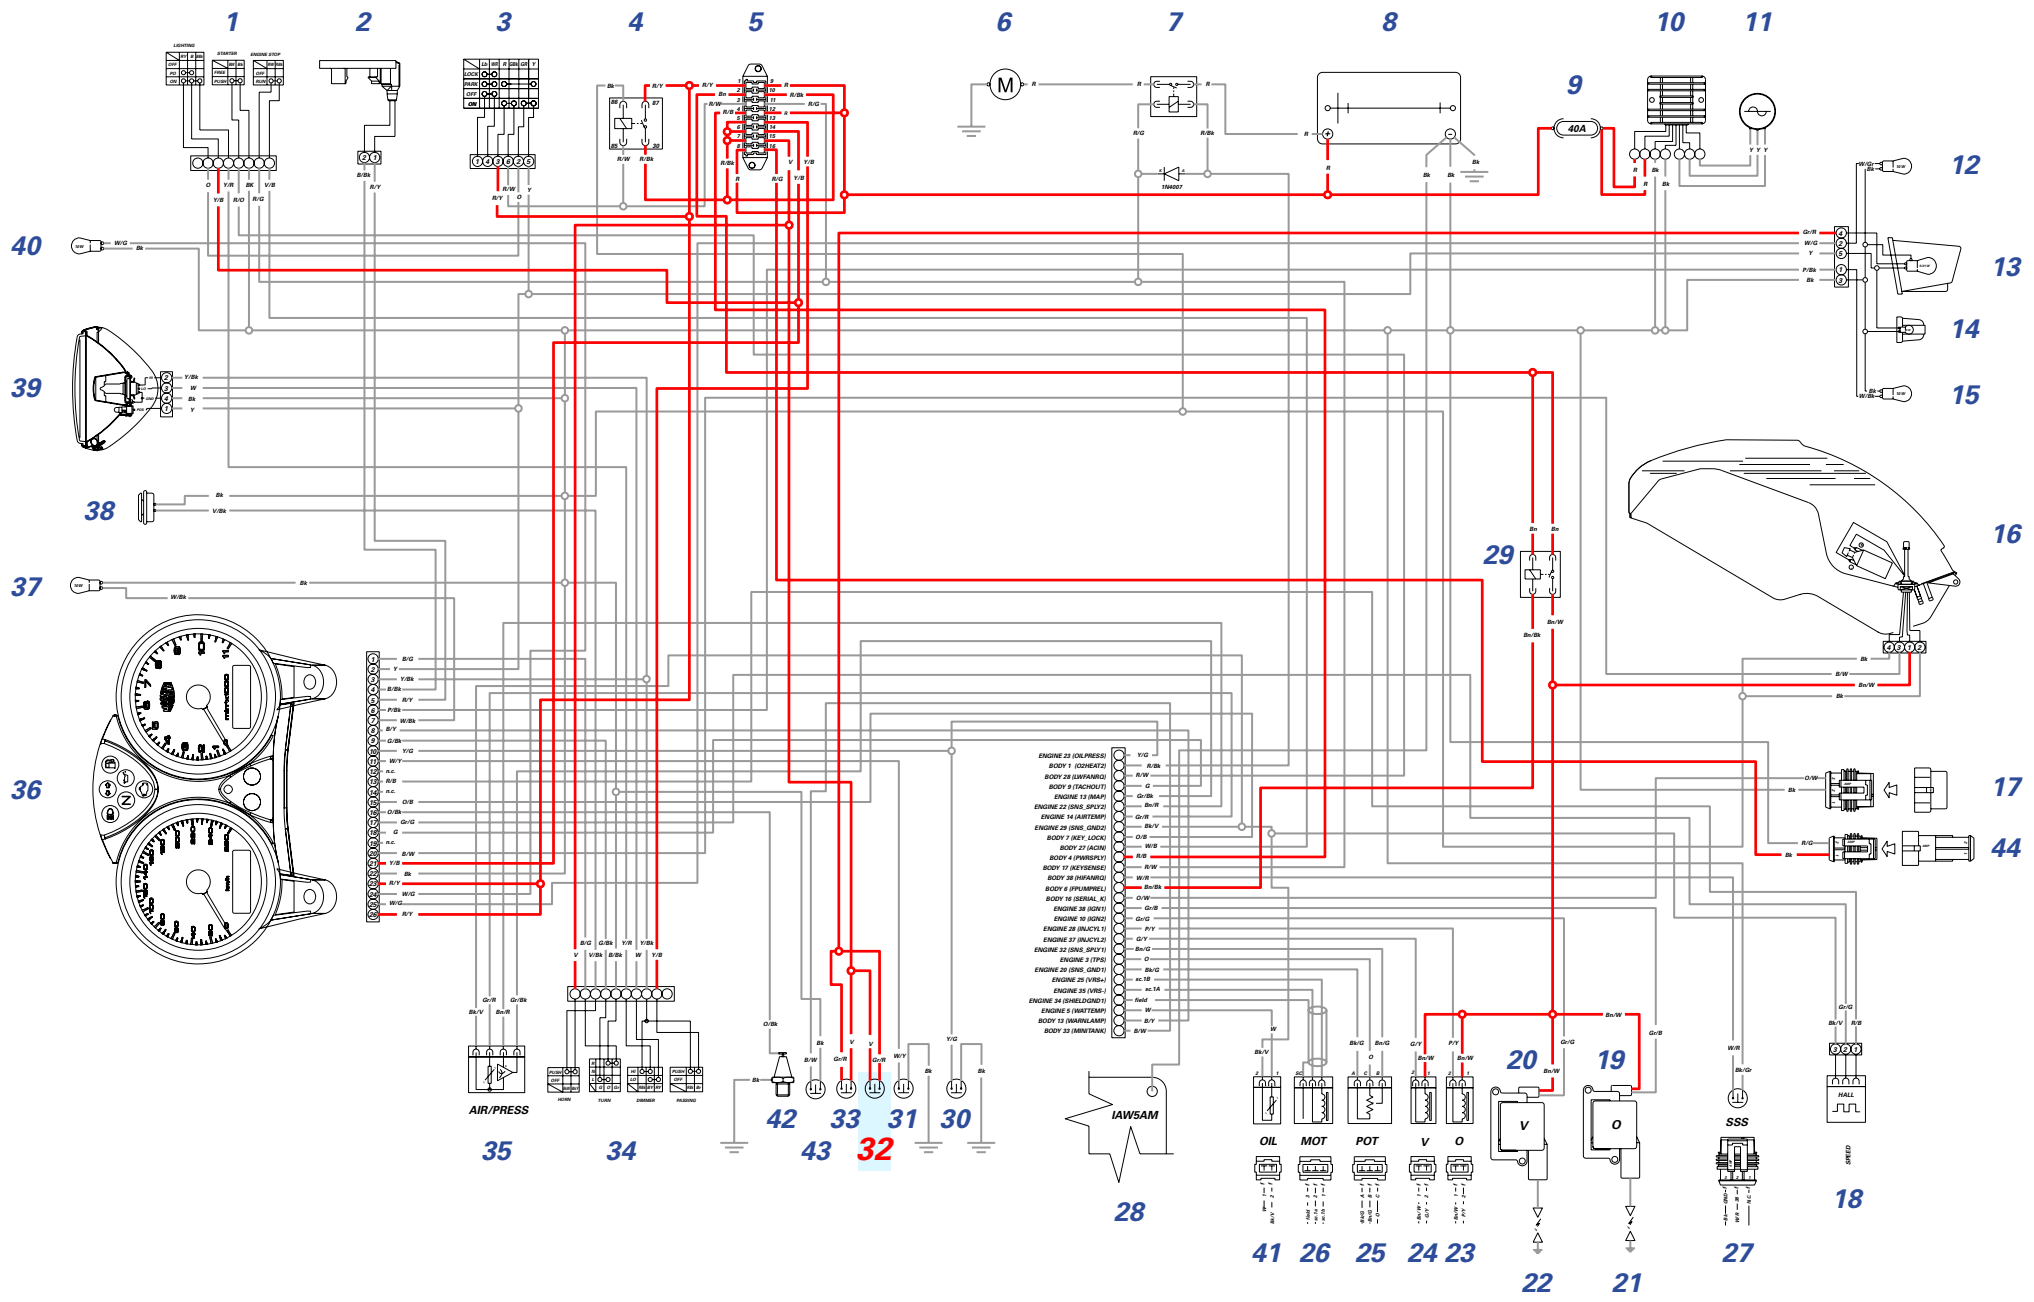

1

2

3

4

5

6

7

8

10

11

40

39

38

37

36

12

13

14

15

16

17

44

Y  
Y/Br  
-Br/Br  
R/Br  
W/Br  
G/Br  
W/Y  
A.C.  
R/Br  
G/Br  
G/Br  
A.C.  
G  
R/W  
R/Br  
W/Br  
W/Br  
R/Y  
W/Br  
R/Y

AIR/PRESS  
35


34

42  
43

33  
32

31  
30

ENGINE 23 (OLPRESS)  
BODY 1 (DOORHEAT)  
BODY 23 (SUNSHINE)  
BODY 3 (TRACHOUT)  
ENGINE 13 (JAMP)  
ENGINE 21 (SUNG. SW)  
ENGINE 14 (AIRTEMP)  
ENGINE 39 (SUNG. SENS)  
BODY 2 (KEY LOCK)  
BODY 27 (ACDN)  
BODY 4 (PRESSURE)  
BODY 17 (REVERSE)  
BODY 26 (SHAWMOTOR)  
BODY 6 (SUNSHINE)  
BODY 18 (SERIAL A)  
ENGINE 38 (BODY)  
ENGINE 18 (SUNG)  
ENGINE 28 (INACTYL)  
ENGINE 27 (INACTYL)  
ENGINE 21 (SUNG. SW)  
ENGINE 3 (TP)  
ENGINE 20 (SUNG. SENS)  
ENGINE 25 (VIR)  
ENGINE 35 (VIR)  
ENGINE 33 (SHELLED)  
ENGINE 5 (WATTEMP)  
BODY 13 (SHARLAMP)  
BODY 22 (SHARLAMP)



28

41

26

25

24

23

22


21


20

19


27


18

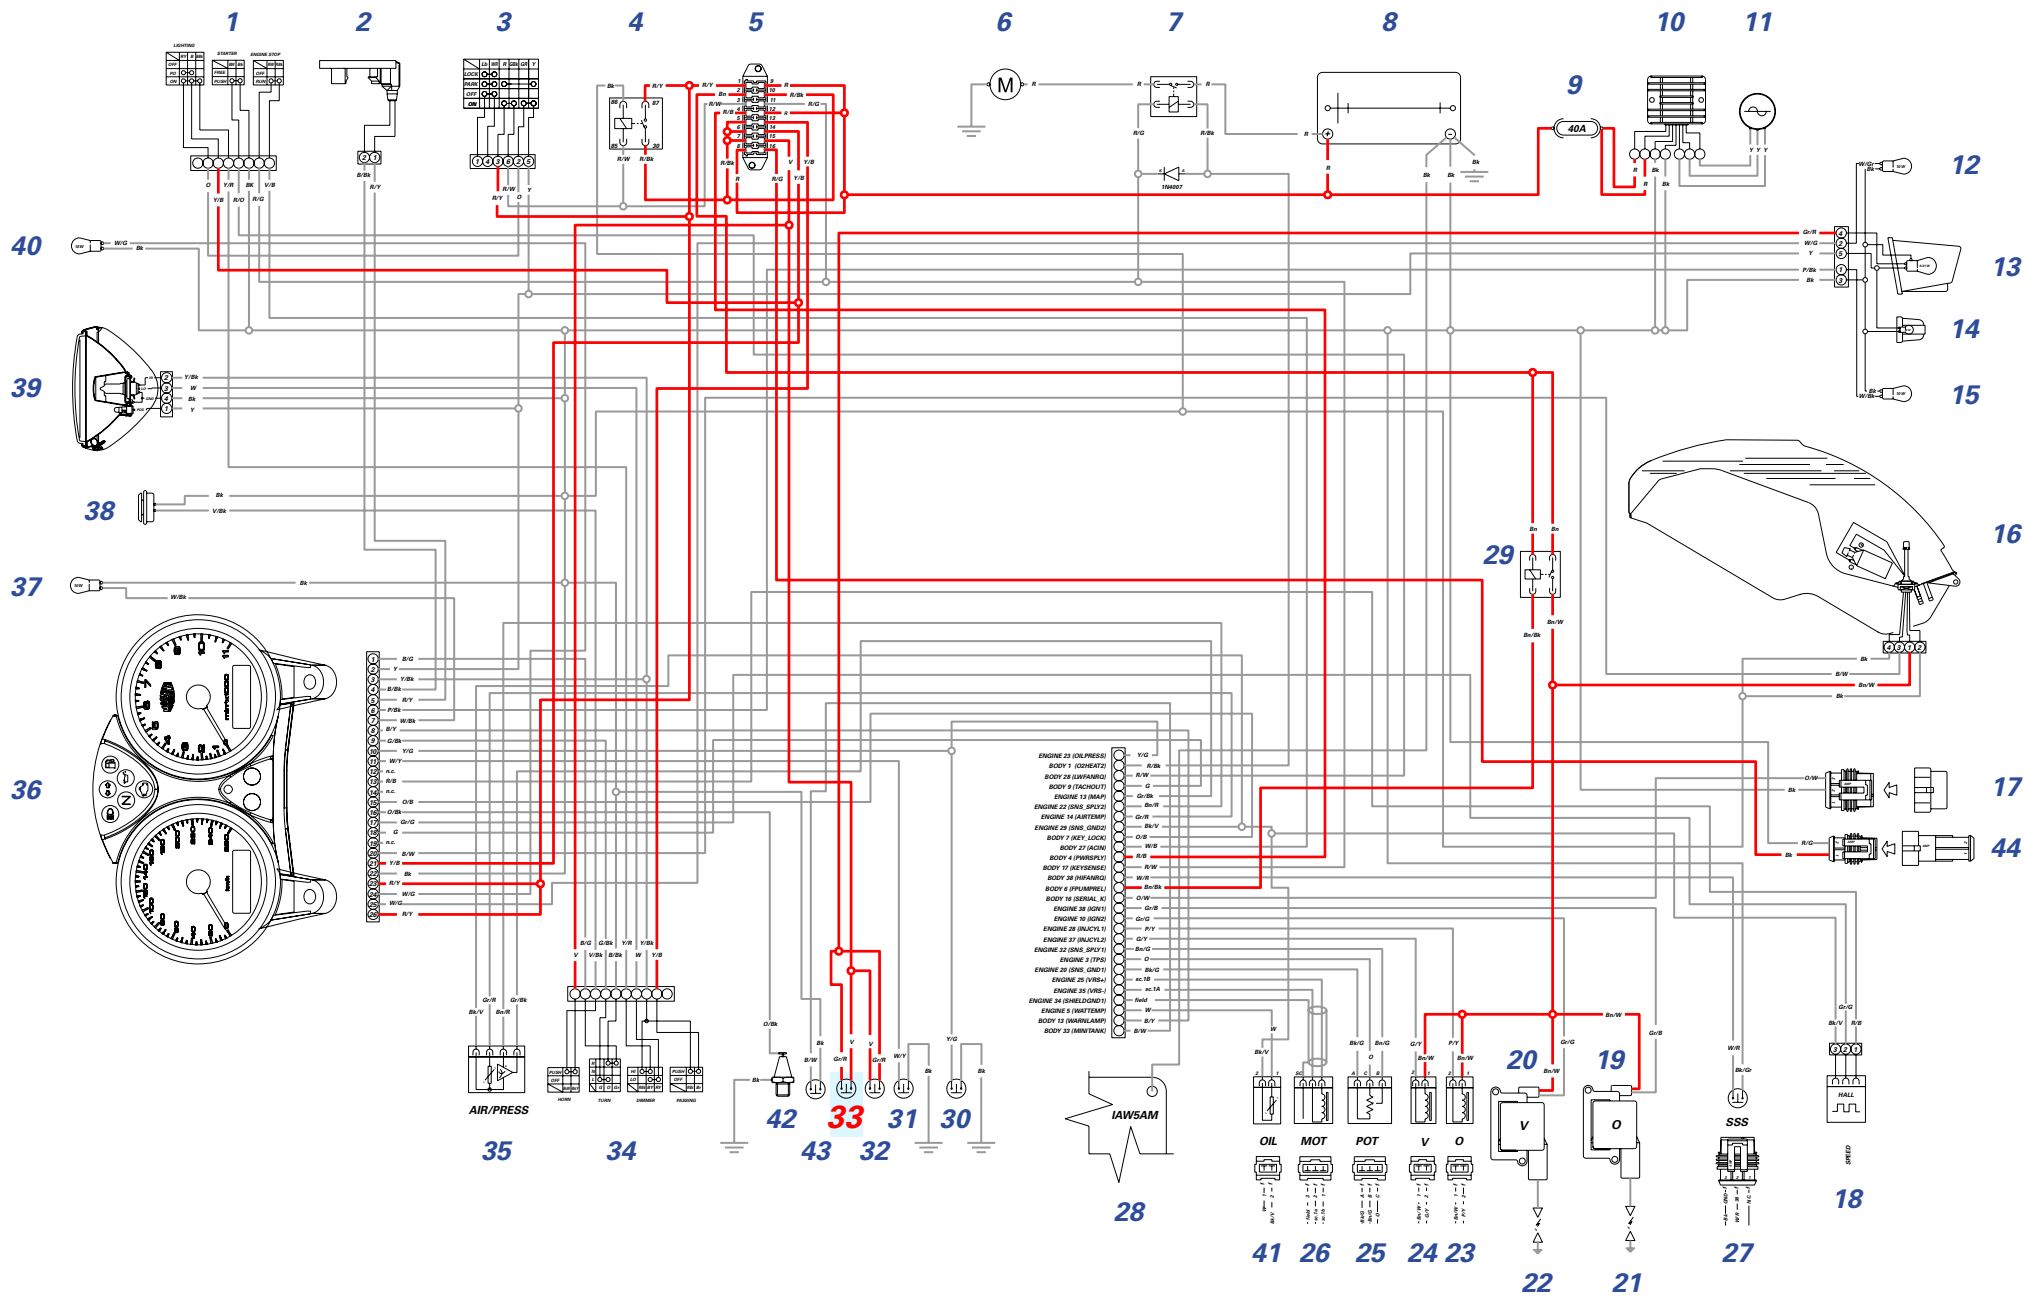

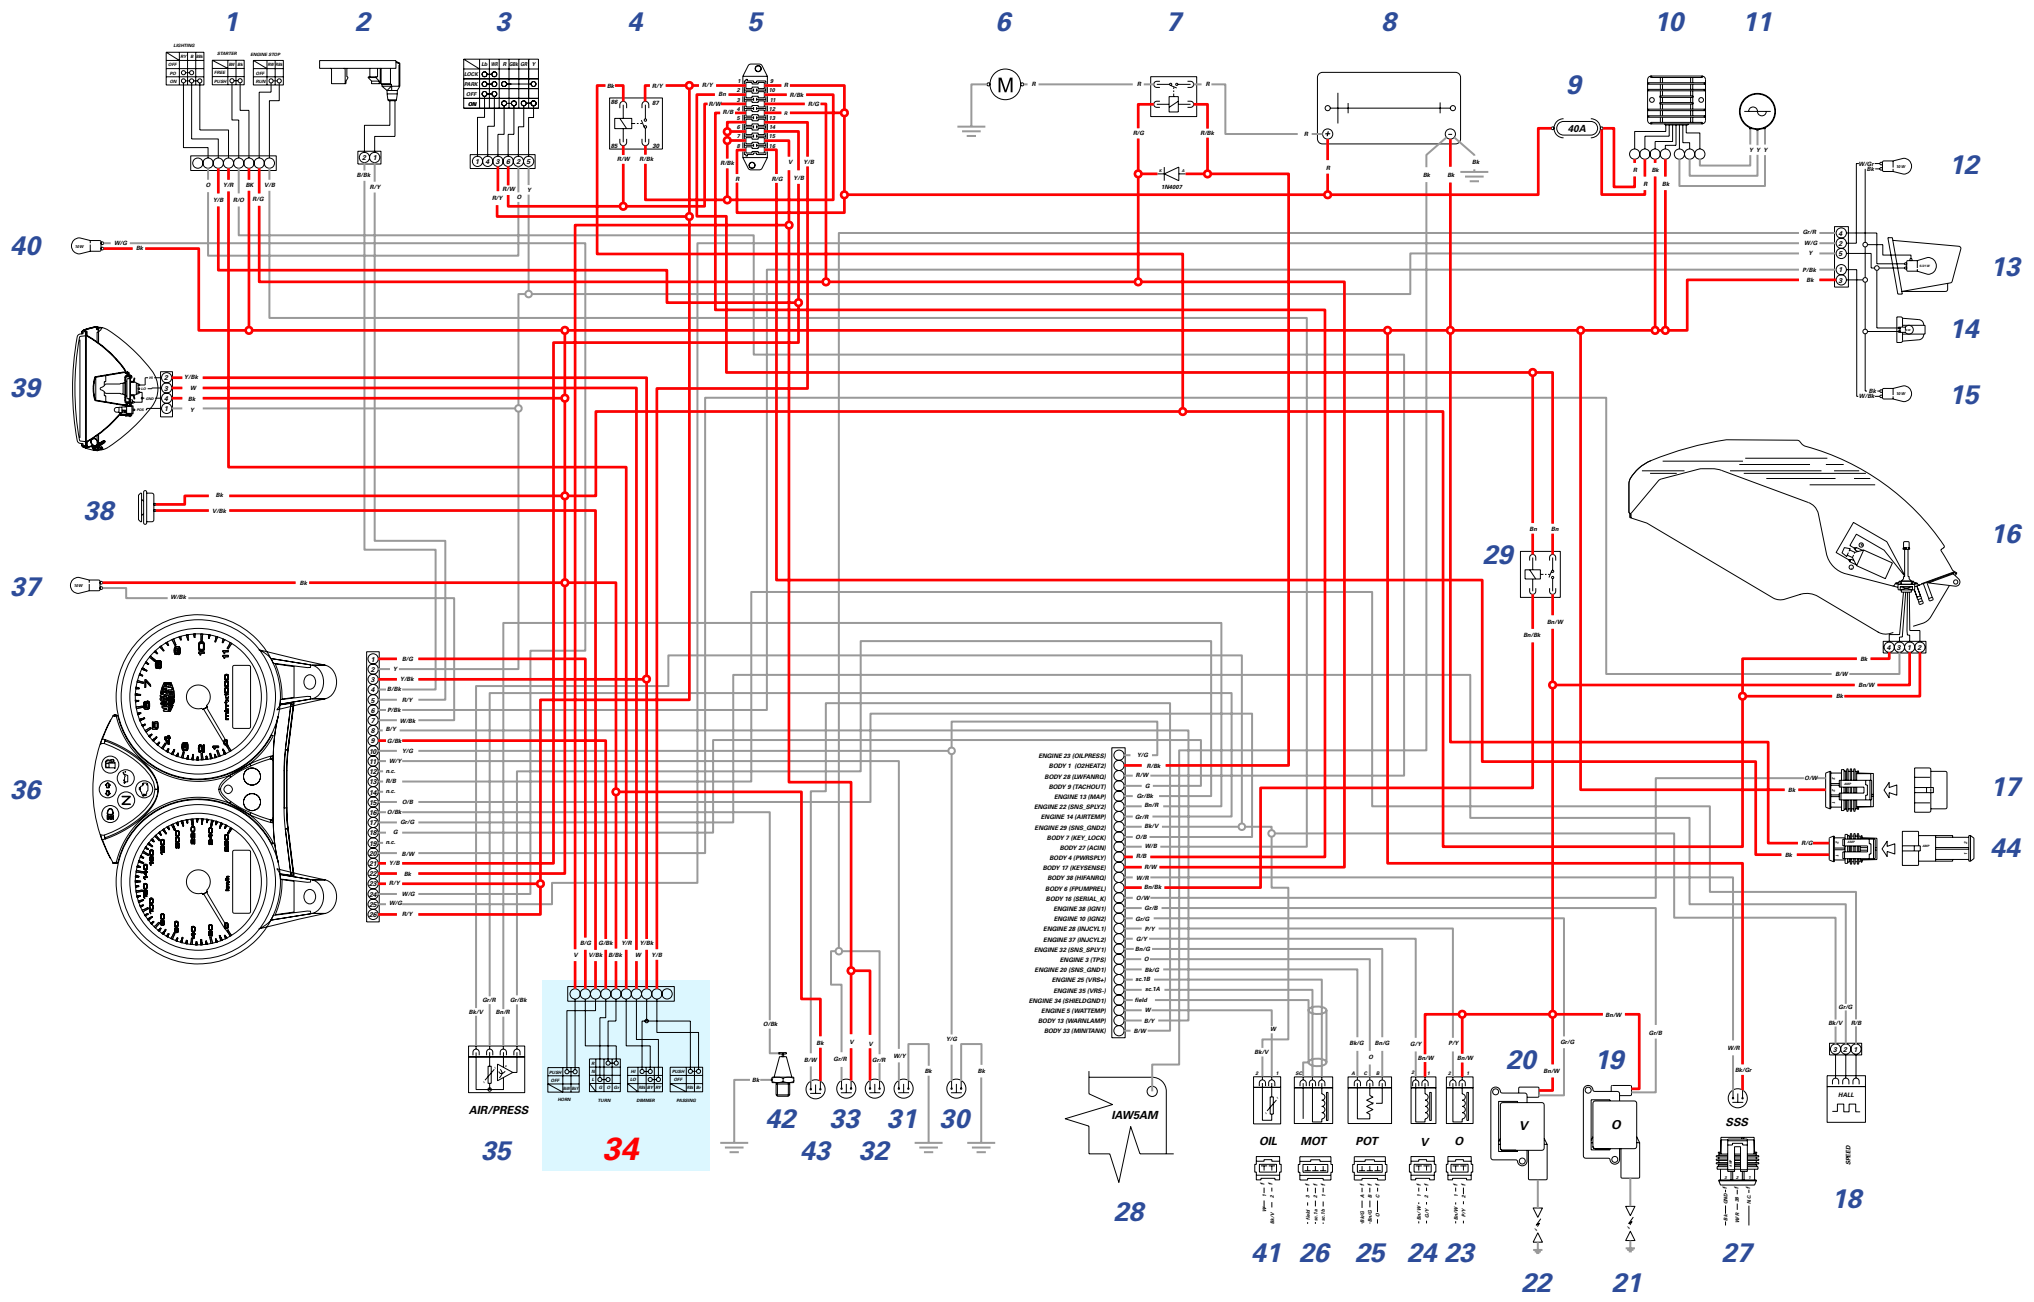



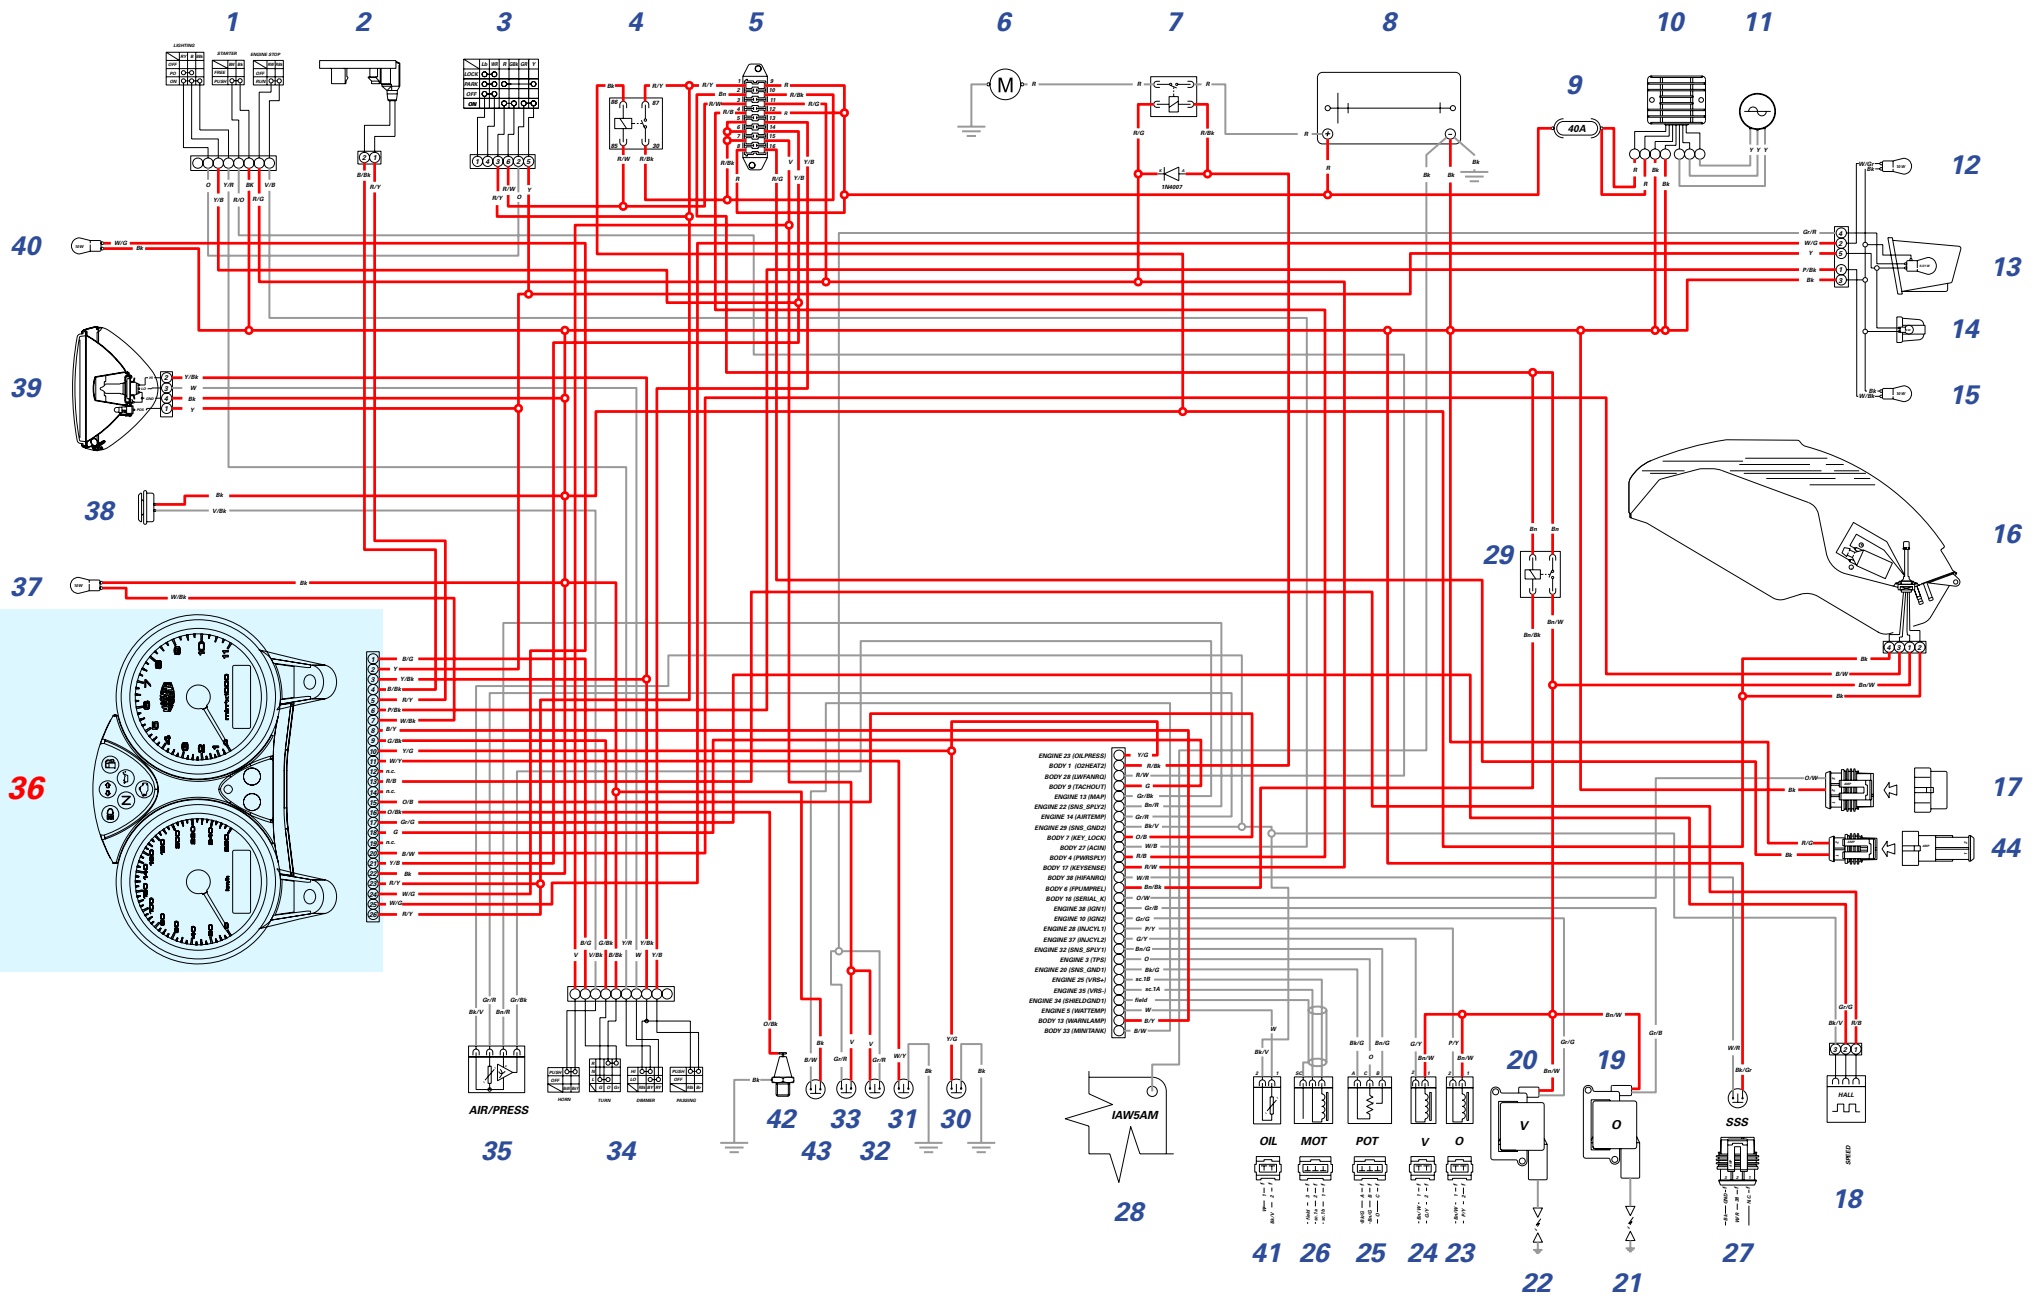

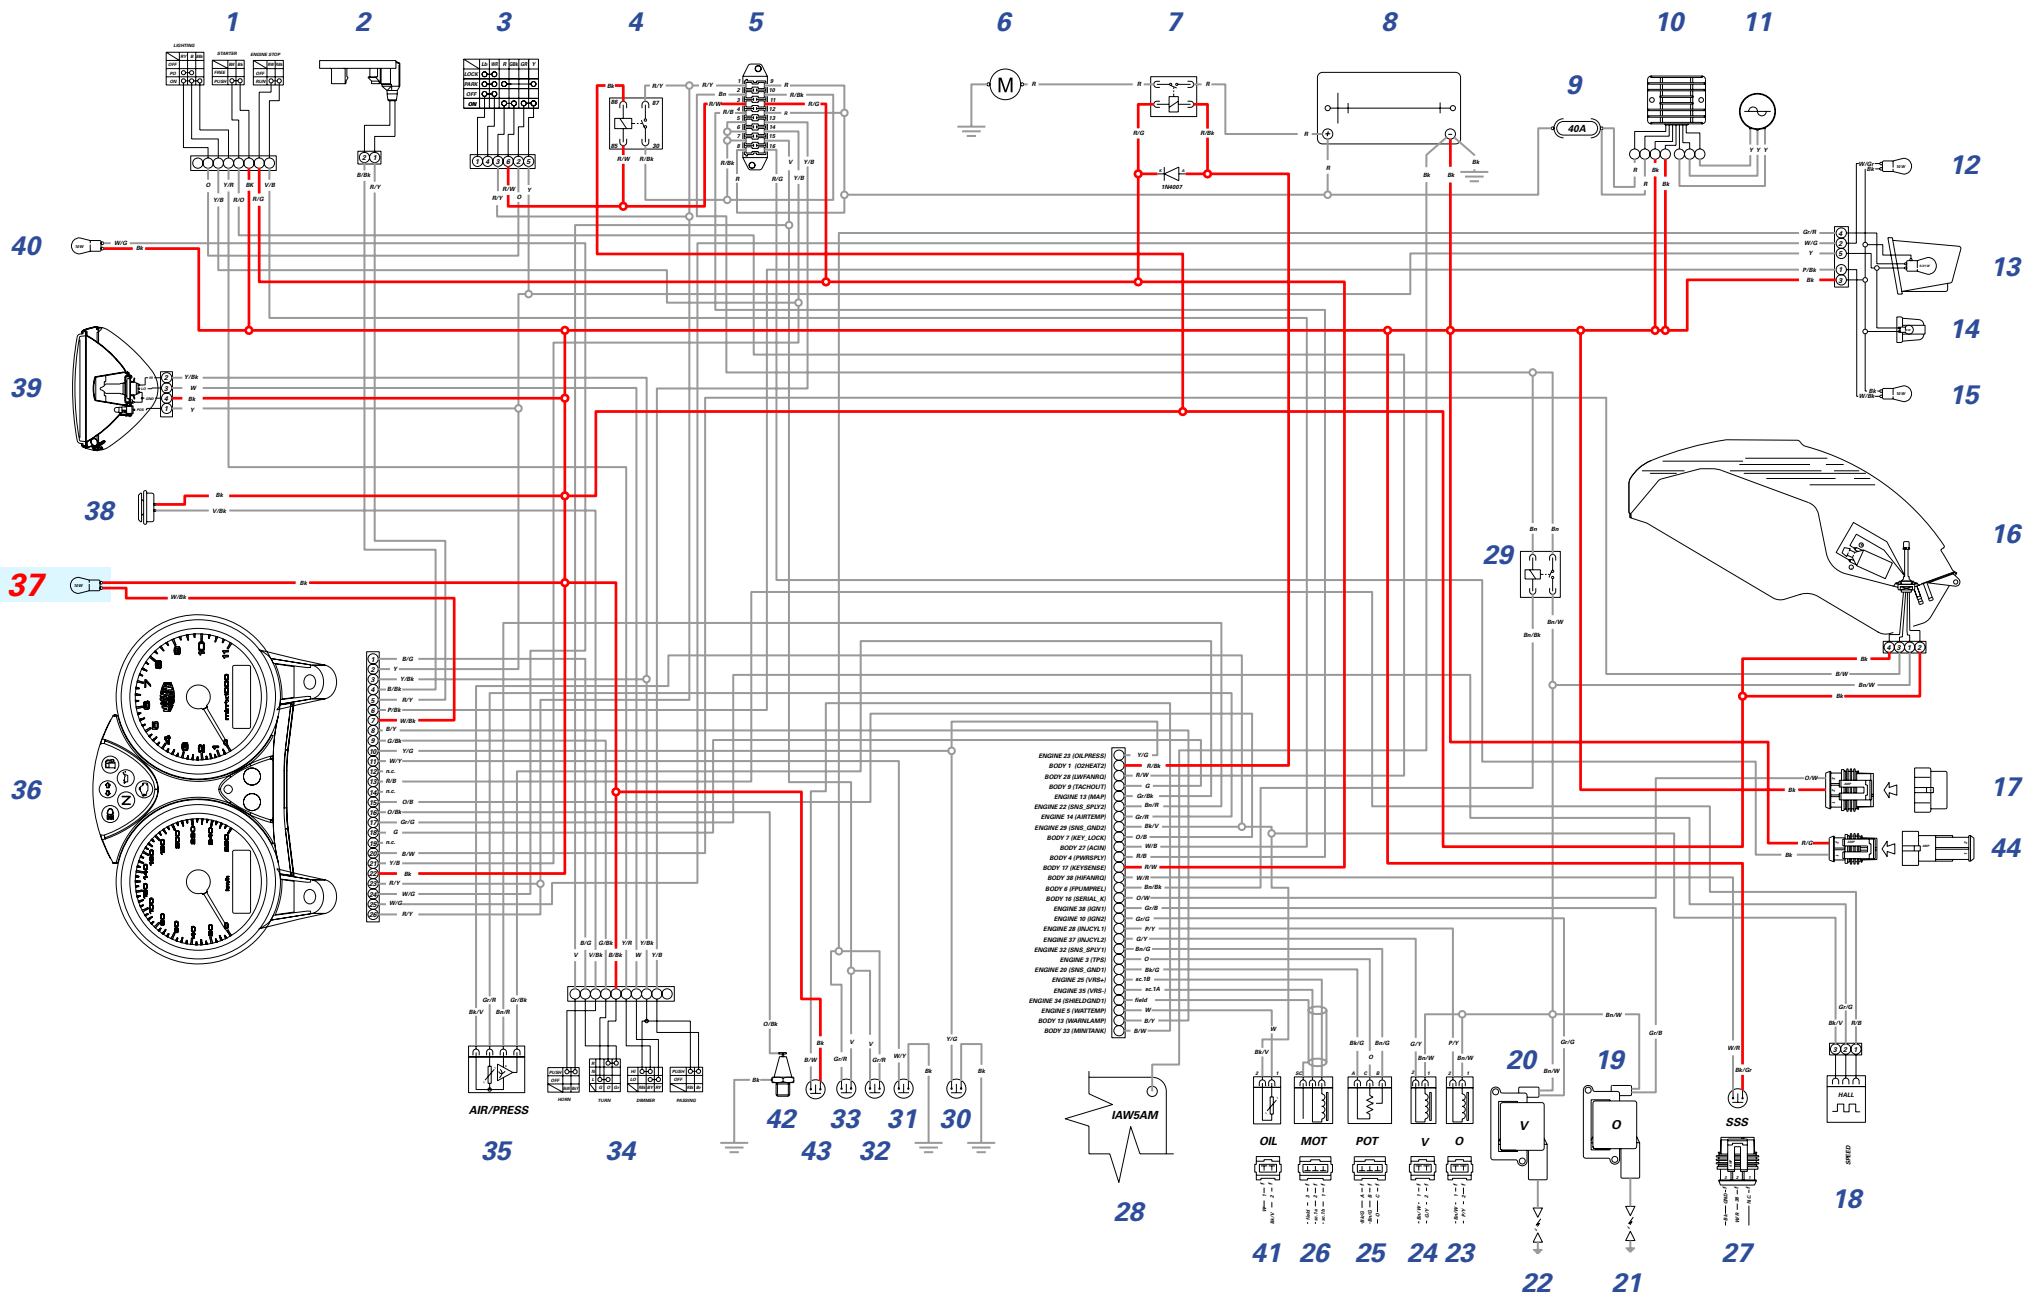

1

2

3

4

5

6

7

8

10

11

12

13

14

15

16

17

44

40

39

38

37

36

Y  
Y/B  
B/B  
P/B  
B/Y  
W/B  
G/B  
W/Y  
A/C  
B/B  
A/C  
O/B  
O/V  
A/C  
G  
B/W  
B  
B/Y  
B/T  
W/C  
W/C  
B/Y

AIR/PRESS

35

34

O/B

42

V

43

G/B

33

W/Y

31


B

32

W/C

30

ENGINE 23 (OILPRESS)  
BODY 1 (IGNITION)  
BODY 23 (S/WARNING)  
BODY 5 (TRACHOUT)  
ENGINE 13 (JAMP)  
ENGINE 21 (SING. SW/PS)  
ENGINE 14 (AIRTEMP)  
ENGINE 29 (SING. SENS)  
BODY 2 (KEY LOCK)  
BODY 27 (ACDM)  
BODY 4 (P/SENSE)  
BODY 17 (REVERSE)  
BODY 26 (INWARNING)  
BODY 4 (S/P/SENSE)  
BODY 18 (SERIAL A)  
ENGINE 38 (BODY)  
ENGINE 18 (BODY)  
ENGINE 28 (INACTYL)  
ENGINE 27 (INACTYL)  
ENGINE 21 (SING. SW/PS)  
ENGINE 3 (TPS)  
ENGINE 29 (SING. SENS)  
ENGINE 28 (V/RS)  
ENGINE 28 (V/RS)  
ENGINE 35 (WHEELS/STP)  
ENGINE 5 (WATERTEMP)  
BODY 13 (SWAR/LAMP)  
BODY 13 (SWAR/LAMP)



28

B/W

41

O

26

B/G

25

G/Y

24

P/Y

23

B/W

20

O/B

19

W/B

22

B/W

21

W/B

27

B/W

18

B/W

17

B/W

15

B/W

14

B/W

13

B/W

12

SSS

18

WALL

18

SPEED

18

B/W

17

B/W

17

B/W

17

B/W

17

B/W

17

B/W

17

B/W

17

B/W

17

B/W

17

B/W

17

B/W

17

B/W

17

B/W

17

B/W

17

B/W

17

B/W

17

B/W

17

B/W

17

B/W

17

B/W

17

B/W

17

B/W

17

B/W

17

B/W

17

B/W

17

B/W

17

